


SEARS
OWNER'S
MANUAL

MODEL NO.
944.609760

Caution:
Read and follow
all Safety Rules
and Instructions
Before Operating
This Equipment

EZ³

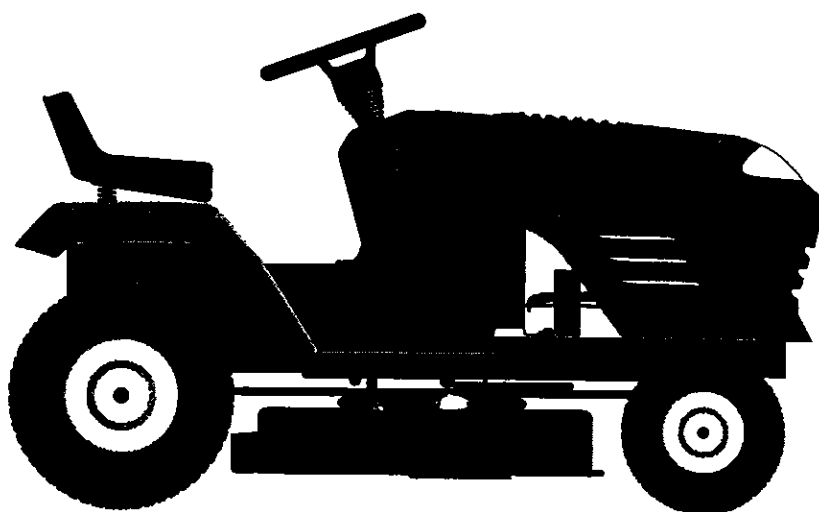

CRAFTSMAN[®]

16.0 HP
ELECTRIC START
42" MOWER
6 SPEED TRANSAXLE
LAWN TRACTOR

- Assembly
- Operation
- Customer Responsibilities
- Service and Adjustments
- Repair Parts



SAFETY RULES

Safe Operation Practices for Ride-On Mowers



IMPORTANT: THIS CUTTING MACHINE IS CAPABLE OF AMPUTATING HANDS AND FEET AND THROWING OBJECTS. FAILURE TO OBSERVE THE FOLLOWING SAFETY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.

I. GENERAL OPERATION

- Read, understand, and follow all instructions in the manual and on the machine before starting.
- Only allow responsible adults, who are familiar with the instructions, to operate the machine.
- Clear the area of objects such as rocks, toys, wire, etc., which could be picked up and thrown by the blade.
- Be sure the area is clear of other people before mowing. Stop machine if anyone enters the area.
- Never carry passengers.
- Do not mow in reverse unless absolutely necessary. Always look down and behind before and while backing.
- Be aware of the mower discharge direction and do not point it at anyone. Do not operate the mower without either the entire grass catcher or the guard in place.
- Slow down before turning.
- Never leave a running machine unattended. Always turn off blades, set parking brake, stop engine, and remove keys before dismounting.
- Turn off blades when not mowing.
- Stop engine before removing grass catcher or unclogging chute.
- Mow only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Watch for traffic when operating near or crossing roadways.
- Use extra care when loading or unloading the machine into a trailer or truck.

II. SLOPE OPERATION

Slopes are a major factor related to loss-of-control and tipover accidents, which can result in severe injury or death. All slopes require extra caution. If you cannot back up the slope or if you feel uneasy on it, do not mow it.

DO:

- Mow up and down slopes, not across.
- Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Uneven terrain could overturn the machine. *Tall grass can hide obstacles.*
- Use slow speed. Choose a low gear so that you will not have to stop or shift while on the slope.
- Follow the manufacturer's recommendations for wheel weights or counterweights to improve stability.
- Use extra care with grass catchers or other attachments. These can change the stability of the machine.
- Keep all movement on the slopes *slow* and *gradual*. Do not make sudden changes in speed or direction.
- Avoid starting or stopping on a slope. If tires lose traction, disengage the blades and proceed slowly *straight* down the slope.

DO NOT:

- *Do not* turn on slopes unless necessary, and then, turn slowly and gradually downhill, if possible.
- *Do not* mow near drop-offs, ditches, or embankments. The mower could suddenly turn over if a wheel is over the edge of a cliff or ditch, or if an edge caves in.
- *Do not* mow on wet grass. Reduced traction could cause sliding.
- *Do not* try to stabilize the machine by putting your foot on the ground.
- *Do not* use grass catcher on steep slopes.

III. CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. *Never* assume that children will remain where you last saw them.

- Keep children out of the mowing area and under the watchful care of another responsible adult.
- Be alert and turn machine off if children enter the area.
- Before and when backing, look behind and *down* for small children.
- Never carry children. They may fall off and be seriously injured or interfere with safe machine operation.
- Never allow children to operate the machine.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

IV. SERVICE

- Use extra care in handling gasoline and other fuels. They are flammable and vapors are explosive.
 - Use only an approved container.
 - Never remove gas cap or add fuel with the engine running. Allow engine to cool before refueling. Do not smoke.
 - Never refuel the machine indoors.
 - Never store the machine or fuel container inside where there is an open flame, such as a water heater.
- Never run a machine inside a closed area.
- Keep nuts and bolts, especially blade attachment bolts, tight and keep equipment in good condition.
- Never tamper with safety devices. Check their proper operation regularly.
- Keep machine free of grass, leaves, or other debris build-up. Clean oil or fuel spillage. Allow machine to cool before storing.
- Stop and inspect the equipment if you strike an object. Repair, if necessary, before restarting.
- Never make adjustments or repairs with the engine running.
- Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.
- Mower blades are sharp and can cut. Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- Check brake operation frequently. Adjust and service as required.



Look for this symbol to point out important safety precautions. It means CAUTION!!! BECOME ALERT!!! YOUR SAFETY IS INVOLVED.



CAUTION: Always disconnect spark plug wire and place wire where it cannot contact spark plug in order to prevent accidental starting when setting up, transporting, adjusting or making repairs.

CONGRATULATIONS on your purchase of a Sears Tractor. It has been designed, engineered and manufactured to give you the best possible dependability and performance.

Should you experience any problem you cannot easily remedy, please contact your nearest Sears Authorized Service Center/Department. We have competent, well-trained technicians and the proper tools to service or repair this tractor.

Please read and retain this manual. The instructions will enable you to assemble and maintain your tractor properly. Always observe the "SAFETY RULES".

| | |
|--|------------|
| MODEL | |
| NUMBER | 944.609760 |
| SERIAL | |
| NUMBER | |
| DATE OF PURCHASE | |
| THE MODEL AND SERIAL NUMBERS WILL BE FOUND ON A PLATE UNDER THE SEAT. | |
| YOU SHOULD RECORD BOTH SERIAL NUMBER AND DATE OF PURCHASE AND KEEP IN A SAFE PLACE FOR FUTURE REFERENCE. | |

MAINTENANCE AGREEMENT

A Sears Maintenance Agreement is available on this product. Contact your nearest Sears store for details.

CUSTOMER RESPONSIBILITIES

- Read and observe the safety rules.
- Follow a regular schedule in maintaining, caring for and using your tractor.
- Follow the instructions under "Customer Responsibilities" and "Storage" sections of this owner's manual.

PRODUCT SPECIFICATIONS

| | |
|-----------------------------|--|
| HORSEPOWER: | 16.0 |
| GASOLINE CAPACITY AND TYPE: | 1.25 GALLONS UNLEADED REGULAR |
| OIL TYPE (API-SF/SG/SH): | SAE 10W30 (above 32°F) SAE 5W-30 (below 32°F) |
| OIL CAPACITY: | W/FILTER: 4.0 PINTS W/O FILTER: 3.5 PINTS |
| SPARK PLUG: (GAP: .040") | CHAMPION RC12YC |
| GROUND SPEED (MPH): | FORWARD: 1st 1.2 2nd 1.5 3rd 2.3 4th 3.5 5th 4.8 6th 5.4 REVERSE: 1.5 |
| TIRE PRESSURE: | FRONT: 14 PSI REAR: 10 PSI |
| CHARGING SYSTEM: | 15 AMPS @ 3600 RPM |
| BATTERY: | AMP/HR: 30 MIN. CCA: 240 CASE SIZE: U1R |
| BLADE BOLT TORQUE: | 27-35 FT. LBS. |

WARNING: This tractor is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator.

A spark arrester for the muffler is available through your nearest Sears Authorized Service Centre/Department (See REPAIR PARTS section of this manual).

TABLE OF CONTENTS

| | | | |
|---------------------------------|----------|-------------------------------|------------|
| SAFETY RULES | 2 | SERVICE AND ADJUSTMENTS | 18-23 |
| PRODUCT SPECIFICATIONS | 3 | STORAGE | 24 |
| CUSTOMER RESPONSIBILITIES | 3, 14-17 | TROUBLESHOOTING | 25-26 |
| WARRANTY | 4 | REPAIR PARTS - TRACTOR | 28-43 |
| ASSEMBLY | 6-8 | REPAIR PARTS - ENGINE | 44-53 |
| OPERATION | 9-13 | PARTS ORDERING/SERVICE | BACK COVER |
| MAINTENANCE SCHEDULE | 14 | | |

LIMITED TWO (2) YEAR WARRANTY ON CRAFTSMAN TRACTOR (RIDING EQUIPMENT)

For two (2) years from date of purchase Sears Canada, Inc. will repair or replace at Sears option free of charge parts which are defective as a result of material or workmanship.

FULL ONE (1) YEAR WARRANTY ON BATTERY

For one (1) year from date of purchase, if any battery included with this riding equipment proves defective in material or workmanship and our testing determines the battery will not hold a charge, Sears will replace the battery at no charge.

COMMERCIAL OR RENTAL USE

Warranty on Riding Equipment used for commercial or rental purposes is limited to ninety (90) days.

This Warranty does **NOT** cover:

1. Pre-delivery set-up.
2. Tire replacement or repair caused by punctures from outside objects (such as nails, thorns, stumps, or glass).
3. Expendable items which become worn during normal use, such as blades, spark plug, air cleaners and belts.
4. Repairs necessary because of operator abuse or negligence, including damaged jackshaft or mandrel and the failure to operate and maintain the equipment according to the instructions contained in the Owner's Manual.
5. In Home service.





Warranty service is available by returning the Craftsman Riding Equipment to the nearest Sears Service Centre/Department in Canada. This warranty applies only while this product is in use in Canada.

This warranty is in addition to any statutory warranty and does not exclude or limit legal rights you may have but shall run concurrently with applicable provincial legislation. Furthermore, some provinces do NOT allow limitation on how long an implied warranty will last so the above limitations may not apply to you.


SEARS CANADA, INC., TORONTO, ONTARIO M5B 2B8

CONTENTS OF HARDWARE PACK


Parts Bag contents shown full size

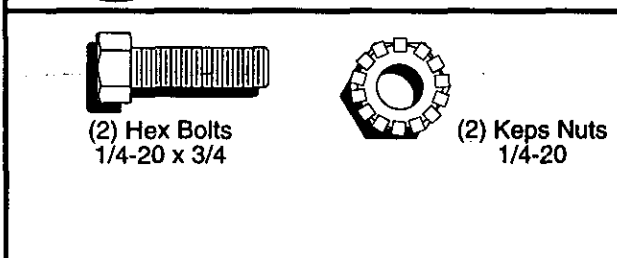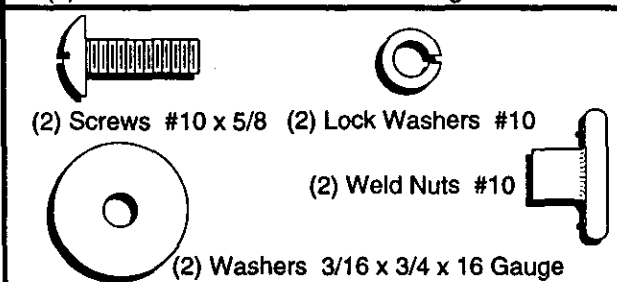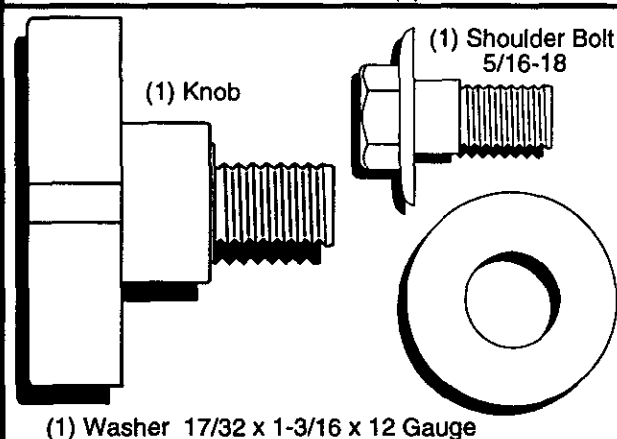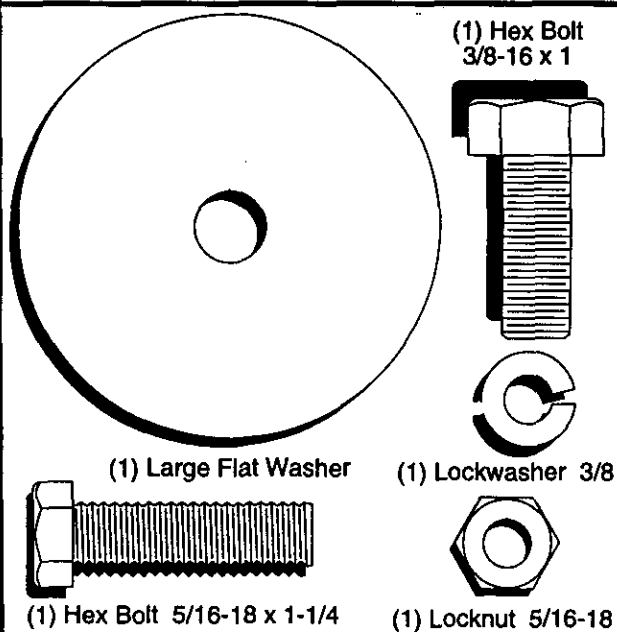

Parts packed separately in carton

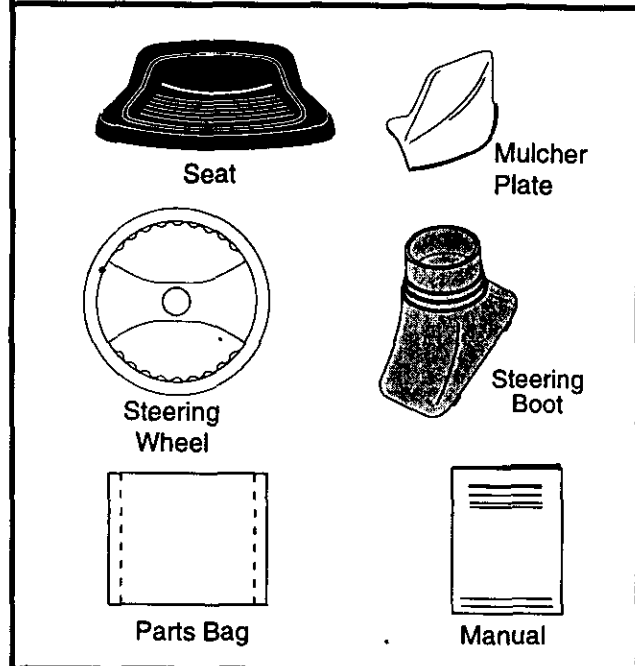

Parts bag contents not shown full size

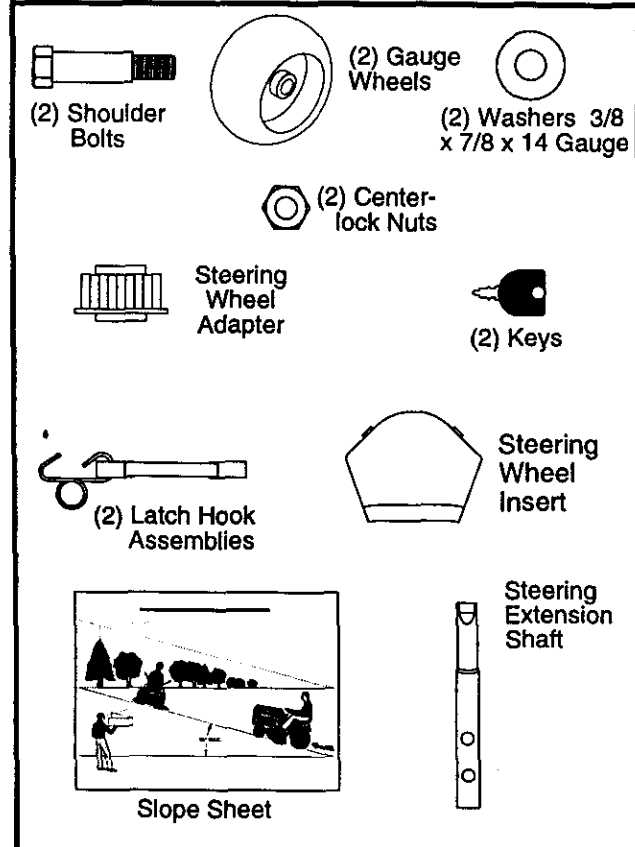

ASSEMBLY

Your new tractor has been assembled at the factory with exception of those parts left unassembled for shipping purposes. To ensure safe and proper operation of your tractor, all parts and hardware you assemble must be tightened securely. Use the correct tools as necessary to insure proper tightness.

TOOLS REQUIRED FOR ASSEMBLY

A socket wrench set will make assembly easier. Standard wrench sizes are listed.

- (1) Phillips screwdriver Utility knife
- (2) 7/16" wrenches Tire pressure gauge
- (2) 1/2" wrenches (1) 3/4" socket with drive ratchet
- (1) 9/16" wrench

When right and left hand is mentioned in this manual, it means when you are in the operating position (seated behind the steering wheel).

TO REMOVE TRACTOR FROM CARTON UNPACK CARTON

- Remove all accessible loose parts and parts cartons from carton (See page 6).
- Cut, from top to bottom, along lines on all four corners of carton, and lay panels flat.
- Check for any additional loose parts or cartons and remove.

BEFORE ROLLING TRACTOR OFF SKID

ATTACH STEERING WHEEL (See Fig. 1)

ASSEMBLE EXTENSION SHAFT AND BOOT

- Slide extension shaft onto lower steering shaft. Align mounting holes in extension and lower shafts and install 5/16 hex bolt and locknut. Tighten securely.

IMPORTANT: TIGHTEN BOLT AND NUT SECURELY TO 18-22 FT. LBS TORQUE.

- Place tabs of steering boot over tab slots in dash and push down to secure.

INSTALL STEERING WHEEL

- Position front wheels of the tractor so they are pointing straight forward.
- Slide steering wheel adapter onto steering shaft extension.
- Position steering wheel so cross bars are horizontal (left to right) and slide inside boot and onto adapter.
- Assemble large flat washer, 3/8 lock washer, 3/8 hex bolt and tighten securely.
- Snap steering wheel insert into center of steering wheel.
- Remove protective materials from tractor hood and grill.

IMPORTANT: CHECK FOR AND REMOVE ANY STAPLES IN SKID THAT MAY PUNCTURE TIRES WHERE TRACTOR IS TO ROLL OFF SKID.

TO ROLL TRACTOR OFF SKID (See Operation section, page 10, for location and function of controls)

- Press lift lever plunger and raise attachment lift lever to its highest position.
- Release parking brake by depressing clutch/brake pedal.
- Place gearshift lever in neutral (N) position.
- Roll tractor forward off skid.
- Remove banding holding discharge guard up against tractor.

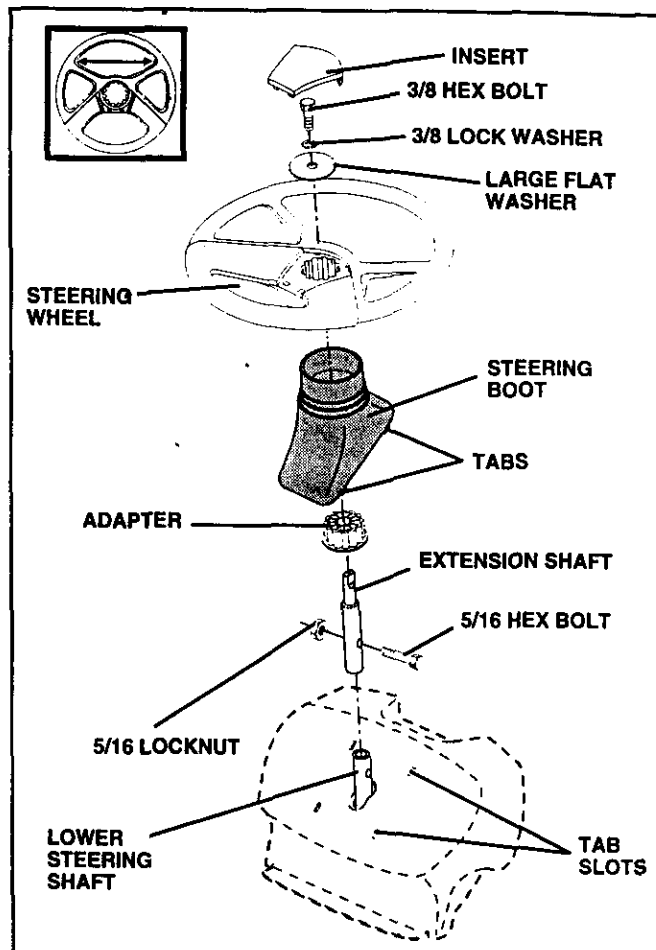


FIG. 1

HOW TO SET UP YOUR TRACTOR

CONNECT BATTERY (See Figs. 2 and 3)



CAUTION: Do not short battery terminals by allowing a wrench or any other object to contact both terminals at the same time. Before connecting battery, remove metal bracelets, wristwatch bands, rings, etc.

Positive terminal must be connected first to prevent sparking from accidental grounding.

- Remove cardboard packing from seat pan and lift seat pan to raised position.
- Open battery box door and remove protective plastic.
- Remove terminal protective caps and discard.
- If this battery is put into service after month and year indicated on label (label located between terminals) charge battery for minimum of one hour at 6-10 amps.
- First connect RED battery cable to positive (+) terminal with hex bolt and keps nut as shown. Tighten securely.

ASSEMBLY

- Connect BLACK grounding cable to negative (-) terminal with remaining hex bolt and keps nut. Tighten securely.
- Close battery box door.

Open battery box door for:

- Inspection for secure connections (to tighten hardware).
- Inspection for corrosion.
- Testing battery.
- Jumping (if required).
- Periodic charging.

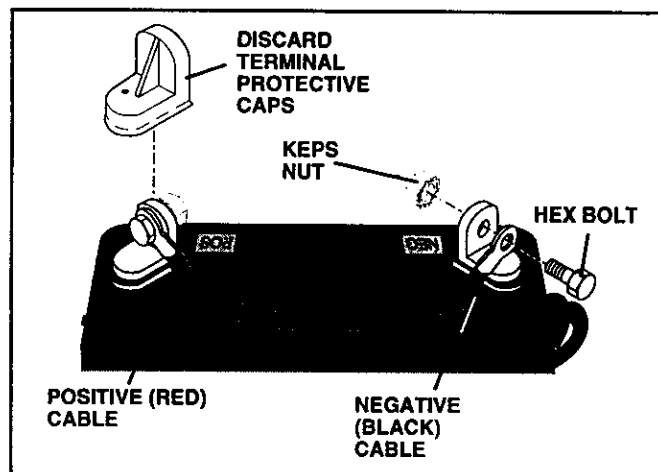


FIG. 2

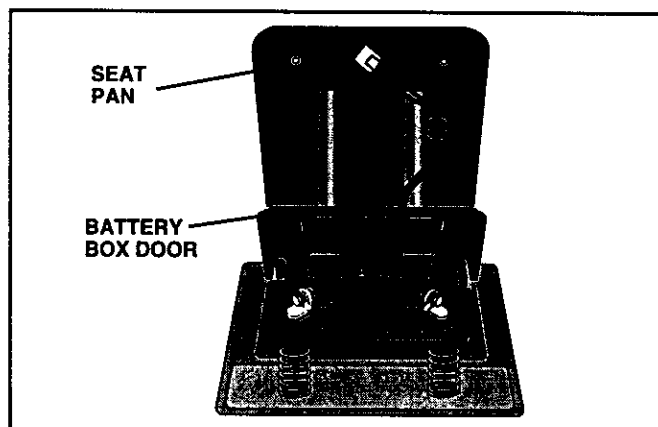


FIG. 3

INSTALL SEAT (See Fig. 4)

Adjust seat before tightening adjustment knob.

- Remove cardboard packing on seat pan.
- Place seat on seat pan and assemble shoulder bolt. Tighten shoulder bolt securely.
- Assemble adjustment knob and flat washer loosely. Do not tighten.
- Lower seat into operating position and sit on seat.
- Slide seat until a comfortable position is reached which allows you to press clutch/brake pedal all the way down.
- Get off seat without moving its adjusted position.
- Raise seat and tighten adjustment knob securely.

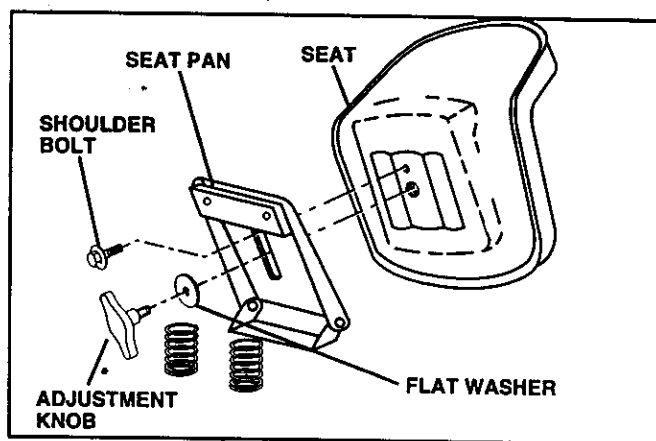


FIG. 4

ASSEMBLE GAUGE WHEELS TO MOWER DECK (See Fig. 5)

The gauge wheels are designed to keep the mower deck in proper position when operating mower. Be sure they are properly adjusted to ensure optimum mower performance.

- Assemble gauge wheels with tractor on a flat level surface.
- Adjust mower to desired cutting height (See "TO ADJUST MOWER CUTTING HEIGHT" in the Operation section of this manual).
- With mower in desired height of cut position, gauge wheels should be assembled so they are slightly off the ground. Install gauge wheel in appropriate hole with shoulder bolt, 3/8 washer, and 3/8-16 locknut and tighten securely.
- Repeat for opposite side installing gauge wheel in same adjustment hole.

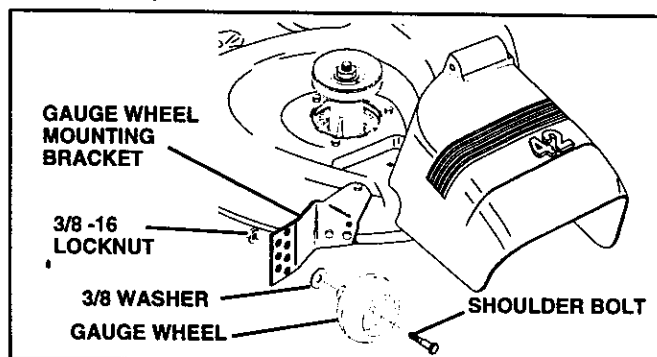


FIG. 5

CHECK TIRE PRESSURE

The tires on your tractor were overinflated at the factory for shipping purposes. Correct tire pressure is important for best cutting performance.

- Reduce tire pressure to PSI shown in "PRODUCT SPECIFICATIONS" on page 3 of this manual.

CHECK DECK LEVELNESS

For best cutting results, mower housing should be properly leveled. See "TO LEVEL MOWER HOUSING" in the Service and Adjustments section of this manual.

ASSEMBLY

CHECK FOR PROPER POSITION OF ALL BELTS

See the figures that are shown for replacing motion and mower blade drive belts in the Service and Adjustments section of this manual. Verify that the belts are routed correctly.

CHECK BRAKE SYSTEM

After you learn how to operate your tractor, check to see that the brake is properly adjusted. See "TO ADJUST BRAKE" in the Service and Adjustments section of this manual.

INSTALL MULCHER PLATE (See Figs. 6 & 7)

- Install two latch hooks to mulcher plate using screw, washer, lock washer, and weld nut as shown.

NOTE: Pre-assemble weld nut to latch hook by inserting weld nut from the top with hook pointing down.

- Tighten hardware securely.
- Raise and hold deflector shield in upright position.
- Place front of mulcher plate over front of mower deck opening and slide into place, as shown.
- Hook front latch into hole on front of mower deck.
- Hook rear latch into hole on back of mower deck.



CAUTION: Do not remove discharge guard from mower. Raise and hold guard when attaching mulcher plate and allow it to rest on plate while in operation.

TO CONVERT TO BAGGING OR DISCHARGING

Simply remove mulcher plate and store in a safe place. Your mower is now ready for discharging or installation of optional grass catcher accessory.

NOTE: It is not necessary to change blades. The mulcher blades are designed for discharging and bagging also.

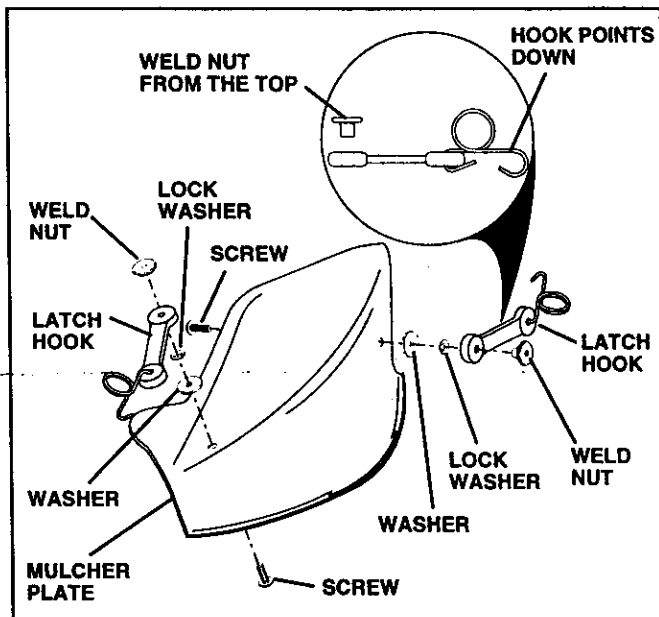


FIG. 6

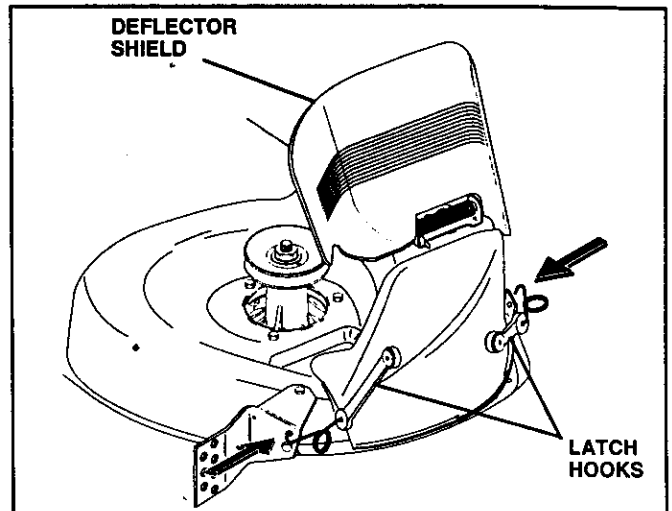


FIG. 7

✓ CHECKLIST

BEFORE YOU OPERATE AND ENJOY YOUR NEW TRACTOR, WE WISH TO ASSURE THAT YOU RECEIVE THE BEST PERFORMANCE AND SATISFACTION FROM THIS QUALITY PRODUCT.

PLEASE REVIEW THE FOLLOWING CHECKLIST:

- ✓ All assembly instructions have been completed.
- ✓ No remaining loose parts in carton.
- ✓ Battery is properly prepared and charged. (Minimum 1 hour at 6 amps).
- ✓ Seat is adjusted comfortably and tightened securely.
- ✓ All tires are properly inflated. (For shipping purposes, the tires were overinflated at the factory).
- ✓ Be sure mower deck is properly leveled side-to-side/ front-to-rear for best cutting results. (Tires must be properly inflated for leveling).
- ✓ Check mower and drive belts. Be sure they are routed properly around pulleys and inside all belt keepers.
- ✓ Check wiring. See that all connections are still secure and wires are properly clamped.

WHILE LEARNING HOW TO USE YOUR TRACTOR, PAY EXTRA ATTENTION TO THE FOLLOWING IMPORTANT ITEMS:

- ✓ Engine oil is at proper level.
- ✓ Fuel tank is filled with fresh, clean, regular unleaded gasoline.
- ✓ Become familiar with all controls - their location and function. Operate them before you start the engine.
- ✓ Be sure brake system is in safe operating condition.

OPERATION

These symbols may appear on your tractor or in literature supplied with the product. Learn and understand their meaning.



BATTERY



CAUTION OR
WARNING



REVERSE



FORWARD



FAST



SLOW




ENGINE ON



ENGINE OFF



OIL PRESSURE

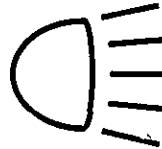

LIGHTS ON



OVER TEMP
LIGHT




MOWER LIFT



FUEL



CHOKE

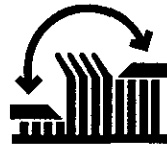

MOWER HEIGHT



PARKING BRAKE
LOCKED



UNLOCKED



MOWER LIFT



ATTACHMENT
CLUTCH ENGAGED



REVERSE



NEUTRAL



HIGH



LOW



PARKING BRAKE



IGNITION



ATTACHMENT
CLUTCH DISENGAGED



KEEP AREA CLEAR




SLOPE HAZARDS

(SEE SAFETY RULES SECTION)



DANGER, KEEP HANDS AND FEET AWAY

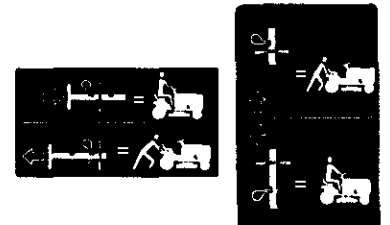

FREE WHEEL
(Automatic Models only)

OPERATION

KNOW YOUR TRACTOR

READ THIS OWNER'S MANUAL AND SAFETY RULES BEFORE OPERATING YOUR TRACTOR

Compare the illustrations with your tractor to familiarize yourself with the locations of various controls and adjustments. Save this manual for future reference.

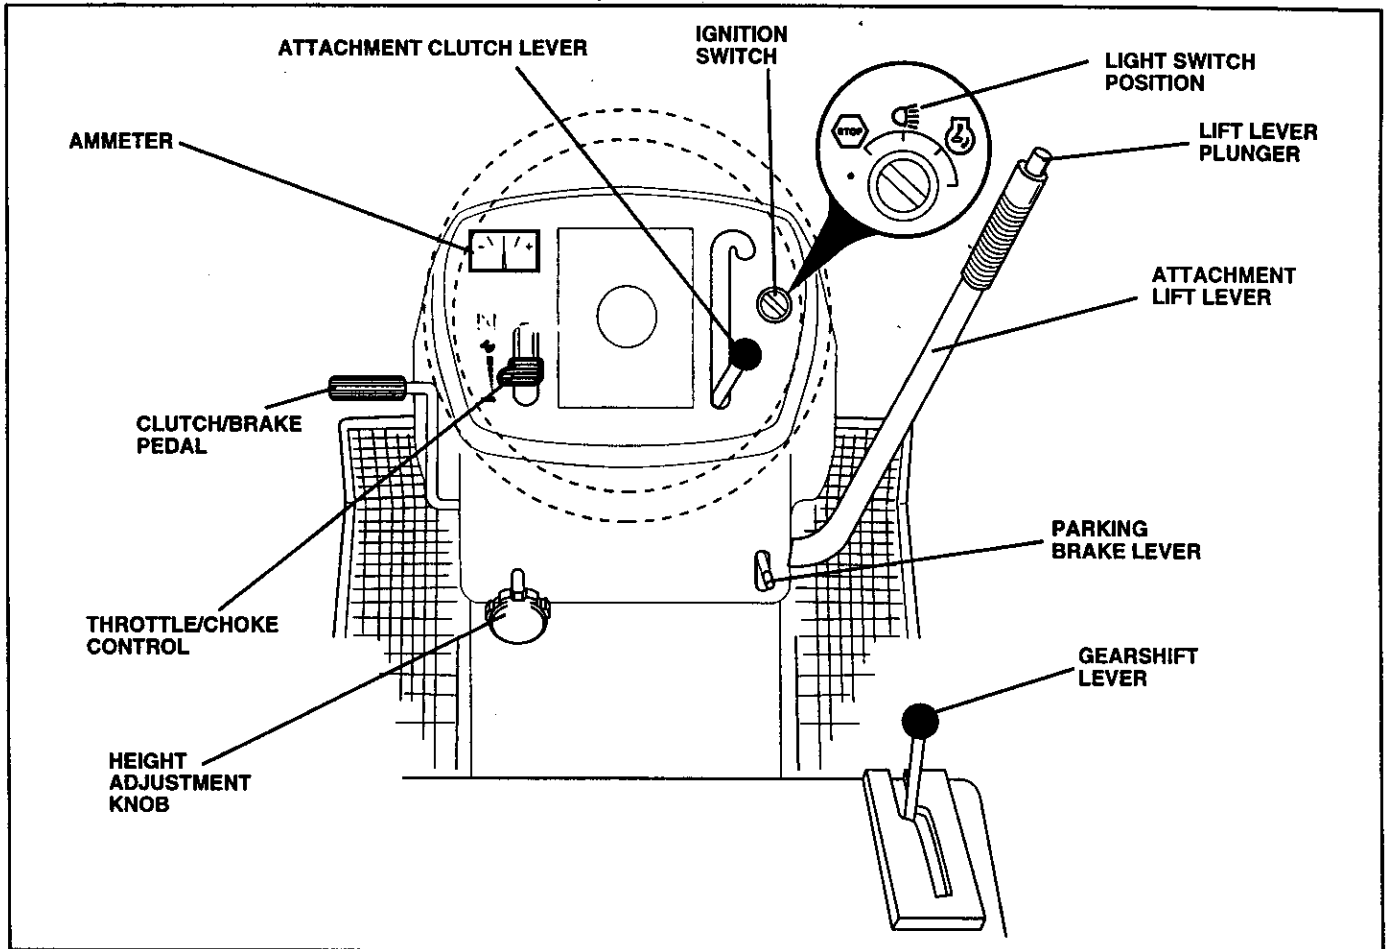


FIG. 8

Our tractors conform to the safety standards of the American National Standards Institute.

THROTTLE/CHOKE CONTROL: Used for starting and controlling engine speed.

CLUTCH/BRAKE PEDAL: Used for clutching and braking the tractor and starting the engine.

HEIGHT ADJUSTMENT KNOB: Used to adjust the mower cutting height.

IGNITION SWITCH: Used for starting and stopping the engine.

LIGHT SWITCH: Turns the headlights on and off.

AMMETER: Indicates charging (+) or discharging (-) of battery.

ATTACHMENT CLUTCH LEVER: Used to engage the mower blades, or other attachments mounted to your tractor.

LIFT LEVER PLUNGER: Used to release attachment lift lever when changing its position.

ATTACHMENT LIFT LEVER: Used to raise and lower the mower deck or other attachments mounted to your tractor.

PARKING BRAKE LEVER: Locks Clutch/Brake Pedal into the brake position.

GEARSHIFT LEVER: Selects the speed and direction of tractor.

OPERATION



The operation of any tractor can result in foreign objects thrown into the eyes, which can result in severe eye damage. Always wear safety glasses or eye shields while operating your tractor or performing any adjustments or repairs. We recommend a wide vision safety mask over spectacles or standard safety glasses.

HOW TO USE YOUR TRACTOR

TO SET PARKING BRAKE (See Fig.9)

Your tractor is equipped with an operator presence sensing switch. When engine is running, any attempt by the operator to leave the seat without first setting the parking brake will shut off the engine.

- Depress clutch/brake pedal into full "BRAKE" position and hold.
- Place parking brake lever in "ENGAGED" position and release pressure from clutch/brake pedal. Pedal should remain in "BRAKE" position. Make sure parking brake will hold tractor secure.

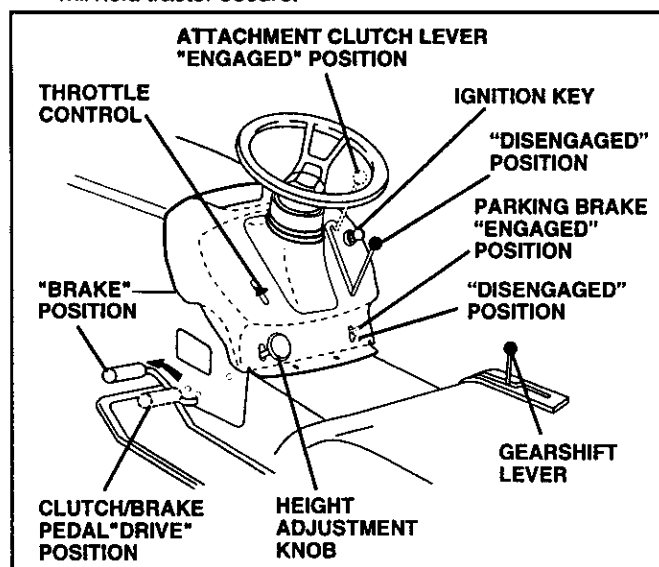


FIG. 9

STOPPING (See Fig. 9)

MOWER BLADES -

- To stop mower blades, move attachment clutch lever to "DISENGAGED" position.

GROUND DRIVE -

- To stop ground drive, depress clutch/brake pedal into full "BRAKE" position.
- Move gearshift lever to neutral (N) position.

ENGINE -

- Move throttle control to slow position.

NOTE: Failure to move throttle control to slow position and allowing engine to idle before stopping may cause engine to "backfire".

- Turn ignition key to "OFF" position and remove key. Always remove key when leaving tractor to prevent unauthorized use.
- Never use choke to stop engine.

IMPORTANT: LEAVING THE IGNITION SWITCH IN ANY POSITION OTHER THAN "OFF" WILL CAUSE THE BATTERY TO BE DISCHARGED, (DEAD).

NOTE: Under certain conditions when tractor is standing idle with the engine running, hot engine exhaust gases may cause "browning" of grass. To eliminate this possibility, always stop engine when stopping tractor on grass areas.



CAUTION: Always stop tractor completely, as described above, before leaving the operator's position; to empty grass catcher, etc.

TO USE THROTTLE CONTROL (See Fig. 9)

Always operate engine at full throttle.

- Operating engine at less than full throttle reduces the battery charging rate.
- Full throttle offers the best bagging and mower performance.

TO MOVE FORWARD AND BACKWARD (See Fig. 9)

The direction and speed of movement is controlled by the gearshift lever.

- Start tractor with clutch/brake pedal depressed and gearshift lever in neutral (N) position.
- Move gearshift lever to desired position.
- Slowly release clutch/brake pedal to start movement.

IMPORTANT: BRING TRACTOR TO A COMPLETE STOP BEFORE SHIFTING OR CHANGING GEARS. FAILURE TO DO SO WILL SHORTEN THE USEFUL LIFE OF YOUR TRANSAXLE.

TO ADJUST MOWER CUTTING HEIGHT (See Fig. 9)

The cutting height is controlled by turning the height adjustment knob in desired direction.

- Turn knob clockwise (↻) to raise cutting height.
- Turn knob counterclockwise (↺) to lower cutting height.

The cutting height range is approximately 1-1/2" to 4". The heights are measured from the ground to the blade tip with the engine not running. These heights are approximate and may vary depending upon soil conditions, height of grass and types of grass being mowed.

- The average lawn should be cut to approximately 2-1/2 inches during the cool season and to over 3 inches during hot months. For healthier and better looking lawns, mow often and after moderate growth.
- For best cutting performance, grass over 6 inches in height should be mowed twice. Make the first cut relatively high; the second to desired height.

OPERATION

TO OPERATE MOWER (See Fig. 10)

Your tractor is equipped with an operator presence sensing switch. Any attempt by the operator to leave the seat with the engine running and the attachment clutch engaged will shut off the engine.

- Select desired height of cut.
- Lower mower with attachment lift control.
- Start mower blades by engaging attachment clutch control.
- TO STOP MOWER BLADES - disengage attachment clutch control.



CAUTION: Do not operate the mower without either the entire grass catcher, on mowers so equipped, or the discharge guard in place.

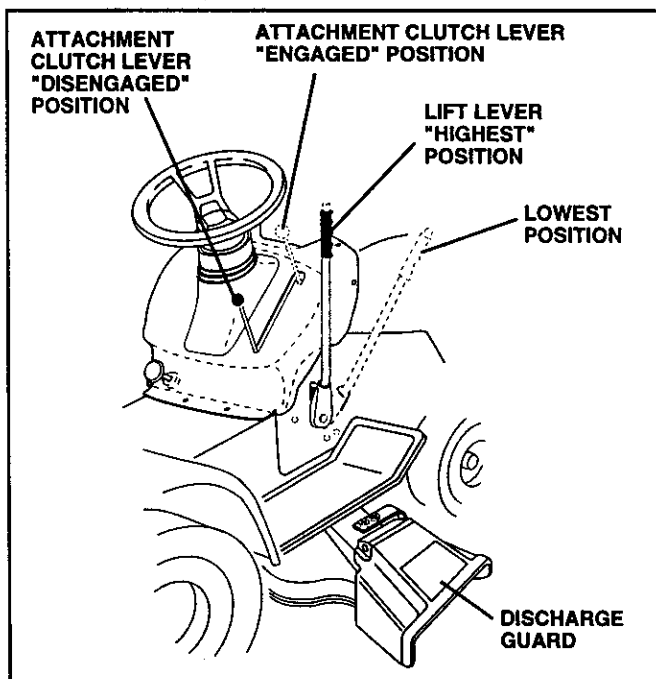


FIG. 10

TO OPERATE ON HILLS



CAUTION: Do not drive up or down hills with slopes greater than 15° and do not drive across any slope.

- Choose the slowest speed before starting up or down hills.
- Avoid stopping or changing speed on hills.
- If slowing is necessary, move throttle control lever to slower position.
- If stopping is absolutely necessary, push clutch/brake pedal quickly to brake position and engage parking brake.
- Move gearshift lever to 1st gear. Be sure you have allowed room for tractor to roll slightly as you restart movement.

- To restart movement, slowly release parking brake and clutch/brake pedal.
- Make all turns slowly.

TO TRANSPORT

- Raise attachment lift to highest position with attachment lift control.
- When pushing or towing your tractor, be sure gearshift lever is in neutral (N) position.
- Do not push or tow tractor at more than five (5) MPH.

NOTE: To protect hood from damage when transporting your tractor on a truck or a trailer, be sure hood is closed and secured to tractor. Use an appropriate means of tying hood to tractor (rope, cord, etc.).

BEFORE STARTING THE ENGINE

CHECK ENGINE OIL LEVEL (See Fig. 16)

- The engine in your tractor has been shipped, from the factory, already filled with summer weight oil.
- Check engine oil with tractor on level ground.
- Unthread and remove oil fill cap/dipstick; wipe oil off. Reinsert the dipstick into the tube and rest oil fill cap on the tube. Do not thread the cap onto the tube. Remove and read oil level. If necessary, add oil until "FULL" mark on dipstick is reached. Do not overfill.
- For cold weather operation you should change oil for easier starting (See "OIL VISCOSITY CHART" in the Customer Responsibilities section of this manual).
- To change engine oil, see the Customer Responsibilities section in this manual.

ADD GASOLINE

- Fill fuel tank. Use fresh, clean, regular unleaded gasoline with a minimum of 87 octane. (Use of leaded gasoline will increase carbon and lead oxide deposits and reduce valve life). Do not mix oil with gasoline. Purchase fuel in quantities that can be used within 30 days to assure fuel freshness.

IMPORTANT: WHEN OPERATING IN TEMPERATURES BELOW 32°F (0°C), USE FRESH, CLEAN WINTER GRADE GASOLINE TO HELP INSURE GOOD COLD WEATHER STARTING.

WARNING: Experience indicates that alcohol blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. Drain the gas tank, start the engine and let it run until the fuel lines and carburetor are empty. Use fresh fuel next season. See Storage Instructions for additional information. Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.



CAUTION: Fill to bottom of gas tank filler neck. Do not overfill. Wipe off any spilled oil or fuel. Do not store, spill or use gasoline near an open flame.

OPERATION

TO START ENGINE (See Fig. 9)

When starting the engine for the first time or if the engine has run out of fuel, it will take extra cranking time to move fuel from the tank to the engine.

- Sit on seat in operating position, depress clutch/brake pedal and set parking brake.
- Place gear shift lever in neutral (N) position.
- Move attachment clutch to "DISENGAGED" position.
- Move throttle control to choke position.

NOTE: Before starting, read the warm and cold starting procedures below.

- Insert key into ignition and turn key clockwise to "START" position and release key as soon as engine starts. Do not run starter continuously for more than fifteen seconds per minute. If the engine does not start after several attempts, move throttle control to fast position, wait a few minutes and try again. If engine still does not start, move the throttle control back to the choke position and retry.

WARM WEATHER STARTING (50° F and above)

- When engine starts, move the throttle control to the fast position.
- The attachments and ground drive can now be used. If the engine does not accept the load, restart the engine and allow it to warm up for one minute using the choke as described above.

COLD WEATHER STARTING (50° F and below)

- When engine starts, allow engine to run with the throttle control in the choke position until the engine runs roughly, then move throttle control to fast position. This may require an engine warm-up period from several seconds to several minutes, depending on the temperature.
- The attachments can also be used during the engine warm-up period.

NOTE: If at a high altitude (above 3000 feet) or in cold temperatures (below 32 F) the carburetor fuel mixture may need to be adjusted for best engine performance. See "TO ADJUST CARBURETOR" in the Service and Adjustments section of this manual.

MOWING TIPS

- Tire chains cannot be used when the mower housing is attached to tractor.
- Mower should be properly leveled for best mowing performance. See "TO LEVEL MOWER HOUSING" in the Service and Adjustments section of this manual.
- The left hand side of mower should be used for trimming.
- Drive so that clippings are discharged onto the area that has been cut. Have the cut area to the right of the machine. This will result in a more even distribution of clippings and more uniform cutting.
- When mowing large areas, start by turning to the right so that clippings will discharge away from shrubs, fences, driveways, etc. After one or two rounds, mow in the opposite direction making left hand turns until finished (See Fig. 11).

- If grass is extremely tall, it should be mowed twice to reduce load and possible fire hazard from dried clippings. Make first cut relatively high; the second to the desired height.
- Do not mow grass when it is wet. Wet grass will plug mower and leave undesirable clumps. Allow grass to dry before mowing.
- Always operate engine at full throttle when mowing to assure better mowing performance and proper discharge of material. Regulate ground speed by selecting a low enough gear to give the mower cutting performance as well as the quality of cut desired.
- When operating attachments, select a ground speed that will suit the terrain and give best performance of the attachment being used.

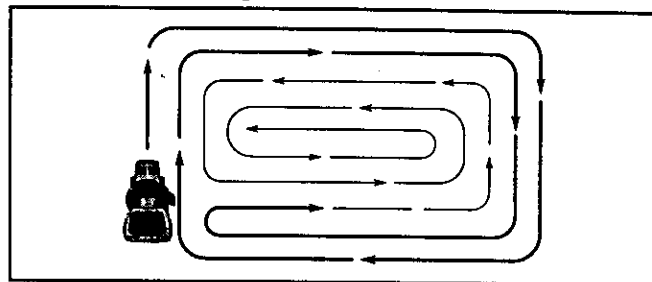


FIG. 11

MULCHING MOWING TIPS

IMPORTANT: FOR BEST PERFORMANCE, KEEP MOWER HOUSING FREE OF BUILT-UP GRASS AND TRASH. CLEAN AFTER EACH USE.

- The special mulching blade will recut the grass clippings many times and reduce them in size so that as they fall onto the lawn they will disperse into the grass and not be noticed. Also, the mulched grass will biodegrade quickly to provide nutrients for the lawn. Always mulch with your highest engine (blade) speed as this will provide the best recutting action of the blades.
- Avoid cutting your lawn when it is wet. Wet grass tends to form clumps and interferes with the mulching action. The best time to mow your lawn is the early afternoon. At this time the grass has dried and the newly cut area will not be exposed to the direct sun.
- For best results, adjust the mower cutting height so that the mower cuts off only the top one-third of the grass blades (See Fig. 12). For extremely heavy mulching, reduce your width of cut on each pass and mow slowly.
- Certain types of grass and grass conditions may require that an area be mulched a second time to completely hide the clippings. When doing a second cut, mow across or perpendicular to the first cut path.
- Change your cutting pattern from week to week. Mow north to south one week then change to east to west the next week. This will help prevent matting and graining of the lawn.

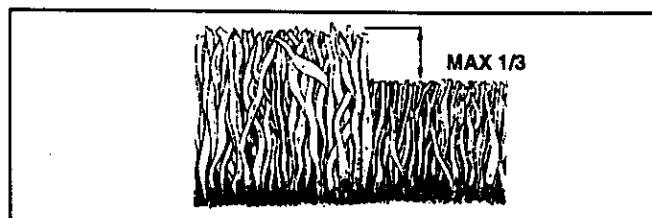


FIG. 12

CUSTOMER RESPONSIBILITIES

| MAINTENANCE SCHEDULE | | SERVICE DATES | | | | | | | | | |
|---|---|-----------------|---------------|--------------------|------------------|-----------------|--------------|----------------|--|--|--|
| FILL IN DATES AS YOU COMPLETE REGULAR SERVICE | | BEFORE EACH USE | EVERY 8 HOURS | EVERY 25 HOURS | EVERY 50 HOURS | EVERY 100 HOURS | EVERY SEASON | BEFORE STORAGE | | | |
| TRACTOR | Check Brake Operation | ✓ | ✓ | | | | | | | | |
| | Check Tire Pressure | ✓ | ✓ | | | | | | | | |
| | Check Operator Presence and Interlock Systems | ✓ | | | | | | | | | |
| | Check for Loose Fasteners | ✓ | | | ✓ ₇ | ✓ | | | | | |
| | Sharpen/Replace Mower Blades | | | ✓ ₄ | | | | | | | |
| | Lubrication Chart | | | ✓ | | ✓ | | | | | |
| | Check Battery Level | | | ✓ ₆ | | | | | | | |
| | Clean Battery and Terminals | | | ✓ | | ✓ | | | | | |
| | Check Transaxle Cooling | | | ✓ | | | | | | | |
| | Adjust Blade Belt(s) Tension | | | | ✓ ₅ | | | | | | |
| | Adjust Motion Drive Belt(s) Tension | | | | ✓ ₅ | | | | | | |
| ENGINE | Check Engine Oil Level | ✓ | ✓ | | | | | | | | |
| | Change Engine Oil | | | ✓ _{1,2,3} | | ✓ | | | | | |
| | Clean Air Filter | | | ✓ ₂ | | | | | | | |
| | Clean Air Screen | | | ✓ ₂ | | | | | | | |
| | Inspect Muffler/Spark Arrester | | | | ✓ | | | | | | |
| | Replace Oil Filter (If equipped) | | | | ✓ _{1,2} | | | | | | |
| | Clean Engine Cooling Fins | | | | ✓ ₂ | | | | | | |
| | Replace Spark Plug | | | | ✓ | ✓ | | | | | |
| | Replace Air Filter Paper Cartridge | | | | ✓ ₂ | | | | | | |
| | Replace Fuel Filter | | | | | ✓ | | | | | |

1 - Change more often when operating under a heavy load or in high ambient temperatures.

2 - Service more often when operating in dirty or dusty conditions.

3 - If equipped with oil filter, change oil every 50 hours.

4 - Replace blades more often when mowing in sandy soil.

5 - If equipped with adjustable system.

6 - Not required if equipped with maintenance-free battery.

7 - Tighten front axle pivot bolt to 35 ft.-lbs. maximum. Do not overtighten.

GENERAL RECOMMENDATIONS

The warranty on this tractor does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, operator must maintain tractor as instructed in this manual.

Some adjustments will need to be made periodically to properly maintain your tractor.


All adjustments in the Service and Adjustments section of this manual should be checked at least once each season.

- Once a year you should replace the spark plug, clean or replace air filter, and check blades and belts for wear. A new spark plug and clean air filter assure proper air-fuel mixture and help your engine run better and last longer.

BEFORE EACH USE

- Check engine oil level.
- Check brake operation.
- Check tire pressure.
- Check operator presence and interlock systems for proper operation.
- Check for loose fasteners.

LUBRICATION CHART

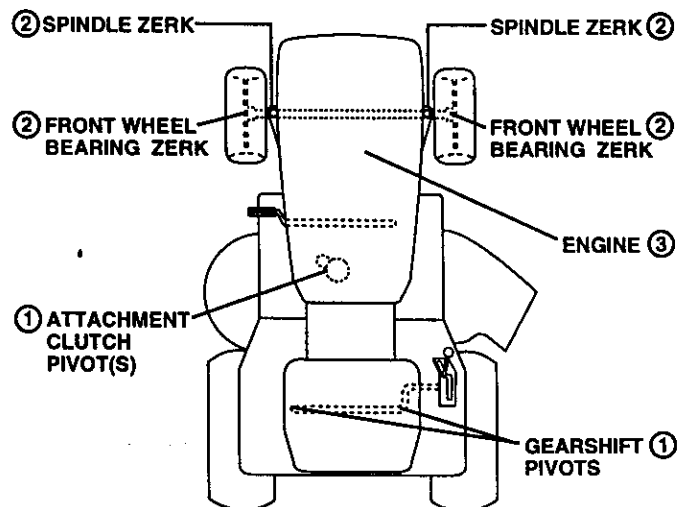

① SAE 30 OR 10W30 MOTOR OIL

② GENERAL PURPOSE GREASE

③ REFER TO CUSTOMER RESPONSIBILITIES "ENGINE" SECTION

IMPORTANT: DO NOT OIL OR GREASE THE PIVOT POINTS WHICH HAVE SPECIAL NYLON BEARINGS. VISCOUS LUBRICANTS WILL ATTRACT DUST AND DIRT THAT WILL SHORTEN THE LIFE OF THE SELF-LUBRICATING BEARINGS. IF YOU FEEL THEY MUST BE LUBRICATED, USE ONLY A DRY, POWDERED GRAPHITE TYPE LUBRICANT SPARINGLY.

CUSTOMER RESPONSIBILITIES

TRACTOR

Always observe safety rules when performing any maintenance.

BRAKE OPERATION

If tractor requires more than six (6) feet stopping distance at high speed in highest gear, then brake must be adjusted. (See "TO ADJUST BRAKE" in the Service and Adjustments section of this manual).

TIRES

- Maintain proper air pressure in all tires (See "PRODUCT SPECIFICATIONS" section of this manual).
- Keep tires free of gasoline, oil, or insect control chemicals which can harm rubber.
- Avoid stumps, stones, deep ruts, sharp objects and other hazards that may cause tire damage.

NOTE: To seal tire punctures and prevent flat tires due to slow leaks, tire sealant may be purchased from your local parts dealer. Tire sealant also prevents tire dry rot and corrosion.

OPERATOR PRESENCE SYSTEM

Be sure operator presence and interlock systems are working properly. If your tractor does not function as described, repair the problem immediately.

- The engine should not start unless the clutch/brake pedal is fully depressed and attachment clutch control is in the disengaged position.
- When the engine is running, any attempt by the operator to leave the seat without first setting the parking brake should shut off the engine.
- When the engine is running and the attachment clutch is engaged, any attempt by the operator to leave the seat should shut off the engine.
- The attachment clutch should never operate unless the operator is in the seat.

BLADE CARE

For best results mower blades must be kept sharp. Replace bent or damaged blades.

BLADE REMOVAL (See Fig. 13)

- Raise mower to highest position to allow access to blades.
- Remove hex bolt, lock washer and flat washer securing blade.
- Install new or resharpened blade with trailing edge up towards deck as shown.

IMPORTANT: TO ENSURE PROPER ASSEMBLY, CENTER HOLE IN BLADE MUST ALIGN WITH STAR ON MANDREL ASSEMBLY.

- Reassemble hex bolt, lock washer and flat washer in exact order as shown.
- Tighten bolt securely (27-35 Ft. Lbs. torque).

IMPORTANT: BLADE BOLT IS GRADE 8 HEAT TREATED.

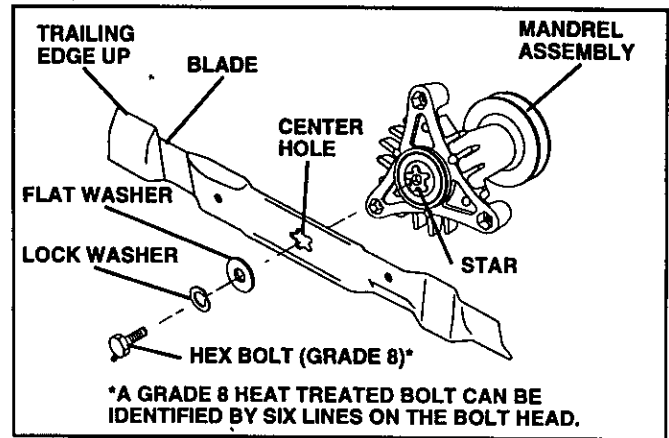


FIG. 13

TO SHARPEN BLADE (See Fig. 14)

NOTE: We do not recommend sharpening blade - but if you do, be sure the blade is balanced.

Care should be taken to keep the blade balanced. An unbalanced blade will cause excessive vibration and eventual damage to mower and engine.

- The blade can be sharpened with a file or on a grinding wheel. Do not attempt to sharpen while on the mower.
- To check blade balance, you will need a 5/8" diameter steel bolt, pin, or a cone balancer. (When using a cone balancer, follow the instructions supplied with balancer).

NOTE: Do not use a nail for balancing blade. The lobes of the center hole may appear to be centered, but are not.

- Slide blade on to an unthreaded portion of the steel bolt or pin and hold the bolt or pin parallel with the ground. If blade is balanced, it should remain in a horizontal position. If either end of the blade moves downward, sharpen the heavy end until the blade is balanced.

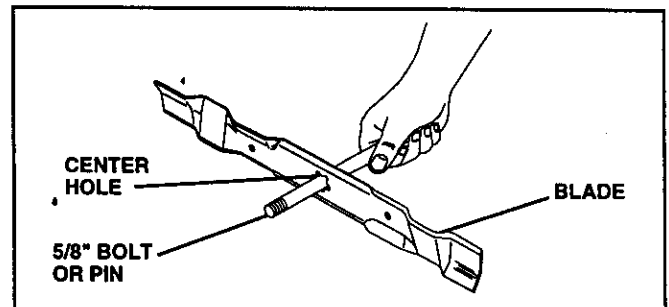


FIG. 14

CUSTOMER RESPONSIBILITIES

BATTERY

Your tractor has a battery charging system which is sufficient for normal use. However, periodic charging of the battery with an automotive charger will extend its life.

- Keep battery and terminals clean.
- Keep battery bolts tight.
- Keep small vent holes open.
- Recharge at 6-10 amperes for 1 hour.

TO CLEAN BATTERY AND TERMINALS

Corrosion and dirt on the battery and terminals can cause the battery to "leak" power.

- Open battery box door.
- Disconnect BLACK battery cable first then RED battery cable and remove battery from tractor.
- Rinse the battery with plain water and dry.
- Clean terminals and battery cable ends with wire brush until bright.
- Coat terminals with grease or petroleum jelly.
- Reinstall battery (See "CONNECT BATTERY" in the Assembly section of this manual).

V-BELTS

Check V-belts for deterioration and wear after 100 hours of operation and replace if necessary. The belts are not adjustable. Replace belts if they begin to slip from wear.

TRANSAXLE COOLING

Keep transaxle free from build-up of dirt and chaff which can restrict cooling.

ENGINE

LUBRICATION

Only use high quality detergent oil rated with API service classification SF, SG or SH. Select the oil's SAE viscosity grade according to your expected operating temperature.

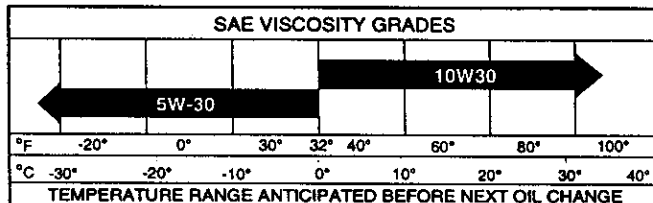


FIG. 15

Change the oil after every 50 hours of operation or at least once a year if the tractor is not used for 50 hours in one year.

- Check the crankcase oil level before starting the engine and after each eight (8) hours of operation. Tighten oil fill cap/dipstick securely each time you check the oil level.

TO CHANGE ENGINE OIL (See Figs. 15 and 16)

Determine temperature range expected before oil change. All oil must meet API service classification SF, SG, or SH.

- Be sure tractor is on level surface.
- Oil will drain more freely when warm.

- Catch oil in a suitable container.
- Remove oil fill cap/dipstick. Be careful not to allow dirt to enter the engine when changing oil.
- Remove drain plug.
- After oil has drained completely, replace oil drain plug and tighten securely.
- Refill engine with oil through oil fill dipstick tube. Pour slowly. Do not overfill. For approximate capacity see "PRODUCT SPECIFICATIONS" section of this manual.
- Use gauge on oil fill cap/dipstick for checking level. Insert dipstick into the tube and rest the oil fill cap on the tube. Do not thread the cap onto the tube when taking reading. Keep oil at "FULL" line on dipstick. Tighten cap onto the tube securely when finished.

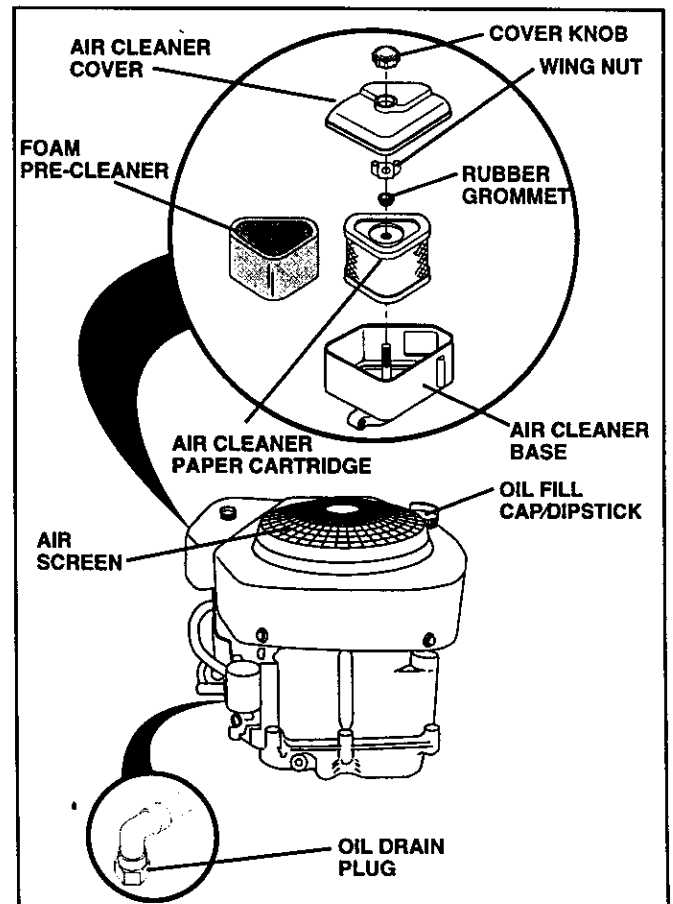


FIG. 16

CLEAN AIR SCREEN (See Fig. 16)

Air screen must be kept free of dirt and chaff to prevent engine damage from overheating. Clean with a wire brush or compressed air to remove dirt and stubborn dried gum fibers.

CUSTOMER RESPONSIBILITIES

AIR FILTER (See Fig. 16)

Your engine will not run properly using a dirty air filter. Clean the foam pre-cleaner after every 25 hours of operation or every season. Service paper cartridge every 100 hours of operation or every season, whichever occurs first.

Service air cleaner more often under dusty conditions.

- Remove knob and cover.
- Remove wing nut and air cleaner from base.

TO SERVICE PRE-CLEANER

- Slide foam pre-cleaner off cartridge.
- Wash it in liquid detergent and water.
- Squeeze it dry in a clean cloth. Allow it to dry.
- Saturate it in engine oil. Wrap it in clean, absorbent cloth and squeeze to remove excess oil.

TO SERVICE CARTRIDGE

- Replace a dirty, bent, or damaged cartridge.

NOTE: Do not wash the paper cartridge or use pressurized air, as this will damage the cartridge.

- Reinstall the pre-cleaner (cleaned and oiled) over the paper cartridge.
- Reassemble air cleaner, wing nut, cover and tighten knob securely.

CLEAN AIR INTAKE/COOLING AREAS

To insure proper cooling, make sure the grass screen, cooling fins, and other external surfaces of the engine are kept clean at all times.

Every 100 hours of operation (more often under extremely dusty, dirty conditions), remove the blower housing and other cooling shrouds. Clean the cooling fins and external surfaces as necessary. Make sure the cooling shrouds are reinstalled.

NOTE: Operating the engine with a blocked grass screen, dirty or plugged cooling fins, and/or cooling shrouds removed will cause engine damage due to overheating.

MUFFLER

Inspect and replace corroded muffler and spark arrester (if equipped) as it could create a fire hazard and/or damage.

SPARK PLUGS

Replace spark plugs at the beginning of each mowing season or after every 100 hours of use, whichever comes first. Spark plug type and gap setting is shown in "PRODUCT SPECIFICATIONS" section of this manual.

IN-LINE FUEL FILTER (See Fig. 17)

The fuel filter should be replaced once each season. If fuel filter becomes clogged, obstructing fuel flow to carburetor, replacement is required.

- With engine cool, remove filter and plug fuel line sections.
- Place new fuel filter in position in fuel line with arrow pointing towards carburetor.
- Be sure there are no fuel line leaks and clamps are properly positioned.
- Immediately wipe up any spilled gasoline.

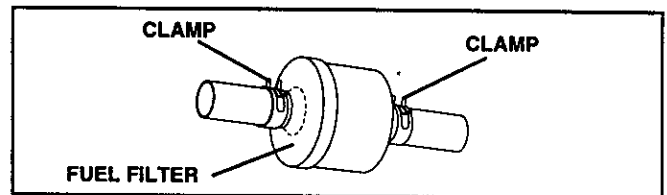


FIG. 17

CLEANING

- Clean engine, battery, seat, finish, etc. of all foreign matter.
- Keep finished surfaces and wheels free of all gasoline, oil, etc.
- Protect painted surfaces with automotive type wax.

We do not recommend using a garden hose to clean your tractor unless the electrical system, muffler, air filter and carburetor are covered to keep water out. Water in engine can result in a shortened engine life.

SERVICE AND ADJUSTMENTS



CAUTION: BEFORE PERFORMING ANY SERVICE OR ADJUSTMENTS:

- Depress clutch/brake pedal fully and set parking brake.
- Place gearshift lever in neutral (N) position.
- Place attachment clutch in "DISENGAGED" position.
- Turn ignition key "OFF" and remove key.
- Make sure the blades and all moving parts have completely stopped.
- Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.

TRACTOR

TO REMOVE MOWER (See Fig. 18)

Mower will be easier to remove from the right side of tractor.

- Place attachment clutch in "DISENGAGED" position.
- Move attachment lift lever forward to lower mower to its lowest position.
- Roll belt off engine pulley.
- Disconnect clutch rod from clutch lever by removing retainer spring.
- Disconnect anti-sway bar from chassis bracket by removing retainer spring.
- Disconnect suspension arms from rear deck brackets by removing retainer springs.
- Disconnect front links from deck by removing retainer springs.
- Raise lift lever to raise suspension arms. Slide mower out from under tractor.

IMPORTANT: IF AN ATTACHMENT OTHER THAN THE MOWER IS TO BE MOUNTED TO THE TRACTOR, BE REMOVE THE FRONT LINKS.

TO INSTALL MOWER (See Fig. 18)

- Raise attachment lift lever to its highest position.
- Slide mower under tractor with discharge guard to right side of tractor.
- Lower lift lever to its lowest position.
- Install mower in reverse order of removal instructions.

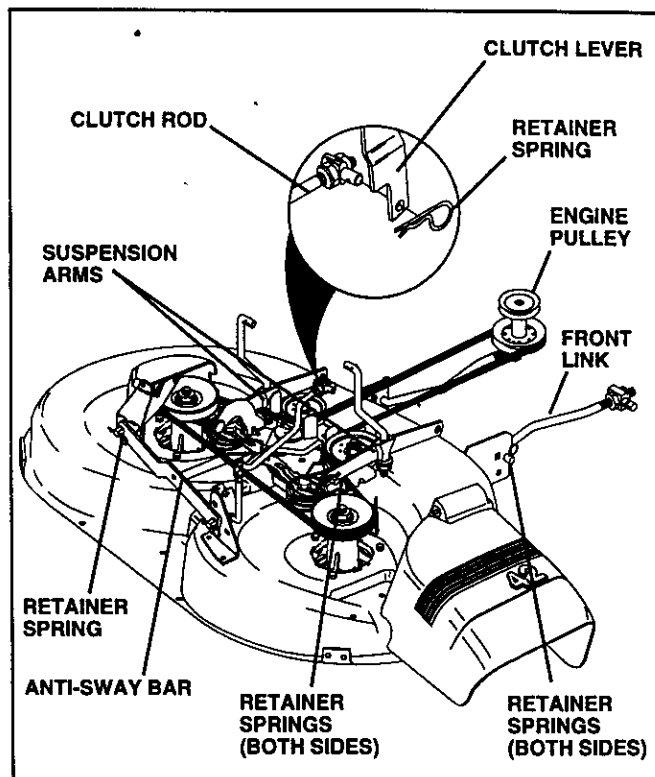


FIG. 18

SERVICE AND ADJUSTMENTS

TO LEVEL MOWER HOUSING

Adjust the mower while tractor is parked on level ground or driveway. Make sure tires are properly inflated (See "PRODUCT SPECIFICATIONS" section of this manual). If tires are over or underinflated, you will not properly adjust your mower.

SIDE-TO-SIDE ADJUSTMENT (See Figs. 19 and 20)

- Raise mower to its highest position.
- At the midpoint of both sides of mower, measure height from bottom edge of mower to ground. Distance "A" on both sides of mower should be the same or within 1/4" of each other.
- If adjustment is necessary, make adjustment on one side of mower only.
- To raise one side of mower, tighten lift link adjustment nut on that side.
- To lower one side of mower, loosen lift link adjustment nut on that side.

NOTE: Each full turn of adjustment nut will change mower height about 1/8".

- Recheck measurements after adjusting.

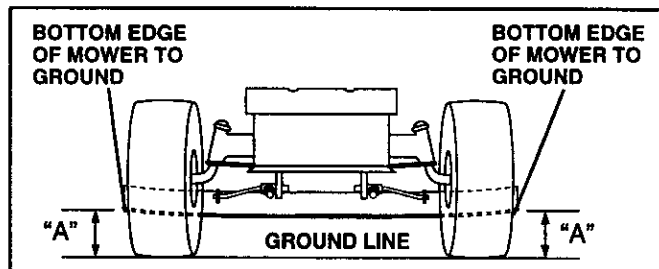


FIG. 19

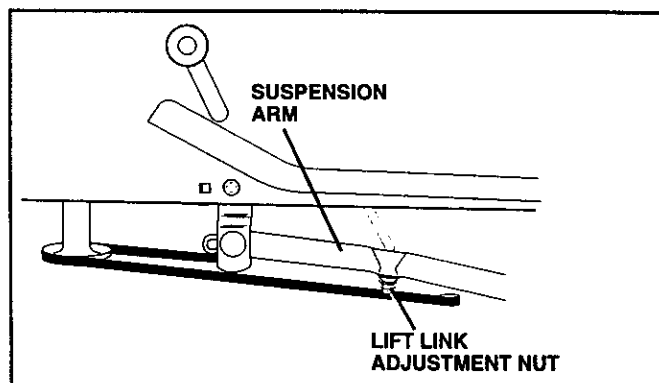


FIG. 20

FRONT-TO-BACK ADJUSTMENT (See Figs. 21 and 22)

IMPORTANT: DECK MUST BE LEVEL SIDE-TO-SIDE. IF THE FOLLOWING FRONT-TO-BACK ADJUSTMENT IS NECESSARY, BE SURE TO ADJUST BOTH FRONT LINKS EQUALLY SO MOWER WILL STAY LEVEL SIDE-TO-SIDE.

To obtain the best cutting results, the mower housing should be adjusted so that the front is approximately 1/8" to 1/2" lower than the rear when the mower is in its highest position.

Check adjustment on right side of tractor. Measure distance "D" directly in front and behind the mandrel at bottom edge of mower housing as shown.

- Before making any necessary adjustments, check that both front links are equal in length. Both links should be approximately 10-3/8".
- If links are not equal in length, adjust one link to same length as other link.
- To lower front of mower loosen nut "E" on both front links an equal number of turns.
- When distance "D" is 1/8" to 1/2" lower at front than rear, tighten nuts "F" against trunnion on both front links.
- To raise front of mower, loosen nut "F" from trunnion on both front links. Tighten nut "E" on both front links an equal number of turns.
- When distance "D" is 1/8" to 1/2" lower at front than rear, tighten nut "F" against trunnion on both front links.
- Recheck side-to-side adjustment.

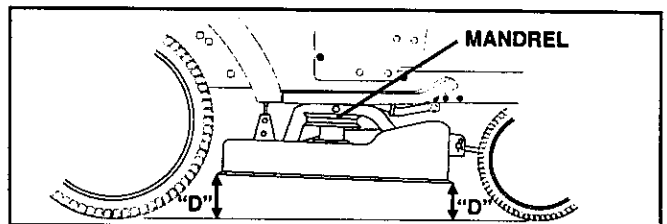


FIG. 21

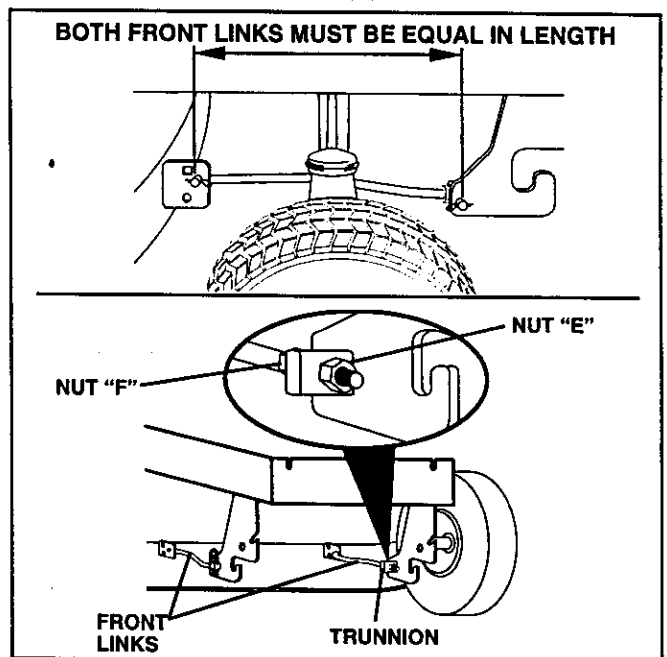


FIG. 22

SERVICE AND ADJUSTMENTS

TO REPLACE MOWER BLADE DRIVE BELT (See Fig. 23)

The mower blade drive belt may be replaced without tools. Park the tractor on level surface. Engage parking brake.

BELT REMOVAL -

- Remove mower from tractor (See "TO REMOVE MOWER" in this section of this manual).
- Work belt off both mandrel pulleys and idler pulleys.
- Pull belt away from mower.

BELT INSTALLATION -

- Install new belt in reverse order of removal.
- Make sure belt is in all pulley grooves and inside all belt guides.
- Install mower in reverse order of removal instructions.

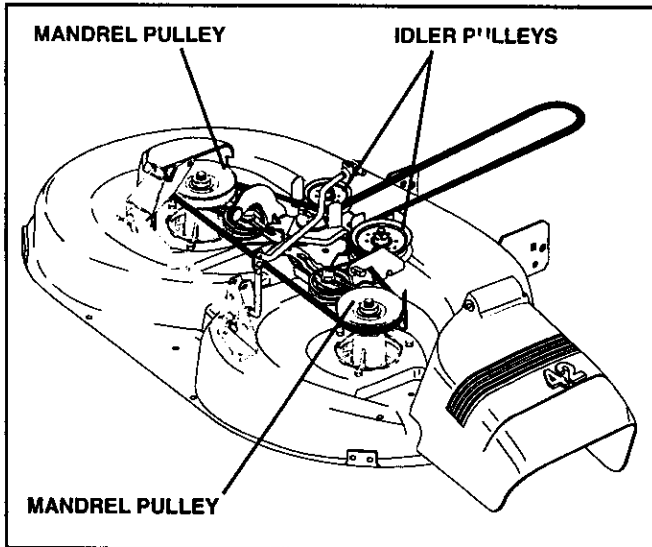


FIG. 23

TO ADJUST BRAKE (See Fig. 24)

Your tractor is equipped with an adjustable brake system which is mounted on the right side of the transaxle.

If tractor requires more than six (6) feet stopping distance at high speed in highest gear, then brake must be adjusted.

- Depress clutch/brake pedal and engage parking brake.
- Measure distance between brake operating arm and nut "A" on brake rod.
- If distance is other than 1-1/2", loosen jam nut and turn nut "A" until distance becomes 1-1/2". Retighten jam nut against nut "A".
- Road test tractor for proper stopping distance as stated above. Readjust if necessary. If stopping distance is still greater than six (6) feet in highest gear, further maintenance is necessary. Contact your nearest authorized service center/department.

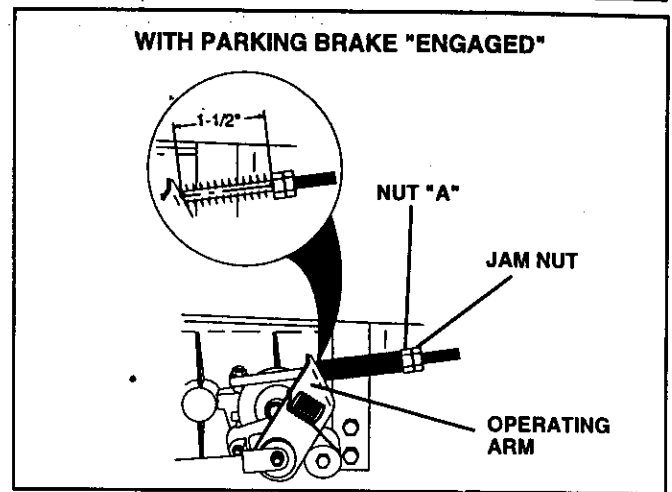


FIG. 24

TO REPLACE MOTION DRIVE BELT (See Fig. 25)

Park the tractor on level surface. Engage parking brake. For assistance, there is a belt installation guide decal on bottom side of left footrest.

- Remove mower (See "TO REMOVE MOWER" in this section of this manual.)
- Remove belt from stationary idler and clutching idler.
- Pull belt slack toward rear of tractor. Remove belt upwards from transaxle pulley by deflecting belt keepers.
- Pull belt toward front of tractor and remove downwards from around engine pulley.
- Install new belt by reversing above procedure.

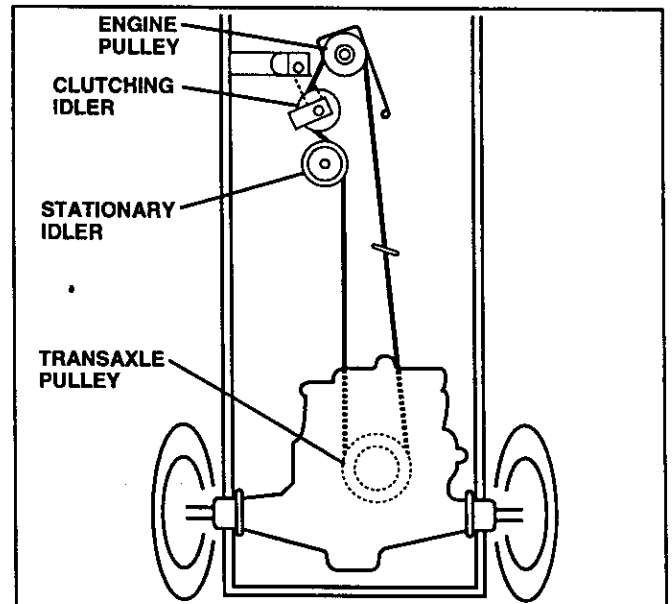


FIG. 25

SERVICE AND ADJUSTMENTS

TRANSAXLE GEAR SHIFT LEVER ADJUSTMENT (See Fig. 26)

The transaxle should be in neutral when the gear shift lever is in neutral (N) (lock gate) position. The adjustment is preset at the factory; however, if adjustment is needed, proceed as follows:

- Make sure transaxle is in neutral (N).

NOTE: When the tractor rear wheels move freely, the transaxle is in neutral.

- Loosen adjustment bolt in front of the right rear wheel.
- Position the gear shift lever in the neutral (N) position.
- Tighten adjustment bolt securely.

NOTE: If additional clearance is needed to get to adjustment bolt, move mower deck height to the lowest position.

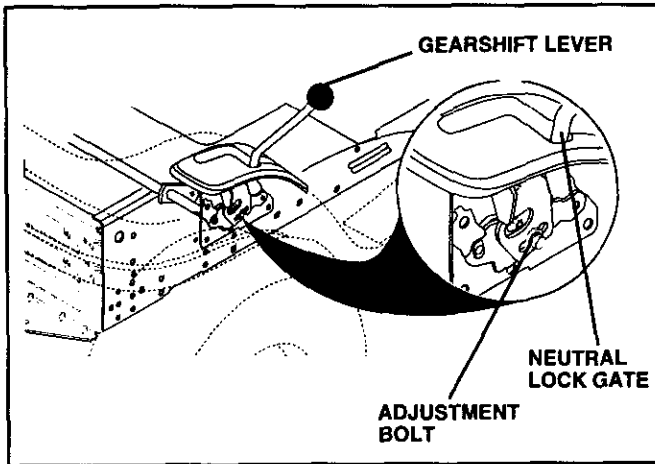


FIG. 26

TO ADJUST STEERING WHEEL ALIGNMENT

If steering wheel crossbars are not horizontal (left to right) when wheels are positioned straight forward, remove steering wheel and reassemble per instructions in the Assembly section of this manual.

FRONT WHEEL TOE-IN/CAMBER

The front wheel toe-in and camber are not adjustable on your tractor. If damage has occurred to affect the front wheel toe-in or camber, contact your nearest authorized service center/department.

TO REMOVE WHEEL FOR REPAIRS (See Fig. 27)

- Block up axle securely.
- Remove axle cover, retaining ring and washers to allow wheel removal (rear wheel contains a square key - Do not lose).
- Repair tire and reassemble.
- On rear wheels only: align grooves in rear wheel hub and axle. Insert square key.
- Replace washers and snap retaining ring securely in axle groove.
- Replace axle cover.

NOTE: To seal tire punctures and prevent flat tires due to slow leaks, tire sealant may be purchased from your local parts dealer. Tire sealant also prevents tire dry rot and corrosion.

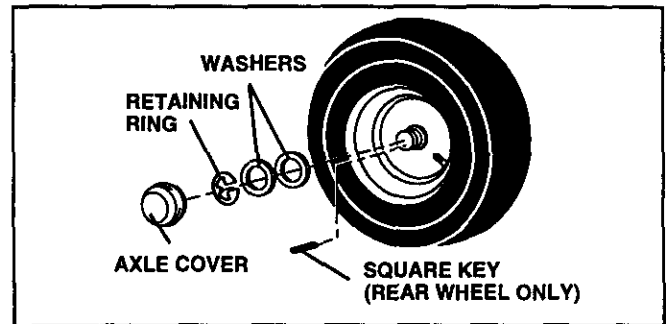


FIG. 27

SERVICE AND ADJUSTMENTS

TO START ENGINE WITH A WEAK BATTERY (See Fig. 28)



CAUTION: Lead-acid batteries generate explosive gases. Keep sparks, flame and smoking materials away from batteries. Always wear eye protection when around batteries.

If your battery is too weak to start the engine, it should be recharged. If "jumper cables" are used for emergency starting, follow this procedure:

IMPORTANT: YOUR TRACTOR IS EQUIPPED WITH A 12 VOLT NEGATIVE GROUNDED SYSTEM. THE OTHER VEHICLE MUST ALSO BE A 12 VOLT NEGATIVE GROUNDED SYSTEM. DO NOT USE YOUR TRACTOR BATTERY TO START OTHER VEHICLES.

TO ATTACH JUMPER CABLES -

- Connect each end of the RED cable to the POSITIVE (+) terminal of each battery, taking care not to short against chassis.
- Connect one end of the BLACK cable to the NEGATIVE (-) terminal of fully charged battery.
- Connect the other end of the BLACK cable to good CHASSIS GROUND, away from fuel tank and battery.

TO REMOVE CABLES, REVERSE ORDER -

- BLACK cable first from chassis and then from the fully charged battery.
- RED cable last from both batteries.

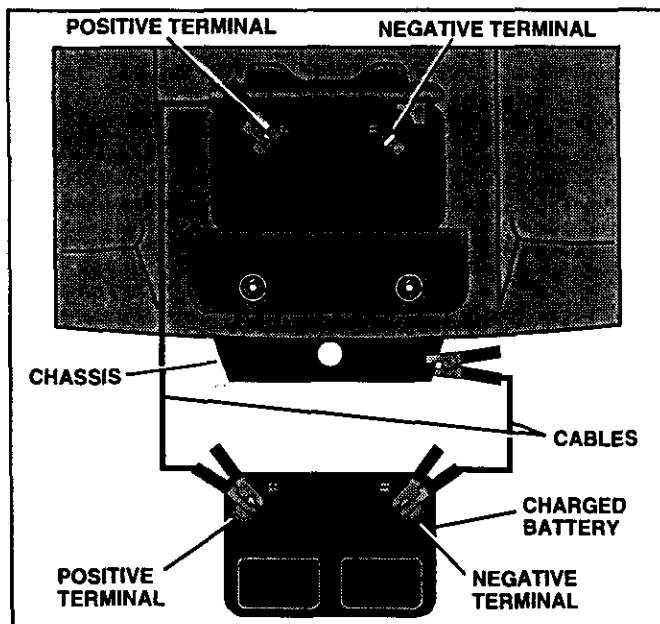


FIG. 28

TO REPLACE HEADLIGHT BULB

- Raise hood.
- Pull bulb holder out of the hole in the backside of the grill.
- Replace bulb in holder and push bulb holder securely back into the hole in the backside of the grill.
- Close hood.

INTERLOCKS AND RELAYS

Loose or damaged wiring may cause your tractor to run poorly, stop running, or prevent it from starting.

- Check wiring. See electrical wiring diagram in Repair Parts section of this manual.

TO REPLACE FUSE

Replace with 30 amp automotive-type plug-in fuse. The fuse holder is located behind the dash.

TO REMOVE HOOD AND GRILL (See Fig. 29)

- Raise hood.
- Unsnap headlight wire connector.
- Stand in front of tractor. Grasp hood at sides, tilt toward engine and lift off of tractor.
- To replace, reverse above procedure.

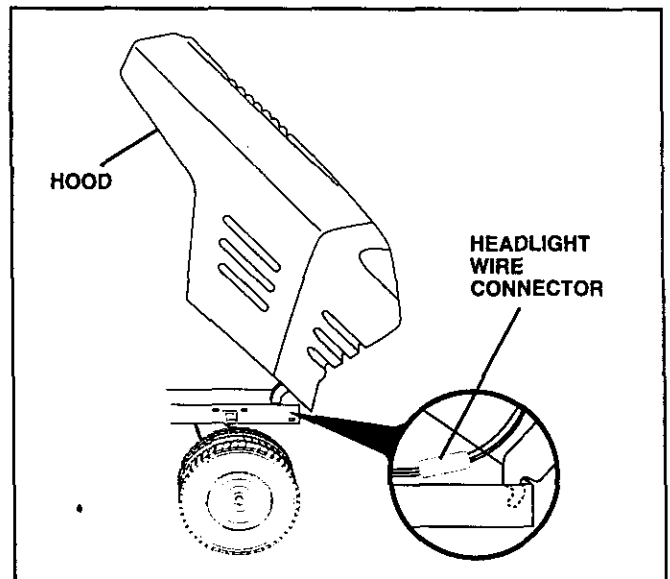


FIG. 29

SERVICE AND ADJUSTMENTS

Maintenance, repair, or replacement of the emission control devices and systems, which are being done at the customers expense, may be performed by any non-road engine repair establishment or individual. Warranty repairs must be performed by an authorized engine manufacturer's service outlet.

ENGINE

TO ADJUST THROTTLE CONTROL CABLE (See Fig. 30)

The throttle control has been preset at the factory and adjustment should not be necessary. Check adjustment as described below before loosening cable. If adjustment is necessary, proceed as follows:

- With engine not running, move throttle control lever from slow to choke position. Slowly move lever from choke to fast position.
- Check to see if hole in throttle lever and hole in speed control bracket are aligned.
- If holes are not aligned, loosen cable clamp screw and align the holes by inserting a pencil or a 1/4" drill bit through both holes.
- Pull throttle cable up to remove slack and tighten cable clamp screw. Remove alignment pencil or drill bit.

TO ADJUST CARBURETOR (See Fig. 31)

The carburetor has been preset at the factory and adjustment should not be necessary. However, minor adjustment may be required to compensate for differences in fuel, temperature, altitude or load. If the carburetor does need adjustment, proceed as follows:

In general, turning the adjusting needles **in** (clockwise) decreases the supply of fuel to the engine giving a leaner fuel/air mixture. Turning the adjusting needles **out** (counterclockwise) increases the supply of fuel to the engine giving a richer fuel/air mixture.

IMPORTANT: DAMAGE TO THE NEEDLES AND THE SEATS IN CARBURETOR MAY RESULT IF NEEDLE IS TURNED IN TOO TIGHT.

NOTE: The carburetor on this engine is low emission. It is equipped with an idle fuel adjusting needle with a limiter cap, which allows some adjustment within the limits allowed by the cap. Do not attempt to remove the limiter cap. The limiter cap cannot be removed without breaking the adjusting needle.

- Be sure you have a clean air filter and the throttle control cable is adjusted properly (see above).
- Start engine and allow to warm for five minutes. Make adjustments with engine running and shift/motion control lever in neutral (N) position.
- **Idle speed setting** - With throttle control lever in slow position, engine should idle at 1750 RPM. If engine idles too slow or fast, turn idle speed adjusting screw in or out until correct idle is attained.

- **Idle fuel needle setting** - With throttle control lever in slow position, turn idle fuel adjustment needle **in** (clockwise) until engine begins to die and then turn **out** (counterclockwise) until engine runs rough. Turn needle to a point midway between those two positions.
- Recheck idle speed. Readjust if necessary.

ACCELERATION TEST -

- Move throttle control lever from slow to fast position. If engine hesitates or dies, turn idle fuel adjusting needle **out** (counterclockwise) 1/8 turn. Repeat test and continue to adjust, if necessary, until engine accelerates smoothly.

High speed stop is factory adjusted. Do not adjust - damage may result.

IMPORTANT: NEVER TAMPER WITH THE ENGINE GOVERNOR, WHICH IS FACTORY SET FOR PROPER ENGINE SPEED. OVERSPEEDING THE ENGINE ABOVE THE FACTORY HIGH SPEED SETTING CAN BE DANGEROUS. IF YOU THINK THE ENGINE-GOVERNED HIGH SPEED NEEDS ADJUSTING, CONTACT YOUR NEAREST AUTHORIZED SERVICE CENTER/DEPARTMENT, WHICH HAS PROPER EQUIPMENT AND EXPERIENCE TO MAKE ANY NECESSARY ADJUSTMENTS.

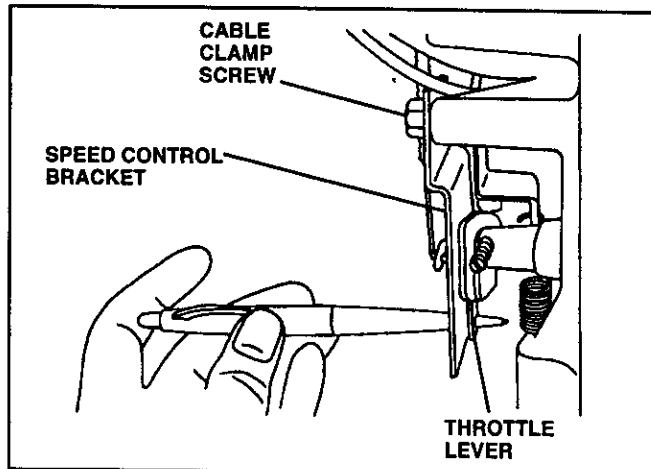


FIG. 30

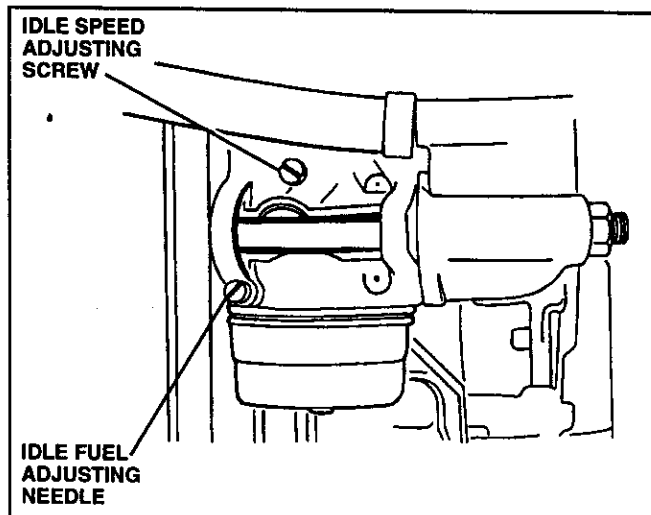


FIG. 31

STORAGE

Immediately prepare your tractor for storage at the end of the season or if the tractor will not be used for 30 days or more.



CAUTION: Never store the tractor with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.

TRACTOR

Remove mower from tractor for winter storage. When mower is to be stored for a period of time, clean it thoroughly, remove all dirt, grease, leaves, etc. Store in a clean, dry area.

- Clean entire tractor (See "CLEANING" in the Customer Responsibilities section of this manual).
- Inspect and replace belts, if necessary (See belt replacement instructions in the Service and Adjustments section of this manual).
- Lubricate as shown in the Customer Responsibilities section of this manual.
- Be sure that all nuts, bolts and screws are securely fastened. Inspect moving parts for damage, breakage and wear. Replace if necessary.
- Touch up all rusted or chipped paint surfaces; sand lightly before painting.

BATTERY

- Fully charge the battery for storage.
- After a period of time in storage, battery may require recharging.
- To help prevent corrosion and power leakage during long periods of storage, battery cables should be disconnected and battery cleaned thoroughly (see "TO CLEAN BATTERY AND TERMINALS" in the Customer Responsibilities section of this manual).
- After cleaning, leave cables disconnected and place cables where they cannot come in contact with battery terminals.
- If battery is removed from tractor for storage, do not store battery directly on concrete or damp surfaces.

ENGINE

FUEL SYSTEM

IMPORTANT: IT IS IMPORTANT TO PREVENT GUM DEPOSITS FROM FORMING IN ESSENTIAL FUEL SYSTEM PARTS SUCH AS CARBURETOR, FUEL FILTER, FUEL HOSE, OR TANK DURING STORAGE. ALSO, EXPERIENCE INDICATES THAT ALCOHOL BLENDED FUELS (CALLED GASOHOL OR USING ETHANOL OR METHANOL) CAN ATTRACT MOISTURE WHICH LEADS TO SEPARATION AND FORMATION OF ACIDS DURING STORAGE. ACIDIC GAS CAN DAMAGE THE FUEL SYSTEM OF AN ENGINE WHILE IN STORAGE.

- Drain the fuel tank.
- Start the engine and let it run until the fuel lines and carburetor are empty.
- Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.
- Use fresh fuel next season.

NOTE: Fuel stabilizer is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow the mix ratio found on stabilizer container. Run engine at least 10 minutes after adding stabilizer to allow the stabilizer to reach the carburetor. Do not drain the gas tank and carburetor if using fuel stabilizer.

ENGINE OIL

Drain oil (with engine warm) and replace with clean engine oil. (See "ENGINE" in the Customer Responsibilities section of this manual).

CYLINDER(S)

- Remove spark plug(s).
- Pour one ounce of oil through spark plug hole(s) into cylinder(s).
- Turn ignition key to "START" position for a few seconds to distribute oil.
- Replace with new spark plug(s).

OTHER

- Do not store gasoline from one season to another.
- Replace your gasoline can if your can starts to rust. Rust and/or dirt in your gasoline will cause problems.
- If possible, store your tractor indoors and cover it to give protection from dust and dirt.
- Cover your tractor with a suitable protective cover that does not retain moisture. Do not use plastic. Plastic cannot breathe which allows condensation to form and will cause your tractor to rust.

IMPORTANT: NEVER COVER TRACTOR WHILE ENGINE AND EXHAUST ARE STILL WARM.

TROUBLESHOOTING POINTS



| PROBLEM | CAUSE | CORRECTION |
|----------------------------------|---|--|
| Will not start | <ol style="list-style-type: none"> 1. Out of fuel. 2. Engine not "CHOKED" properly. 3. Engine flooded. 4. Bad spark plug. 5. Dirty air filter. 6. Dirty fuel filter. 7. Water in fuel. 8. Loose or damaged wiring. 9. Carburetor out of adjustment. 10. Engine valves out of adjustment. | <ol style="list-style-type: none"> 1. Fill fuel tank. 2. See "TO START ENGINE" in Operation section. 3. Wait several minutes before attempting to start. 4. Replace spark plug. 5. Clean/replace air filter. 6. Replace fuel filter. 7. Drain fuel tank and carburetor, refill tank with fresh gasoline and replace fuel filter. 8. Check all wiring. 9. See "To Adjust Carburetor" in Service Adjustments section. 10. Contact an authorized service center/department. |
| Hard to start | <ol style="list-style-type: none"> 1. Dirty air filter. 2. Bad spark plug. 3. Weak or dead battery. 4. Dirty fuel filter. 5. Stale or dirty fuel. 6. Loose or damaged wiring. 7. Carburetor out of adjustment. 8. Engine valves out of adjustment. | <ol style="list-style-type: none"> 1. Clean/replace air filter. 2. Replace spark plug. 3. Recharge or replace battery. 4. Replace fuel filter. 5. Drain fuel tank and refill with fresh gasoline. 6. Check all wiring. 7. See "To Adjust Carburetor" in Service Adjustments section. 8. Contact an authorized service center/department. |
| Engine will not turn over | <ol style="list-style-type: none"> 1. Clutch/brake pedal not depressed. 2. Attachment clutch is engaged. 3. Weak or dead battery. 4. Blown fuse. 5. Corroded battery terminals. 6. Loose or damaged wiring. 7. Faulty ignition switch. 8. Faulty solenoid or starter. 9. Faulty operator presence switch(es). | <ol style="list-style-type: none"> 1. Depress clutch/brake pedal. 2. Disengage attachment clutch. 3. Recharge or replace battery. 4. Replace fuse. 5. Clean battery terminals. 6. Check all wiring. 7. Check/replace ignition switch. 8. Check/replace solenoid or starter. 9. Contact an authorized service center/department. |
| Engine clicks but will not start | <ol style="list-style-type: none"> 1. Weak or dead battery. 2. Corroded battery terminals. 3. Loose or damaged wiring. 4. Faulty solenoid or starter. | <ol style="list-style-type: none"> 1. Recharge or replace battery. 2. Clean battery terminals. 3. Check all wiring. 4. Check/replace solenoid or starter. |
| Loss of power | <ol style="list-style-type: none"> 1. Cutting too much grass/too fast. 2. Throttle in "CHOKE" position. 3. Build-up of grass, leaves and trash under mower. 4. Dirty air filter. 5. Low oil level/dirty oil. 6. Faulty spark plug. 7. Dirty fuel filter. 8. Stale or dirty fuel. 9. Water in fuel. 10. Spark plug wire loose. 11. Dirty engine air screen/fins. 12. Dirty/clogged muffler. 13. Loose or damaged wiring. 14. Carburetor out of adjustment. 15. Engine valves out of adjustment. | <ol style="list-style-type: none"> 1. Set in "Higher Cut" position/reduce speed. 2. Adjust throttle control. 3. Clean underside of mower housing. 4. Clean/replace air filter. 5. Check oil level/change oil. 6. Clean and regap or change spark plug. 7. Replace fuel filter. 8. Drain fuel tank and refill with fresh gasoline. 9. Drain fuel tank and carburetor, refill tank with fresh gasoline and replace fuel filter. 10. Connect and tighten spark plug wire. 11. Clean engine air screen/fins. 12. Clean/replace muffler. 13. Check all wiring. 14. See "To Adjust Carburetor" in Service Adjustments section. 15. Contact an authorized service center/department. |
| Excessive vibration | <ol style="list-style-type: none"> 1. Worn, bent or loose blade. 2. Bent blade mandrel. 3. Loose/damaged part(s). | <ol style="list-style-type: none"> 1. Replace blade. Tighten blade bolt. 2. Replace blade mandrel. 3. Tighten loose part(s). Replace damaged parts. |

TROUBLESHOOTING POINTS


| PROBLEM | CAUSE | CORRECTION |
|--|--|---|
| Engine continues to run when operator leaves seat with attachment clutch engaged | 1. Faulty operator-safety presence control system. | 1. Check wiring, switches and connections. If not corrected, contact an authorized service center/department. |
| Poor cut - uneven | <ol style="list-style-type: none"> 1. Worn, bent or loose blade. 2. Mower deck not level. 3. Buildup of grass, leaves, and trash under mower. 4. Bent blade mandrel. 5. Clogged mower deck vent holes from buildup of grass, leaves, and trash around mandrels. | <ol style="list-style-type: none"> 1. Replace blade. Tighten blade bolt. 2. Level mower deck. 3. Clean underside of mower housing. 4. Replace blade mandrel. 5. Clean around mandrels to open vent holes. |
| Mower blades will not rotate | <ol style="list-style-type: none"> 1. Obstruction in clutch mechanism. 2. Worn/damaged mower drive belt. 3. Frozen idler pulley. 4. Frozen blade mandrel. | <ol style="list-style-type: none"> 1. Remove obstruction. 2. Replace mower drive belt. 3. Replace idler pulley. 4. Replace blade mandrel. |
| Poor grass discharge | <ol style="list-style-type: none"> 1. Engine speed too slow. 2. Travel speed too fast. 3. Wet grass. 4. Mower deck not level. 5. Low/uneven tire air pressure. 6. Worn, bent or loose blade. 7. Buildup of grass, leaves and trash under mower. 8. Mower drive belt worn. 9. Blades improperly installed. 10. Improper blades used. 11. Clogged mower deck vent holes from buildup of grass, leaves, and trash around mandrels. | <ol style="list-style-type: none"> 1. Place throttle control in "FAST" position. 2. Shift to slower speed. 3. Allow grass to dry before mowing. 4. Level mower deck. 5. Check tires for proper air pressure. 6. Replace/sharpen blade. Tighten blade bolt. 7. Clean underside of mower housing. 8. Replace mower drive belt. 9. Reinstall blades sharp edge down. 10. Replace with blades listed in this manual. 11. Clean around mandrels to open vent holes. |
| Headlight(s) not working (if so equipped) | <ol style="list-style-type: none"> 1. Switch is "OFF". 2. Bulb(s) burned out. 3. Faulty light switch. 4. Loose or damaged wiring. 5. Blown fuse. | <ol style="list-style-type: none"> 1. Turn switch "ON". 2. Replace bulb(s). 3. Check/replace light switch. 4. Check wiring and connections. 5. Replace fuse. |
| Battery will not charge | <ol style="list-style-type: none"> 1. Bad battery cell(s). 2. Poor cable connections. 3. Faulty regulator (if so equipped). 4. Faulty alternator. | <ol style="list-style-type: none"> 1. Replace battery. 2. Check/clean all connections. 3. Replace regulator. 4. Replace alternator. |
| Engine "backfires" when turning engine "OFF" | 1. Engine throttle control not set at "SLOW" position for 30 seconds before stopping engine. | 1. Move throttle control to "SLOW" position and allow to idle for 30 seconds before stopping engine. |
| | | |

TRACTOR - - MODEL NUMBER 944.609760

SCHEMATIC

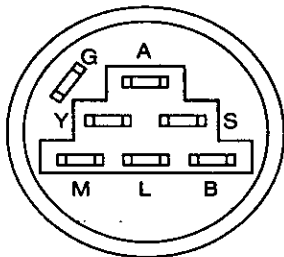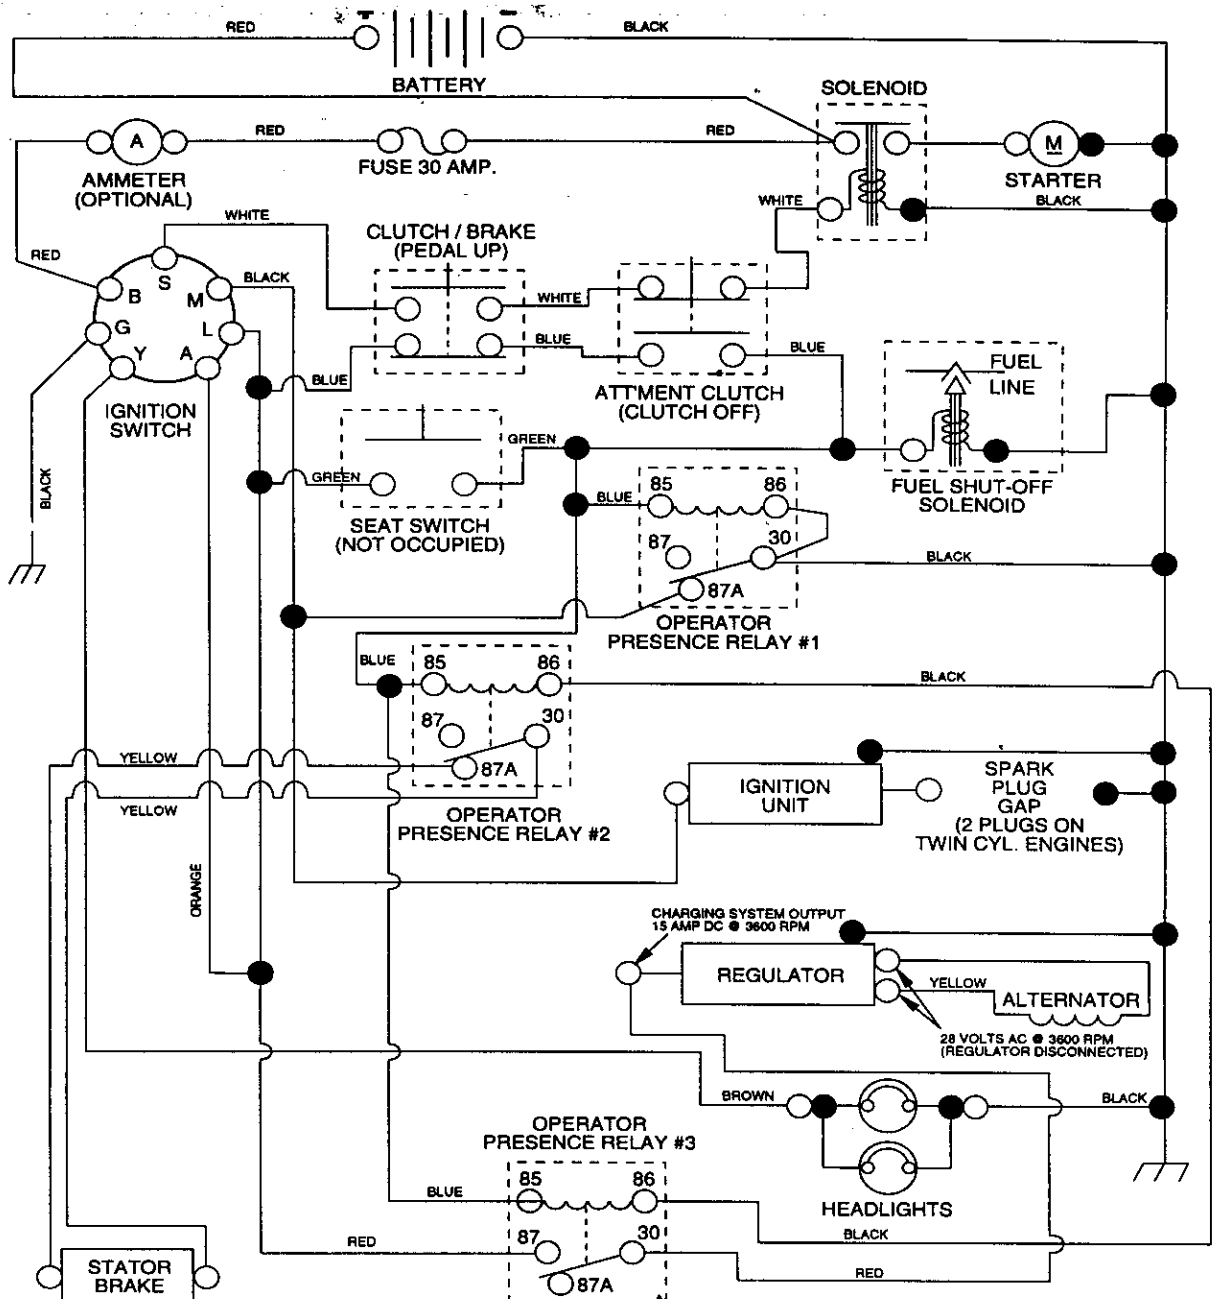

| IGNITION SWITCH | | |
|-----------------|-----------|--------|
| POSITION | CIRCUIT | "MAKE" |
| OFF | G + M + L | NONE |
| RUN/LIGHT | B + L | A + Y |
| RUN | B + L | NONE |
| START | B + L + S | NONE |

 

 NON-REMOVABLE CONNECTIONS
 REMOVABLE CONNECTIONS


WIRING INSULATED CLIPS

NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE REPLACED TO PROPERLY SECURE YOUR WIRING.

REPAIR PARTS

TRACTOR -- MODEL NUMBER 944.609760

ELECTRICAL

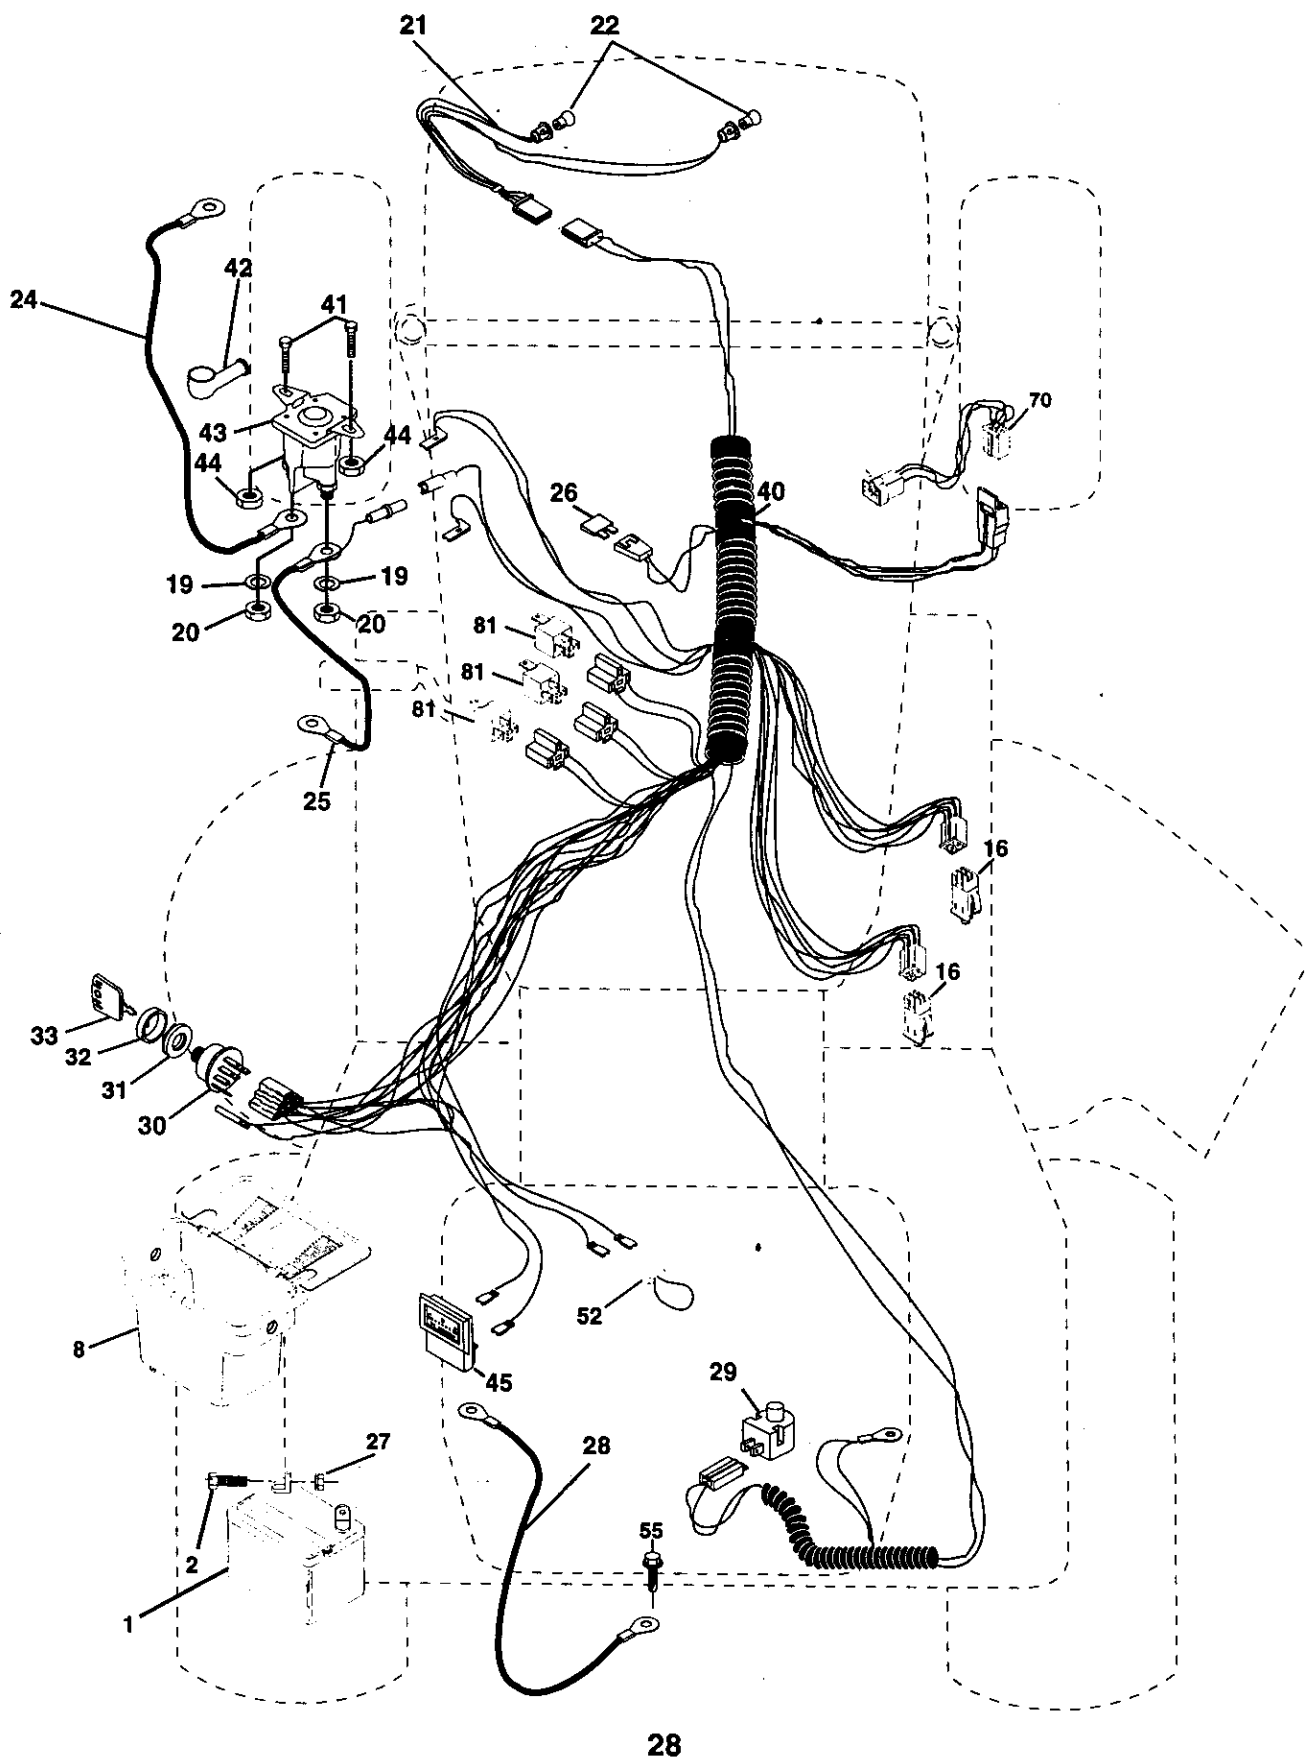

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

ELECTRICAL


| KEY NO. | PART NO. | DESCRIPTION |
|---------|-----------|----------------------------------|
| 1 | 163465 | Battery 12 Volt 28 Amp |
| 2 | 74760412 | Bolt Hex Hd 1/4-20unc X 3/4 |
| 8 | 156417 | Case Battery |
| 16 | 161343 | Switch Interlock N. Opn./N Opn. |
| 19 | STD551125 | Washer Lock 1/4 |
| 20 | 73350400 | Nut Jam Hex 1/4-20 Unc |
| 21 | 166182 | Harness Asm Light W/4152J |
| 22 | 4152J | Bulb Light #1156 |
| 24 | 4799J | Cable Battery 6 Ga 11"red |
| 25 | 146147 | Cable Battery 6 Ga w/16 wire,red |
| 26 | 166180 | Fuse 15 AMP |
| 27 | 73510400 | Nut Keps Hex 1/4-20 Unc |
| 28 | 4207J | Cable Ground |
| 29 | 160784 | Switch Plunger Normal Op. Olive |
| 30 | 140301 | Switch Ign 3 |
| 31 | 124211X | Nut Ignition |
| 32 | 141226 | Cover Sw Ignition |
| 33 | 109310X | Key Ign |
| 40 | 166148 | Harness Ign |
| 41 | 71110408 | Bolt Blk Fin Hex 1/4-20unc X 1/2 |
| 42 | 131563 | Cover Terminal Red |
| 43 | 145673 | Solenoid |
| 44 | 73640400 | Nut Keps Blk Hex 1/4-20 unc |
| 45 | 122822X | Ammeter |
| 52 | 141940 | Protection Wire Loop (Hourmeter) |
| 70 | 166661 | Harness Eng |
| 81 | 109748X | Relay Asm. |

NOTE: All component dimensions give in U.S. inches
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

CHASSIS AND ENCLOSURES

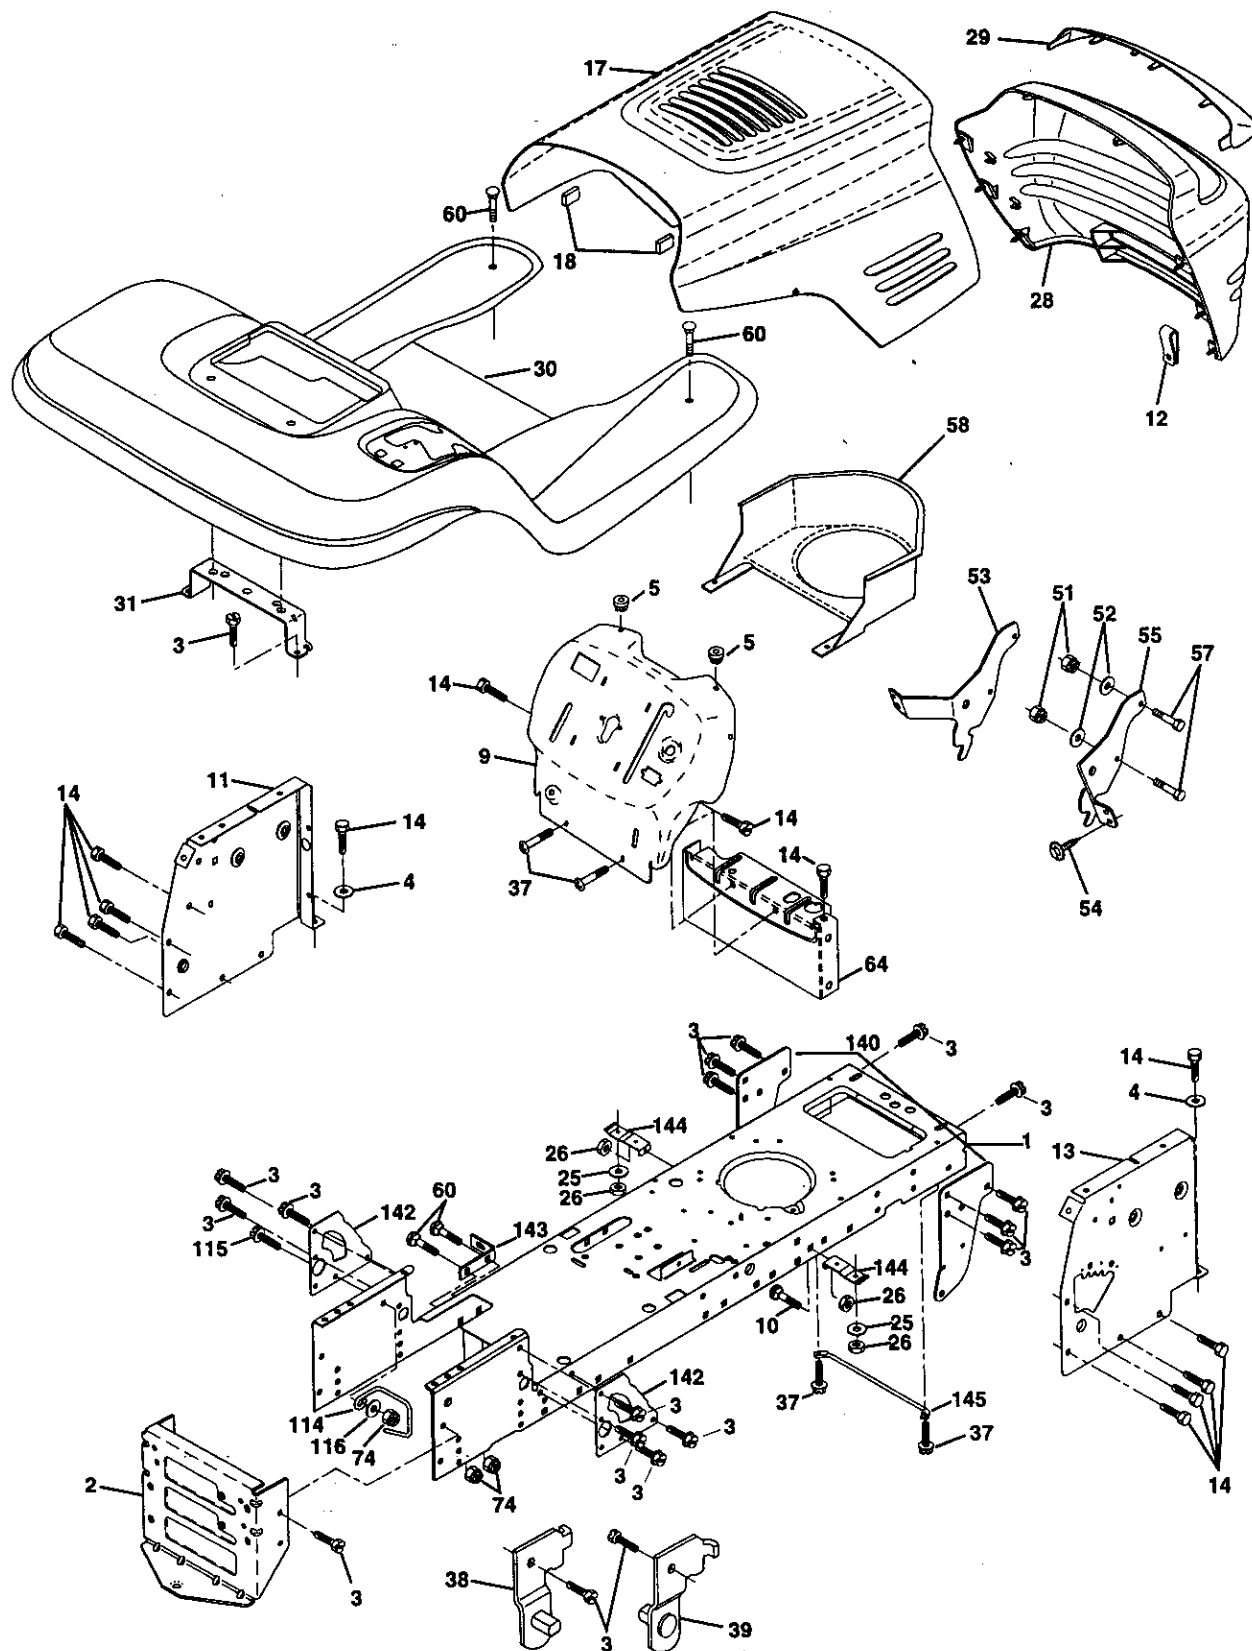

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

CHASSIS AND ENCLOSURES


| KEY PART NO. | PART NO. | DESCRIPTION |
|-----------------|-------------|---------------------------------------|
| 1 | 166819 | Chassis |
| 2 | 140356 | Drawbar, Stretch |
| 3 | 17490612 | Screw Thdrol 3/8-16x3/4 Ty-tt |
| 4 | STD551025 | Washer 13/32 x 3/4 x 16 Ga. |
| 5 | 155272 | Bumper Hood/Dash |
| 9 | 161917X014 | Dash P/L M, W/AMM N/HM |
| 10 | STD533710 | Bolt Carriage 3/8-16 x 1 |
| 11 | 155927 | Panel Dash Lh |
| 12 | 145660 | Clip Tinnerman Grille P/L |
| 13 | 155936 | Panel Dash Rh |
| 14 | 17490608 | Screw Thdrol 3/8-16x1/2 Ty-tt |
| 17 | 144983X558 | Hood LT/PL Husqvarna |
| 18 | 126938X | Bumper Hood |
| 25 | 19131312 | Washer 13/32 X 13/16 X 12 Ga |
| 26 | STD541437 | Nut Lock Hex W/Ins 3/8-16 Unc |
| 28 | 145198X558 | Grille W/Clips |
| 29 | 155217X599 | Lens Grille |
| 30 | 151287X558 | Fender Footrest STLT Pnt |
| 31 | 139976 | Bracket Support Fender |
| 37 | 17490508 | Screw Thdrol 6/16-18 x 1/2 TYT |
| 38 | 139886 | Bracket, Asm. Pivot, L.H., Mower Rear |
| 39 | 139887 | Bracket, Asm. Pivot, R.H., Mower Rear |
| 51 | 73800400 | Nut Lock Hex W/Ins 1/4-20 |
| 52 | 19091416 | Washer 9/32 x 7/8 x 16 Ga. |
| 53 | 145201 | Bracket Grille LH |
| 54 | 161464 | Screw Hex Wshd |
| 55 | 145202 | Bracket Grille Pickoff RH |
| 57 | STD522507 | Bolt Hex 1/4-20 x 3/4 |
| 58 | 150127 | Air Duct Engine P/L |
| 60 | STD533707 | Bolt Rdhd Sqnk 3/8-16unc x 3/4 |
| 64 | 154798 | Dash Lower STLT |
| 74 | STD541437 | Nut Crownlock 3/8-16 UNC |
| 114 | 158112 | Belt Keeper Rear Lh |
| 115 | 17490620 | Screw Thdrol 3/8-16 x 1-1/4 |
| 116 | 19131614 | Washer 13/32 x 1 x 14 |
| 140 | 158418 | Bracket, Front Suspension |
| 142 | 165867 | Plate Reinforcement STLT |
| 143 | 154966 | Bracket Swaybar Chassis |
| 144 | 154207 | Bracket Pnt Footrest STLT |
| 145 | 156524 | Rod Pivot Chassis/Hood |
| - - | 5479J | Plug Button |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR -- MODEL NUMBER 944.609760

DRIVE

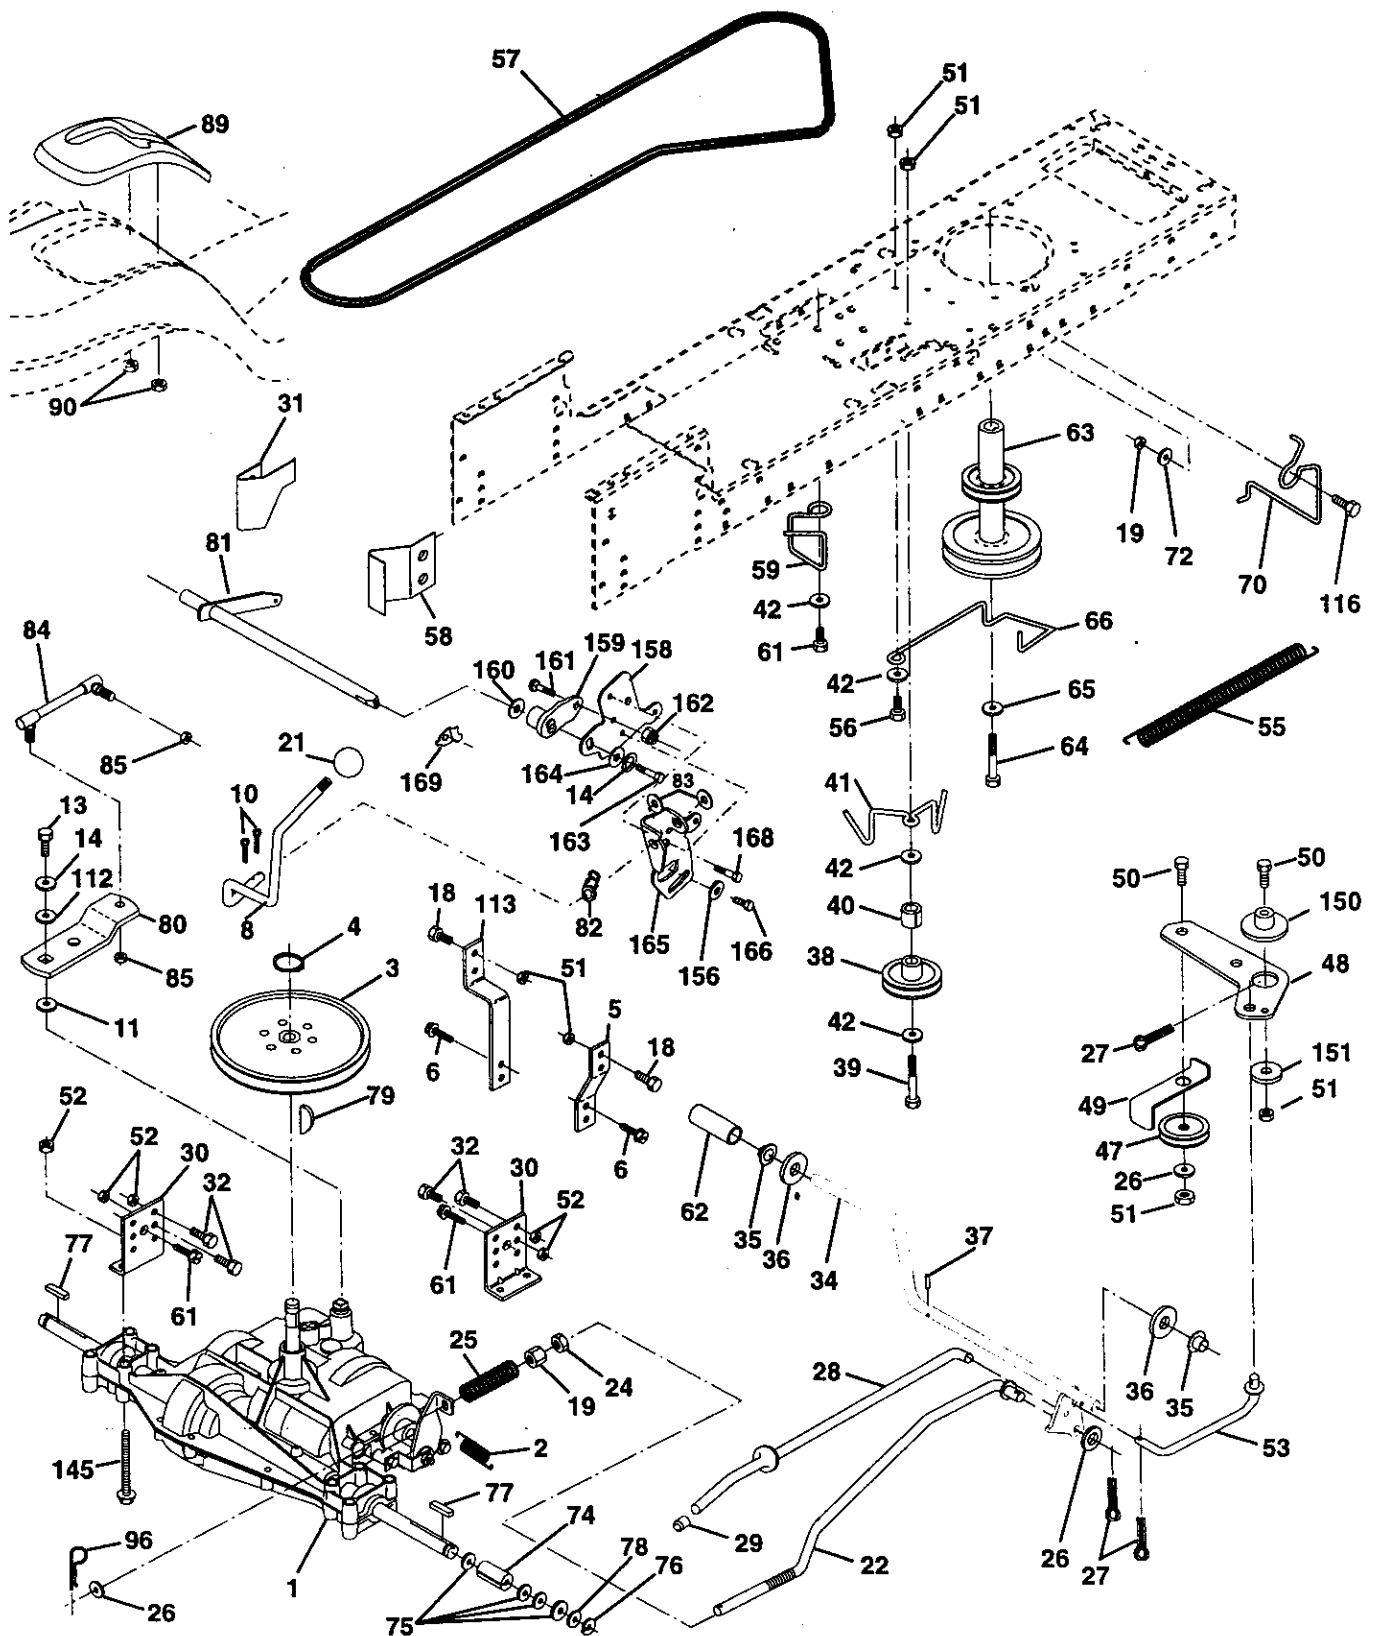

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

DRIVE


| KEY PART NO. NO. | DESCRIPTION | KEY PART NO. NO. | DESCRIPTION |
|---------------------|--|---------------------|---|
| 1 | ----- | 59 | 140312 Keeper Belt Span Ctr |
| 2 | 146682 Peerless 206-545C | 61 | 17490612 Screw Thdrol 3/8-16x3/4 Ty-tt |
| 3 | 123666X Spring Return Brake T/a Zinc | 62 | 8883R Cover Pedal Blk Round |
| 4 | 12000028 Pulley Transaxle 18" tires | 63 | 140186 Engine Pulley LT/YT |
| 5 | 121520X Ring Retainer # 5100-62 | 64 | 71170764 Bolt Hex |
| 6 | 17490512 Strap Torque 30 Degrees | 65 | STD551143 Washer Lock Hvy Hlcl Spr 7/16 |
| 8 | 165866 Screw Thdrol 5/16-18 X 3/4 TYT | 66 | 154778 Keeper Belt Engine Foolproof |
| 10 | STD561210 Rod Shifter | 70 | 134683 Guide Belt Mower Drive RH |
| 11 | 105701X Pin Cotter 1/8 X 1 Cad | 72 | 19132012 Washer 13/32 X 1-1/4 X 12 Ga |
| 13 | 74550412 Washer Plate Shf 388 Sq Hole | 74 | 137057 Spacer Split |
| 14 | 10040400 Bolt 1/4-28 Unf Gr 8 W/Patch | 75 | 121749X Washer 25/32 X 1 1/4 X 16 Ga |
| 18 | STD523710 Washer Lock Hvy Helical 1/4 | 76 | STD581075 E-ring #5133-75 |
| 19 | STD541437 Bolt, Fin Hex 3/8-16 UNC x 1 Gr. 5 | 77 | 123583X Toy Square 2 0 X 1845/ 1865 |
| 21 | 106933X Nut Lock 3/8-16 Unc | 78 | 121748X Washer 25/32 X 1-5/8 X 16 Ga |
| 22 | 130804 Knob | 79 | 2228M Key Woodruff |
| 24 | STD541237 Rod Brake Blk Zinc 26 840 | 80 | 145090 Arm Shift |
| 25 | 106888X Nut Hex Jam 3/8-16 Unc | 81 | 165592 Shaft Asm Cross |
| 26 | STD551037 Spring Rod Brake 2 00 Zinc | 82 | 165711 Spring Torsion T/a |
| 27 | STD561210 Washer 13/32 X 13/16 X 16 Ga | 83 | 19171216 Washer 17/32 X 3/4 X 16 Ga |
| 28 | 145204 Pin Cotter 1/8 X 3/4 Cad | 84 | 166231 Link Transaxle |
| 29 | 124236X Rod Brake Parking LT/YT | 85 | 150360 Nut Lock Center 1/4 - 28 FNTHD |
| 30 | 130807 Cap Brake Parking | 86 | 157480 Bushing |
| 31 | 127275X Bracket Mtg Transaxle | 87 | 19212016 Washer 21/32 X 1-1/4 X 16 Ga |
| 32 | STD523107 Keeper Belt LH LT 14 Ga | 88 | 12000008 Ring Klip #5304-62 |
| 34 | 155071 Bolt Hex Hd 5/16-18unc X 3/4 | 89 | 158391X428 Console Shift STLT |
| 35 | 120183X Shaft Asm Pedal Foot | 90 | 124346X Nut Self-thd Wsh-hd 1/4 Zinc |
| 36 | STD551062 Bearing Nylon Blk 629 Id | 96 | 4497M Retainer Spring |
| 37 | STD571810 Washer 21/32 X 1 X 16 Ga | 112 | 19091210 Washer 9/32 x 3/4 x 10 Ga. |
| 38 | 131494 Pin Roll 3/16 X 1" | 113 | 127285X Strap Torque Lh |
| 39 | STD523727 Pulley Idler Flat | 116 | 72110610 Bolt Rdhd Sq Neck 3/8-16 x 1.25 |
| 40 | 4470J Bolt Fin Hex 3/8-16unc X 2-3/4 | 145 | 74490540 Bolt Hex 5/16-18 Gr. 5 |
| 41 | 165838 Spacer Split 395 X 59 Bzp | 150 | 165850 Bushing Bellcrank Grd Drive |
| 42 | 19131312 Keeper Belt Idler | 151 | 19133210 Washer 13/32 x 2 x 10 Ga. |
| 47 | 127783 Washer 13/32 X 13/16 X 12 Ga | 156 | 166002 Washer Srted 5/16ld x 1 1.125 |
| 48 | 154407 Pulley Idler V Groove Plastic | 158 | 165589 Bracket Shift Mount |
| 49 | 123205X Bellcrank Cludth Grnd Drv Stl | 159 | 165494 Hub Tapered Flange Shift Lt |
| 50 | STD523715 Retainer Belt Style Spring | 160 | 19292016 Washer 29/32 x 1-1/4 x 16 Ga |
| 51 | STD541437 Bolt Hex Hd 3/8-16unc X 1-1/2 | 161 | 72140406 Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5 |
| 52 | STD541431 Nut Crownlock 3/8-16 Unc | 162 | 73680400 Nut Crownlock 1/4-20 Unc |
| 53 | 105710X Nut Crownlock 5/16-18 Unc | 163 | 74780416 Bolt Hex Fin 1/4-20 Unc x 1 Gr 5 |
| 55 | 105709X Link Clutch | 164 | 19091010 Washer 5/8 x .281 x 10 Ga |
| 56 | STD523712 Spring Return Clutch 6 75 | 165 | 165623 Bracket Pivot Lever |
| 57 | 130801 Bolt Fin Hx 3/8-16 X 1/4 | 166 | 166880 Screw 5/16-18 x 5/8 |
| 58 | 127274X V-Belt Ground Drive | 168 | 165492 Bolt Shoulder 5/16-18 x .561 |
| | | 169 | 165580 Plate Fastening Lt |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

STEERING ASSEMBLY

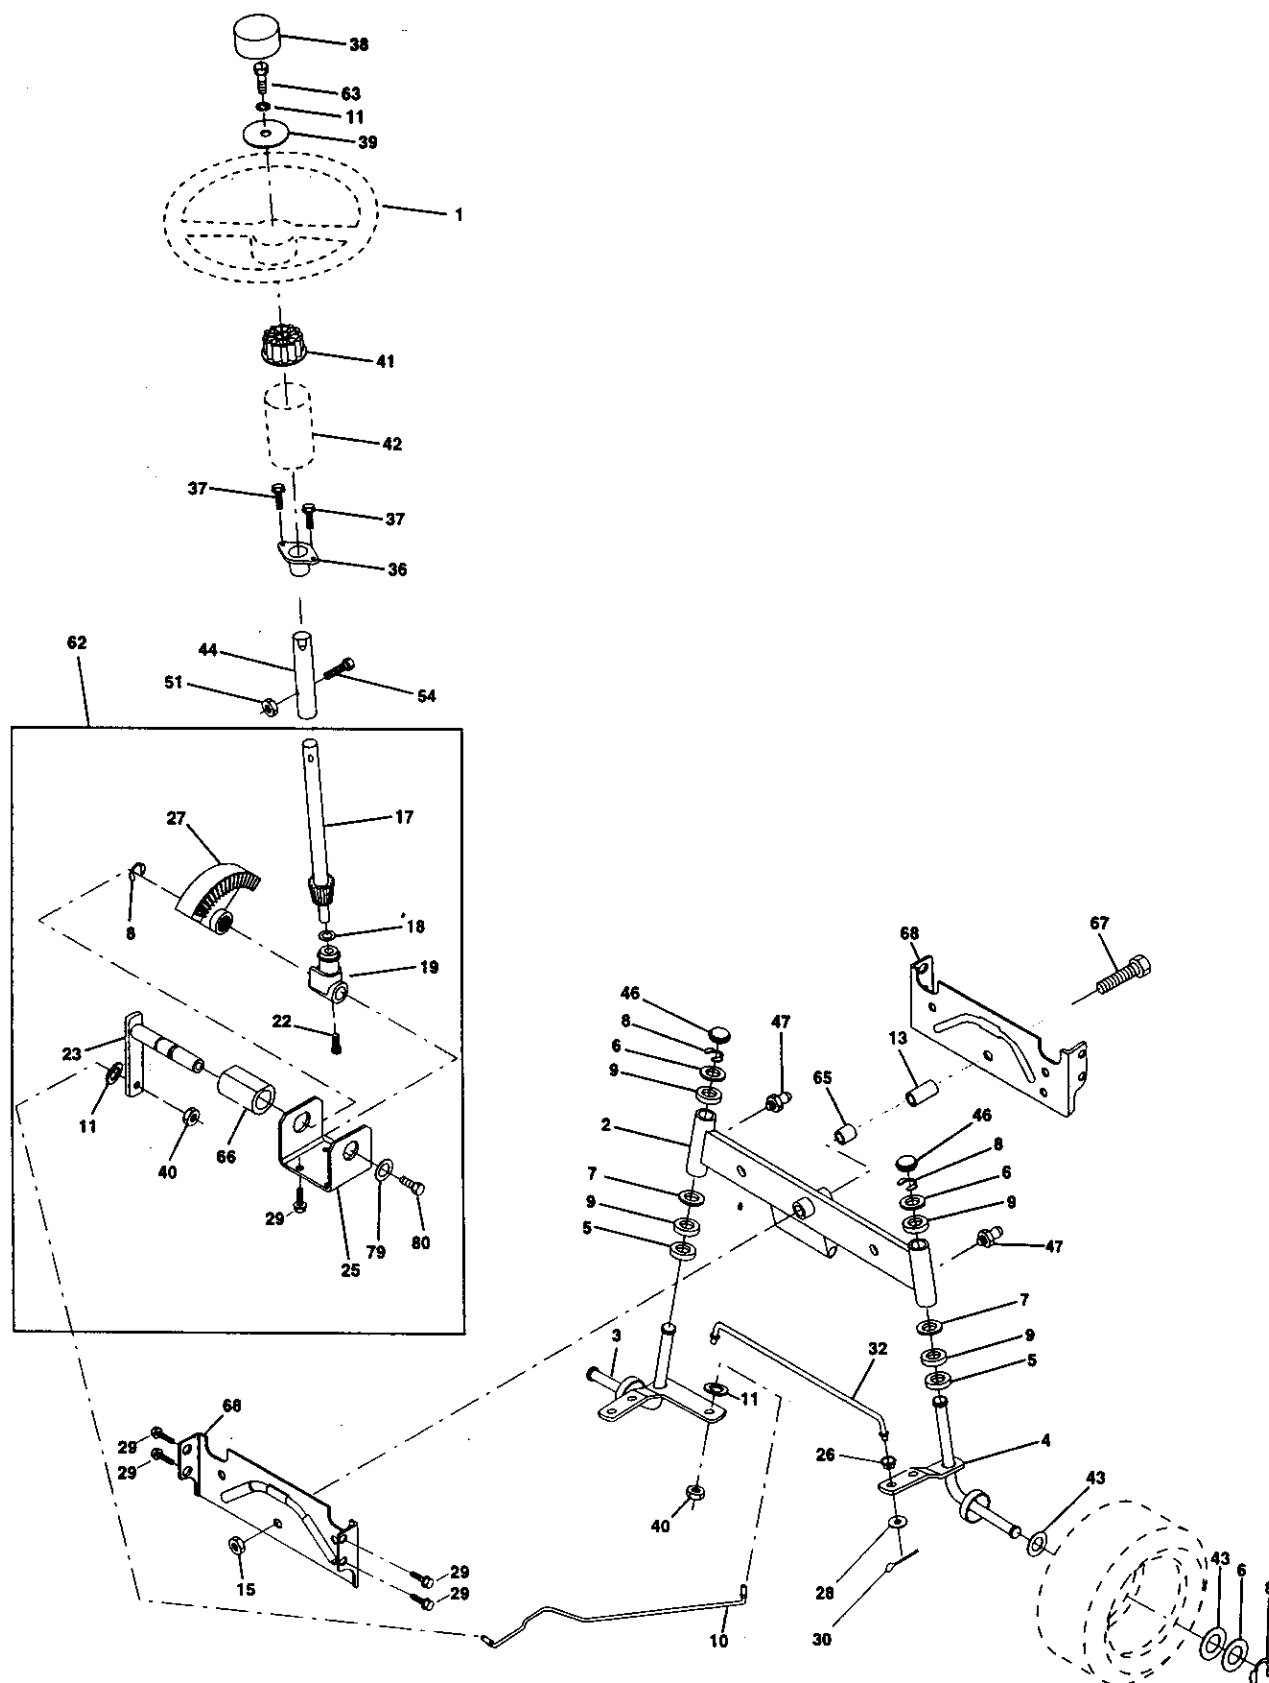

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

STEERING ASSEMBLY


| KEY PART NO. | NO. | DESCRIPTION |
|-----------------|-----------|----------------------------------|
| 1 | 139768 | Wheel Steering |
| 2 | 154427 | Axle Asm STMP Dropped STL |
| 3 | 156483 | Spindle Asm LH |
| 4 | 157473 | Spindle Asm RH |
| 5 | 6266H | Bearing Race Thrust Harden |
| 6 | 121748X | Washer 25/32 X 1-5/8 X 16 Ga |
| 7 | 19272016 | Washer 27/32 X 1-1/4 X 16 Ga |
| 8 | 12000029 | Ring Klip #t5304-75 |
| 9 | 3366R | Bearing Col Strg Blk |
| 10 | 156438 | Link Drag Extended Stamp |
| 11 | STD551137 | Washer Lock Hvy Hlcl Spr 3/8 |
| 13 | 154779 | Bearing Axle STLT/GT |
| 15 | 73901000 | Nut Lock Flange 5/8-11 Unc |
| 17 | 156546 | Shaft Asm Strg |
| 18 | 57079 | Washer Thrust 515x 750x 033 |
| 19 | 160395 | Support Shaft |
| 22 | 165857 | Screw Hex Wsh Hd Torx |
| 23 | 165851 | Shaft Asm Pittman |
| 25 | 154406 | Bracket Steering |
| 26 | 126847X | Bushing Link Drag Blk LR |
| 27 | 136874 | Gear Sector |
| 28 | 19131416 | Washer 13/32 X 7/8 X 16 Ga |
| 29 | 17490612 | Screw Thdrol 3/8-16x3/4 Ty-tt |
| 30 | STD561210 | Pin Cotter 1/8 X 3/4 Cad |
| 32 | 130465 | Rod Tie Wire Form 19 75 Mech |
| 36 | 155099 | Bushing Strg |
| 37 | 152927 | Screw |
| 38 | 139769 | Insert Cap Strg Wh Au |
| 39 | 19133808 | Washer 13/32 X 2-3/8 X 8 Ga |
| 40 | STD541537 | Lock nut |
| 41 | 100711L | Adaptor Wheel Strg |
| 42 | 145054 | Boot Steering Shaft |
| 43 | 121749X | Washer 25/32 X 1 1/4 X 16 Ga |
| 44 | 153720 | Extension Steering Shaft LR/LT |
| 46 | 121232X | Cap Spindle Fr Top Blk |
| 47 | 6855M | Fitting Grease |
| 51 | STD541431 | Nut Lock Hex w/Ins 5/16-18 |
| 54 | STD523112 | Bolt Fin Hex 5/16-18 Unc x 1-1/4 |
| 62 | 167902 | Kit, Steering Assembly Svc |
| 63 | STD523710 | Bolt Fin Hex 3/8-16unc x 1 Gr. 5 |
| 65 | 154780 | Spacer Axle |
| 66 | 154404 | Bearing Arm Pittman |
| 67 | 74781044 | Bolt, Fin Hex 5/8-11 UNC x 2-3/4 |
| 68 | 154429 | Axle, Brace |
| 79 | 19132012 | Washer 13/32 x 1-1/4 x 12 Ga. |
| 80 | 74950612 | Bolt Hex Nylon 3/8-16 x 3/4 |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

SEAT ASSEMBLY

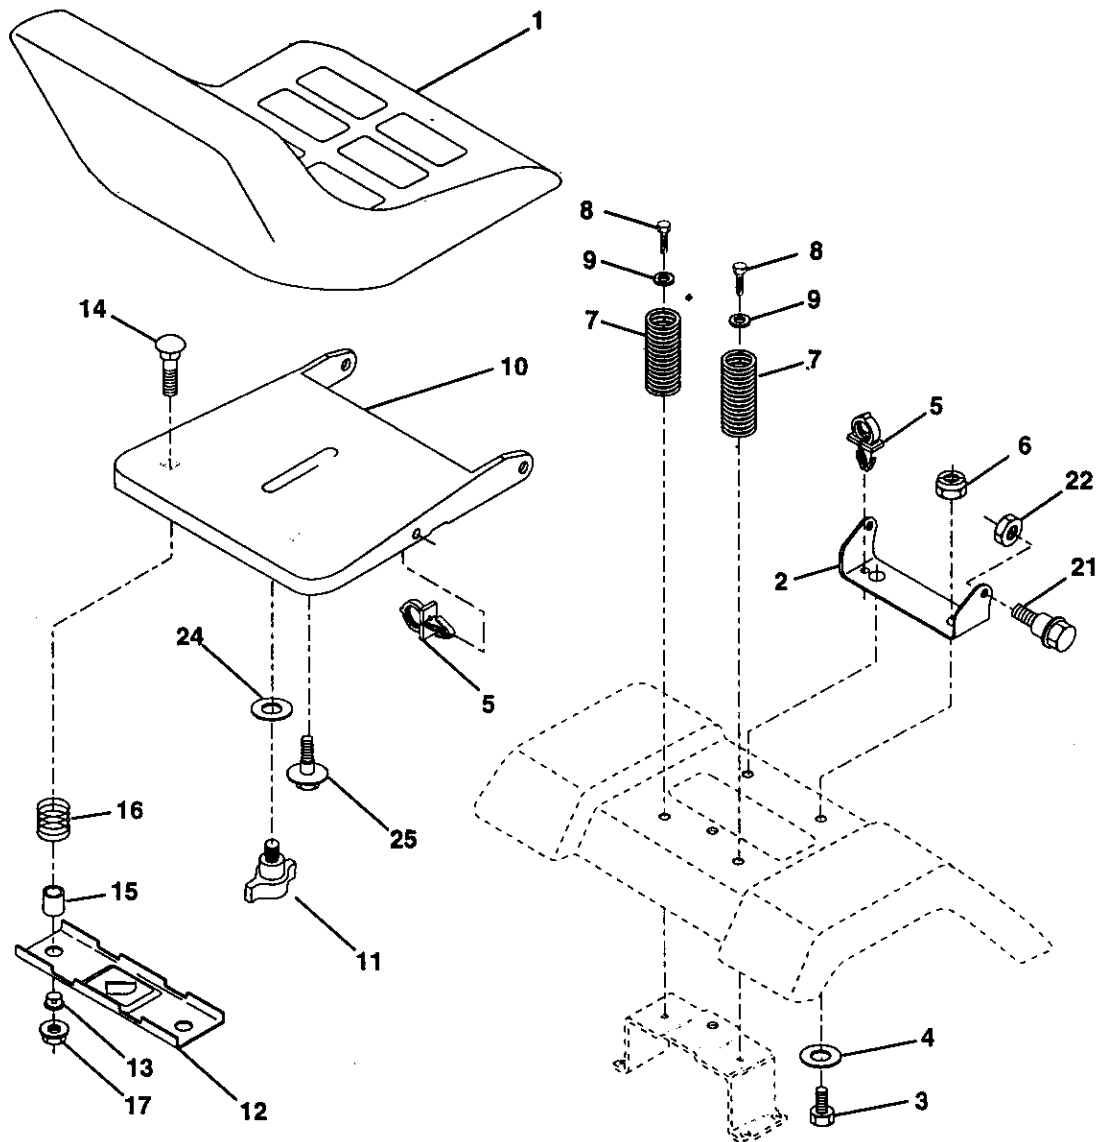

| KEY NO. | PART NO. | DESCRIPTION |
|---------|-----------|--------------------------------|
| 1 | 140123 | Seat |
| 2 | 140551 | Bracket Pivot Seat 8 720 |
| 3 | STD523710 | Bolt Fin Hex 3/8-16unc X 1 |
| 4 | 19131610 | Washer 13/32 X 1 X 10 Ga |
| 5 | 145006 | Clip Push-In |
| 6 | STD541437 | Nut Hex w/Ins. 3/8-16 Unc |
| 7 | 124181X | Spring Seat Cprsn 2 250 Blk Zi |
| 8 | 17490616 | Screw Thdrol 3/8-16 X 1 Ty-tt |
| 9 | 19131614 | Washer 13/32 X 1 X 14 Ga. |
| 10 | 155925 | Pan Seat |
| 11 | 166369 | Knob Seat |


| KEY NO. | PART NO. | DESCRIPTION |
|---------|-----------|--------------------------------|
| 12 | 121246X | Bracket Mounting Switch |
| 13 | 121248X | Bushing Snap Blk Nyl 50 Id |
| 14 | 72050412 | Bolt Rdhd Sqnk 1/4-20x1-1/2 |
| 15 | 134300 | Spacer Split 28x 96 Yel Zinc |
| 16 | 121250X | Spring Cprsn 1 27 Blk Pnt |
| 17 | 123976X | Nut Lock 1/4 Lge Flg Gr 5 Zinc |
| 21 | 153236 | Bolt Shoulder 5/16-18 Unc |
| 22 | STD541431 | Nut Hex Lock W/Ins 5/16-18 |
| 24 | 19171912 | Washer 17/32 X 1-3/16 X 12 Ga. |
| 25 | 127018X | Bolt Shoulder 5/16-18 X 62 |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760


DECALS

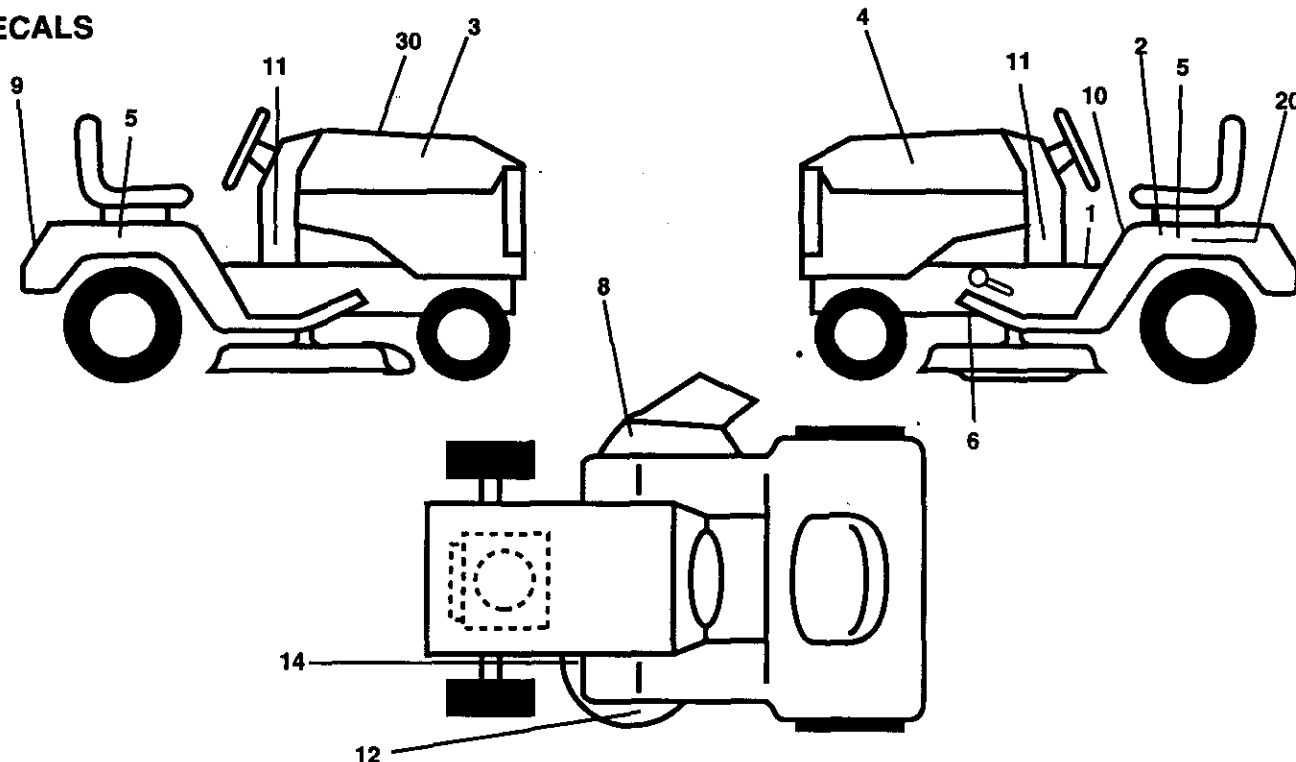

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|-------------------------------|
| 1 | 156369 | Decal Fend STLT Oper |
| 2 | 138047 | Decal Battery Diehard Sears |
| 3 | 163200 | Decal Hood RH |
| 4 | 163202 | Decal Hood LH |
| 5 | 163207 | Decal Fend Sd Wht Rad/6sp 42" |
| 6 | 146046 | Decal V Belt Drive Sch |
| 8 | 137259 | Decal Warning Mult-Language |
| 9 | 163204 | Decal Craftsman |
| 10 | 157140 | Decal Fender Danger Eng/Fr |
| 11 | 163262 | Decal Pnl Dash Kohler |

| KEY NO. | PART NO. | DESCRIPTION |
|---------|----------|--------------------------------|
| 12 | 166887 | Decal Mower EZ3 |
| 14 | 160396 | Decal V-Belt Schematic |
| 20 | 149517 | Decal Bat Dan/Psn |
| 30 | 169330 | Decal Replacement Parts |
| -- | 154515 | Pad Footrest LH STLT |
| -- | 154516 | Pad Footrest RH STLT |
| -- | 138311 | Decal Handle Lft Height Adjust |
| -- | 168527 | Manual Owner's (English) |
| -- | 168528 | Manual Owner's (French) |

WHEELS & TIRES

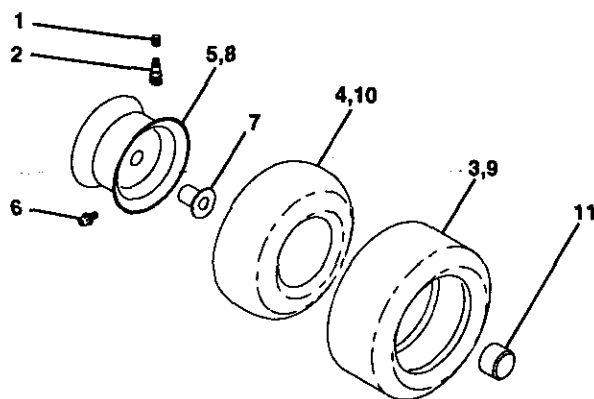


| KEY NO. | PART NO. | DESCRIPTION |
|---------|------------|-----------------------------------|
| 1 | 59192 | Cap Valve Tire |
| 2 | 65139 | Stem Valve |
| 3 | 106222X | Tire F Ts 15 X 6 0 - 6 Service |
| 4 | 59904 | Tube Front (Service Item Only) |
| 5 | 106732X427 | Rim Asm 6"front Service |
| 6 | 278H | Fitting Grease (Front Wheel Only) |
| 7 | 9040H | Bearing Flange (Front Wheel Only) |
| 8 | 106108X427 | Rim Asm 8"rear Service |
| 9 | 122082X | Tire R Ts 20x10-8 C Service |
| 10 | 7152J | Tube Rear (Service Item Only) |
| 11 | 104757X | Cap Axle Blk 1 50 X 1 00 |
| -- | 144334 | Sealant, Tire (10 oz. Tube) |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

ENGINE

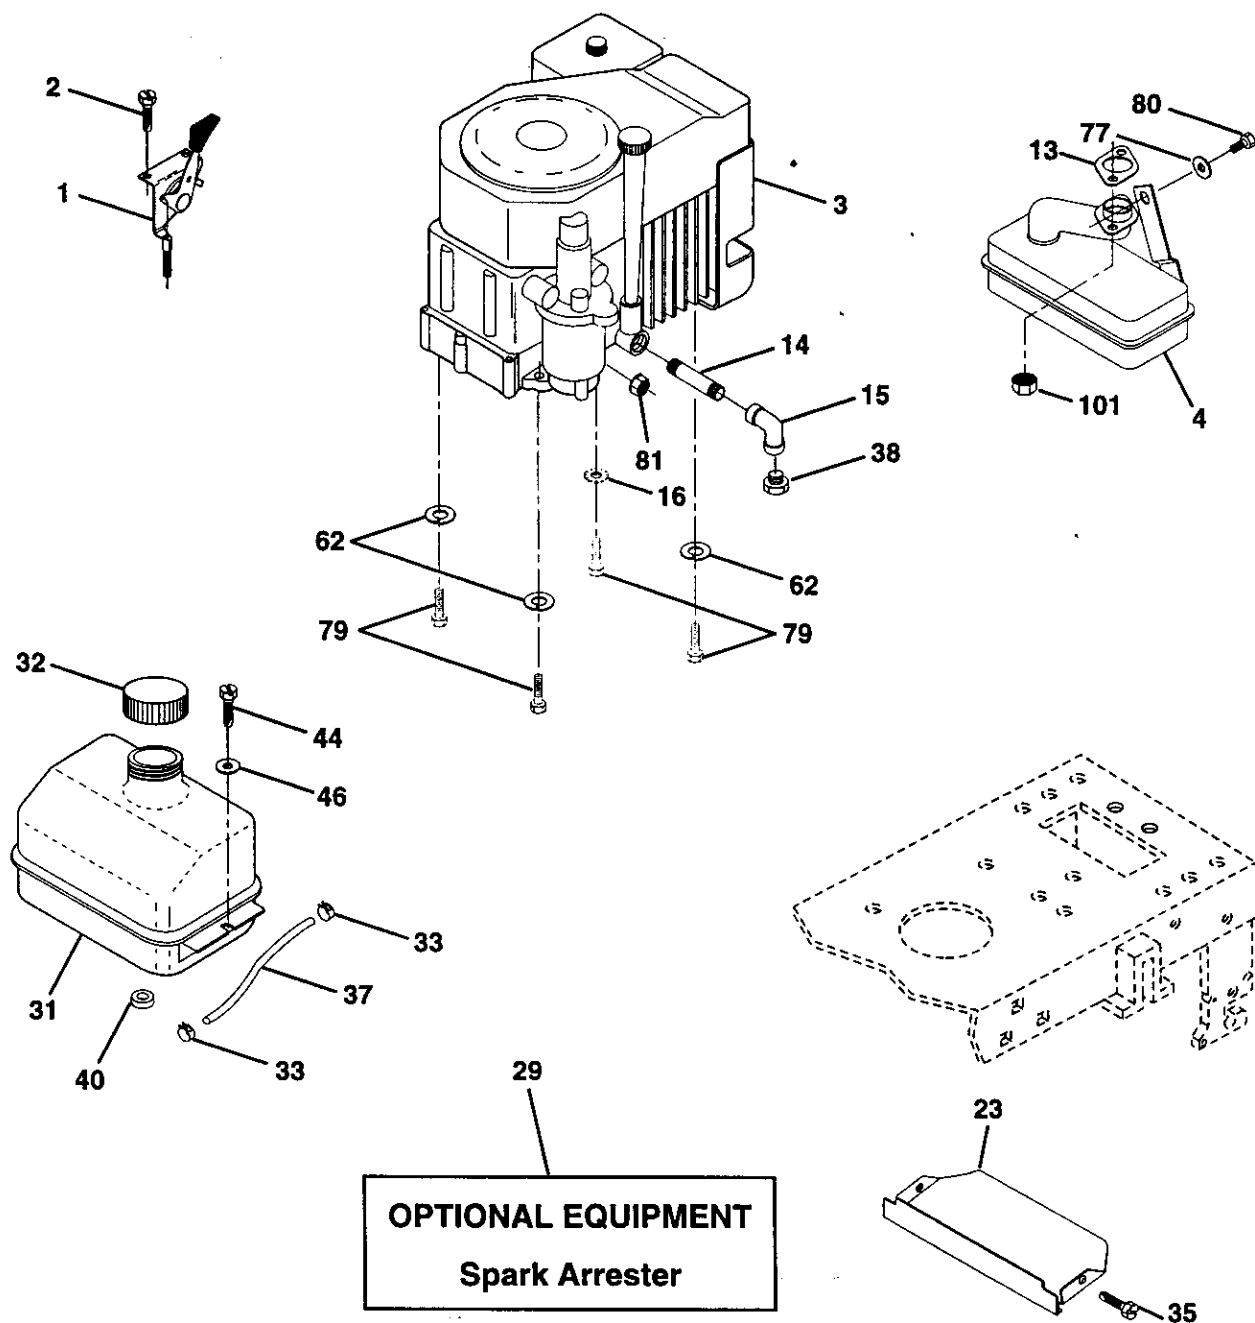

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

ENGINE


| KEY NO. | PART NO. | DESCRIPTION |
|---------|------------|--|
| 1 | 162156 | Control, Throttle |
| 2 | 17720410 | Screw, Hex Head, Thread Cutting 1/4-20 x 5/8 |
| 3 | ----- | Engine (See Breakdown) Kohler Model CV16S-43519 |
| 4 | 159420 | Muffler |
| 13 | 12-041-03 | Gasket |
| 14 | 13280328 | Nipple, Pipe 3/8 NPT x 3-1/2 |
| 15 | 13200300 | Elbow, Standard 90°, 3/8-18 NPT |
| 16 | STD551231 | Washer |
| 23 | 159880 | Shield, Browning |
| 29 | 137180 | Arrestor, Spark |
| 31 | 109202X | Tank, Fuel |
| 32 | 158990 | Cap Assembly, Fuel Sears, Vented |
| 33 | 123487X | Clamp, Hose |
| 35 | 17490512 | Screw Thdrol. 5/16-18 x 3/4 TYT |
| 37 | 137040 | Line, Fuel |
| 38 | --- | Plug, Oil Drain (Order From Engine Manufacturer) |
| 40 | 124028X | Bushing, Snap, Fuel Line |
| 44 | 17490412 | Screw, Hex Washer Head, Thd., Roll. 1/4-20 x 3/4 |
| 46 | 19091416 | Washer 9/32 x 7/8 x 16 Gauge |
| 62 | STD551131 | Washer, Lock |
| 77 | 19101216 | Washer 5/16 x 3/4 x 16 Ga. |
| 79 | M740108025 | Bolt Hex |
| 80 | STD523105 | Bolt Hex Hd 5/16-18 UNC x 1/2 |
| 81 | 128861 | Nut Flange 1/4-20 UNC Starter Nut |
| 101 | M73030800 | Nut M8-1.25 |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

MOWER DECK

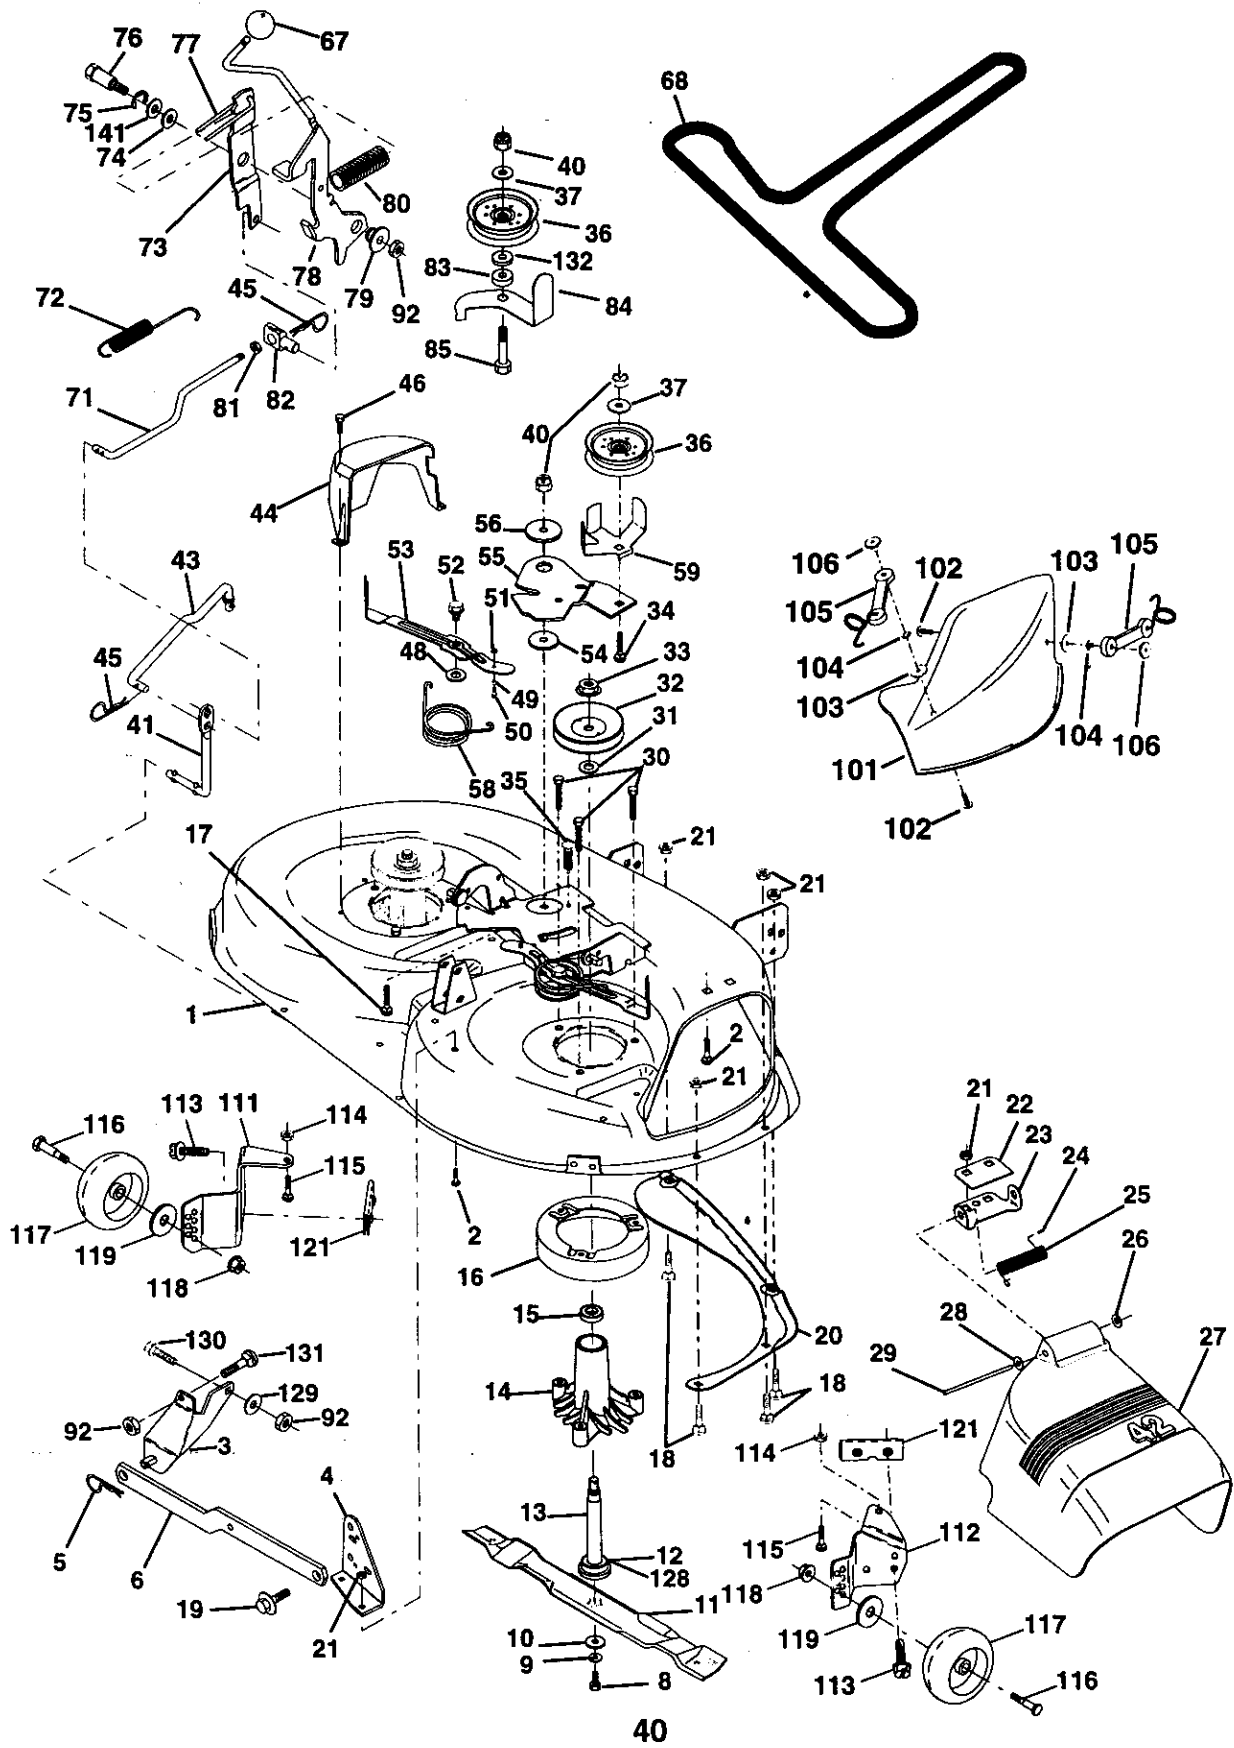

REPAIR PARTSREPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

MOWER DECK


| KEY NO. | PART NO. | DESCRIPTION | KEY NO. | PART NO. | DESCRIPTION |
|---------|-----------|---|---------|-----------|--|
| 1 | 164961 | Mower Deck Assembly, 42" | 53 | 131845 | Arm Assembly, Pad, Brake |
| 2 | STD533107 | Bolt | 54 | 133943 | Washer, Hardened |
| 3 | 138017 | Bracket Asm Fr. Sway Bar 3/42 | 55 | 155046 | Arm, Idler |
| 4 | 138440 | Bracket Asm Deck 42" Sway Bar | 56 | 122052X | Spacer, Retainer |
| 5 | STD624008 | Retainer Spring | 58 | 140086 | Spring Torsion Brakes |
| 6 | 130832 | Arm, Suspension, Rear | 59 | 141043 | Guard TUV Idler |
| 8 | 850857 | Bolt 3/8-24 x 25 Grade 8 patched | 67 | 162113 | Knob Custom Oval |
| 9 | STD551137 | Washer, Lock | 68 | 144200 | V-Belt, 42" Mower |
| 10 | 140296 | Washer, Hardened | 71 | 142427 | Rod, Clutch, Primary |
| 11 | 134149 | Blade, Mulching, 42" Std(Originally equipped with) | 72 | 131870 | Spring, Retainer |
| | 138498 | Blade Mower 42" Hi-Lift Std (For better bagging, especially in wet conditions) | 73 | 127847 | Arm, Clutch, Secondary |
| | 139775 | Blade Mulching 42" Premium (For better wear when mulching) | 74 | 121748X | Washer 25/32 x 1-5/8 x 16 Gauge |
| | 138971 | Blade Mower 42" Hi-lift Premium (For better wear when bagging in heavy or wet conditions) | 75 | 12000029 | Ring, Klip |
| 12 | 129895 | Bearing, Ball #6204 | 76 | 128903 | Bolt, Shoulder 3/8-16 UNC x 1.44 |
| 13 | 137645 | Shaft Assembly, Mandrel, Vented | 77 | 127845 | Keeper, Spring |
| 14 | 128774 | Housing, Mandrel, Vented | 78 | 160570 | Arm, Clutch, Primary |
| 15 | 110485X | Bearing, Ball, Mandrel | 79 | 127498 | Bushing, Large, Brass |
| 16 | 140329 | Stripper, Vented Mower Deck | 80 | 153701 | Spring, Mower Clutch |
| 17 | 72110610 | Bolt, Rdhd Sqnk 3/8-16 x 1-1/4 | 81 | STD541237 | Nut Hex Jam 3/8-16 UNC |
| 18 | STD533106 | Bolt, Carriage 5/16-18 x 5/8 | 82 | 142028 | Trunnion Adj |
| 19 | 132827 | Bolt, Shoulder | 83 | 120958X | Washer Sintered |
| 20 | 159770 | Baffle, Vortex | 84 | 156084 | Keeper Belt Idler |
| 21 | STD541431 | Nut | 85 | 72140620 | Bolt Rdhd Sq 3/8-16unc x 2-1/2 |
| 22 | 134753 | Stiffener Bracket | 92 | STD541437 | Nut, Lock, Hex W/Ins 3/8-16 UNC |
| 23 | 131267 | Bracket, Deflector Mower 42" | 101 | 136420 | Mulcher Cover |
| 24 | 105304X | Cap, Sleeve 80 x 112 Blk Mower | 102 | 71161010 | Screw |
| 25 | 123713X | Spring, Torsion, Deflector 2 52 | 103 | 19061216 | Washer, Flat |
| 26 | 110452X | Nut, Push Phos & Oil | 104 | 10071000 | Washer, Lock |
| 27 | 130968 | Shield, Deflector 42" Blk | 105 | 160793 | Latch Assembly |
| 28 | 19111016 | Washer 11/32 x 5/8 x 16 Gauge | 106 | 2029J | Nut, Weld |
| 29 | 131491 | Rod, Hinge 42" 6 75 W/G | 111 | 155197 | Bracket, Gauge, Wheel LH |
| 30 | 157722 | Screw Thdrol Rolling Washer Head | 112 | 155198 | Bracket, Gauge, Wheel RH |
| 31 | 129963 | Washer, Spacer Mower Vented | 113 | 17490512 | Screw, Thdrol 5/16 - 18 UNC x 3/4 |
| 32 | 153535 | Pulley, Mandrel | 114 | STD541431 | Nut, Keps 5/16 - 18 UNC |
| 33 | 137266 | Nut, Toplock 9/16 | 115 | 72110504 | Bolt, Carriage 5/16-18 x 1/2 |
| 34 | STD533717 | Bolt | 116 | 4898H | Bolt, Shoulder |
| 35 | 133835 | Fastener, Christmas Tree | 117 | 165746 | Wheel, Gauge |
| 36 | 131494 | Pulley, Idler, Flat | 118 | 73930600 | Nut Centerlock 3/8-16 |
| 37 | STD551037 | Washer 13/32 x 13/16 x 16 Gauge | 119 | 19121414 | Washer 3/8 x 7/8 x 14 Ga. |
| 40 | STD541437 | Nut | 121 | 143723 | Bracket, Extruded |
| 41 | 133551 | Rod, Pivot, with Nibs | 128 | 153390 | Washer, Felt |
| 43 | 140083 | Rod, Clutch, Secondary, with Nibs | 129 | 19131312 | Washer 13/32 x 13/16 x 12 Ga. |
| 44 | 140088 | Guard, Mandrel, LH | 130 | STD523710 | Bolt Fin Hex 3/8-16 UNC x 1 Gr. 5 |
| 45 | STD624003 | Retainer | 131 | STD533710 | Bolt Rdhd Sqnk 3/8-16 UNC x 1 |
| 46 | 137729 | Screw, Thdrol 1/4-20 x 5/8 T | 132 | 19132203 | Spacer Washer 13/32 ID x 1-3/8 OD x 1/4 |
| 48 | 133944 | Washer, Hardened | 141 | 6266H | Washer Thrust .75 x 1.230 |
| 49 | 155066 | Roller Assembly, Cam Follower | -- | 130794 | Mandrel Assembly (Includes Key Numbers 8-10,12-15, 31 and 33) |
| 50 | 131340 | Bolt, Shoulder #10-24 Grade 5 | -- | 164963 | Mower Deck, Complete (Standard Deck - Order separately mulcher plate and gauge wheel components Key Nos. 101-106, and 111-121) |
| 51 | STD541410 | Locknut | | | |
| 52 | 139888 | Bolt, Shoulder 5/16-18 UNC | | | |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

MOWER LIFT

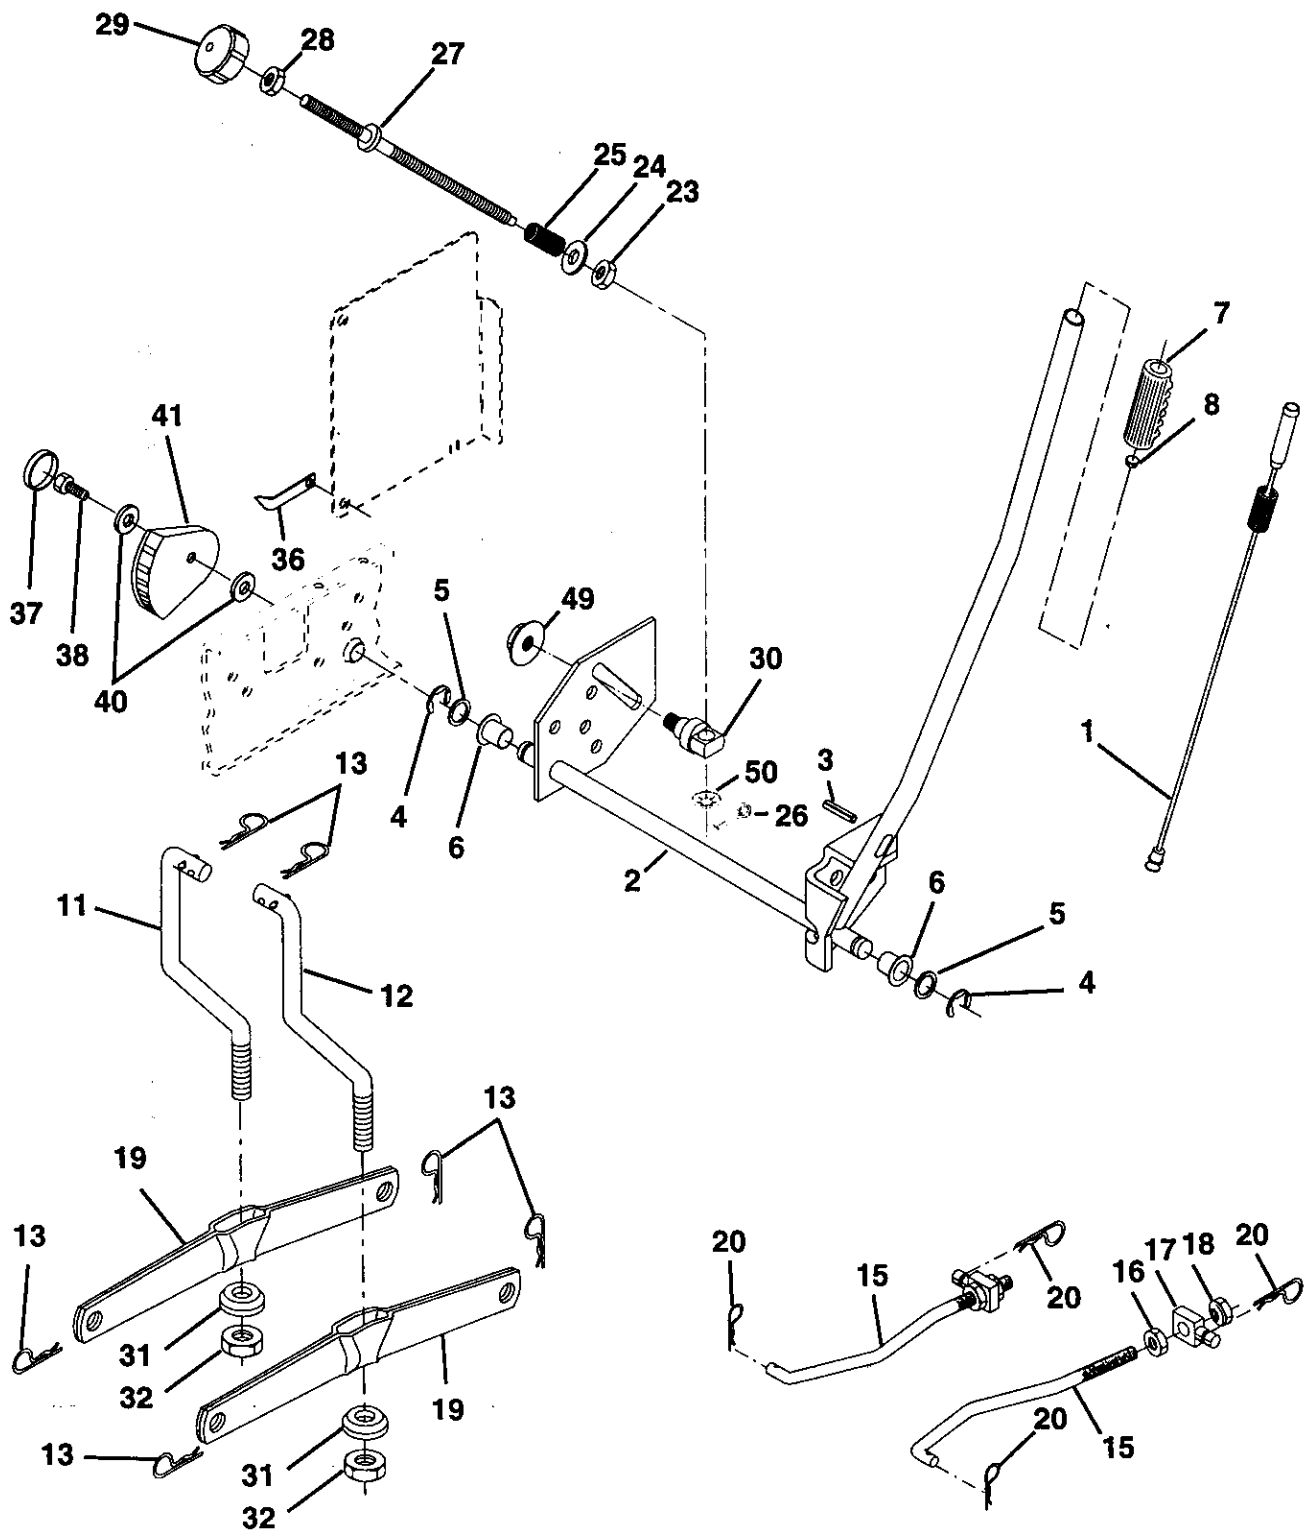

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

MOWER LIFT


| KEY NO. | PART NO. | DESCRIPTION |
|---------|-----------|--------------------------------|
| 1 | 159460 | Wire Asm Inner W/Plunge5r |
| 2 | 159471 | Shaft Asm Lift |
| 3 | 105767X | Pin Groove |
| 4 | STD581062 | E Ring #5133-62 |
| 5 | 19211621 | Washer 29/32 x 1-1/4 x 21 Ga. |
| 6 | 120183X | Bearing Nylon Blk .629 ID |
| 7 | 125631X | Grip Handle Fluted |
| 8 | 122365X | Button, Plunger |
| 11 | 139865 | Link Lift Lh Fixed Length |
| 12 | 139866 | Link Lift Rh Fixed Length |
| 13 | STD624008 | Retainer Spring |
| 15 | 127218 | Link Front |
| 16 | 73350800 | Nut Jam Hex 1/2-13 Unc |
| 17 | 130171 | Trunnion Blk Zinc |
| 18 | 73800800 | Nut Lock W/Wsh 1/2-13 Unc |
| 19 | 139868 | Arm Suspension Rear |
| 20 | 163552 | Spring Retainer |
| 23 | 110807X | Nut Special |
| 24 | 19131016 | Washer 13/32 X 5/8 X 16 Ga |
| 25 | 2876H | Spring |
| 26 | STD560907 | Pin Cotter 3/32 x 1/2 |
| 27 | 126971X | Rod Adjust Lift |
| 28 | 73350600 | Nut Hex Jam 3/8-16 Unc |
| 29 | 138057 | Knob Infinite 3/8-16 Unc Black |
| 30 | 150233 | Trunnion Infinite Height |
| 31 | 140302 | Bearing Pvt. Lift Spherical |
| 32 | 73540600 | Nut Lock 3/8-24 |
| 36 | 155097 | Pointer Height Indicator |
| 37 | 123935X | Plug Hole |
| 38 | 17490512 | Screw Thdrol 5/16-18 x 3/4 |
| 40 | 19112410 | Washer |
| 41 | 155098 | Indicator Height |
| 49 | 145212 | Nut Hex Flange Lock |
| 50 | 110452X | Nut Push Phos & Oil |

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

PEERLESS TRANSAXLE - MODEL NUMBER 206-545C

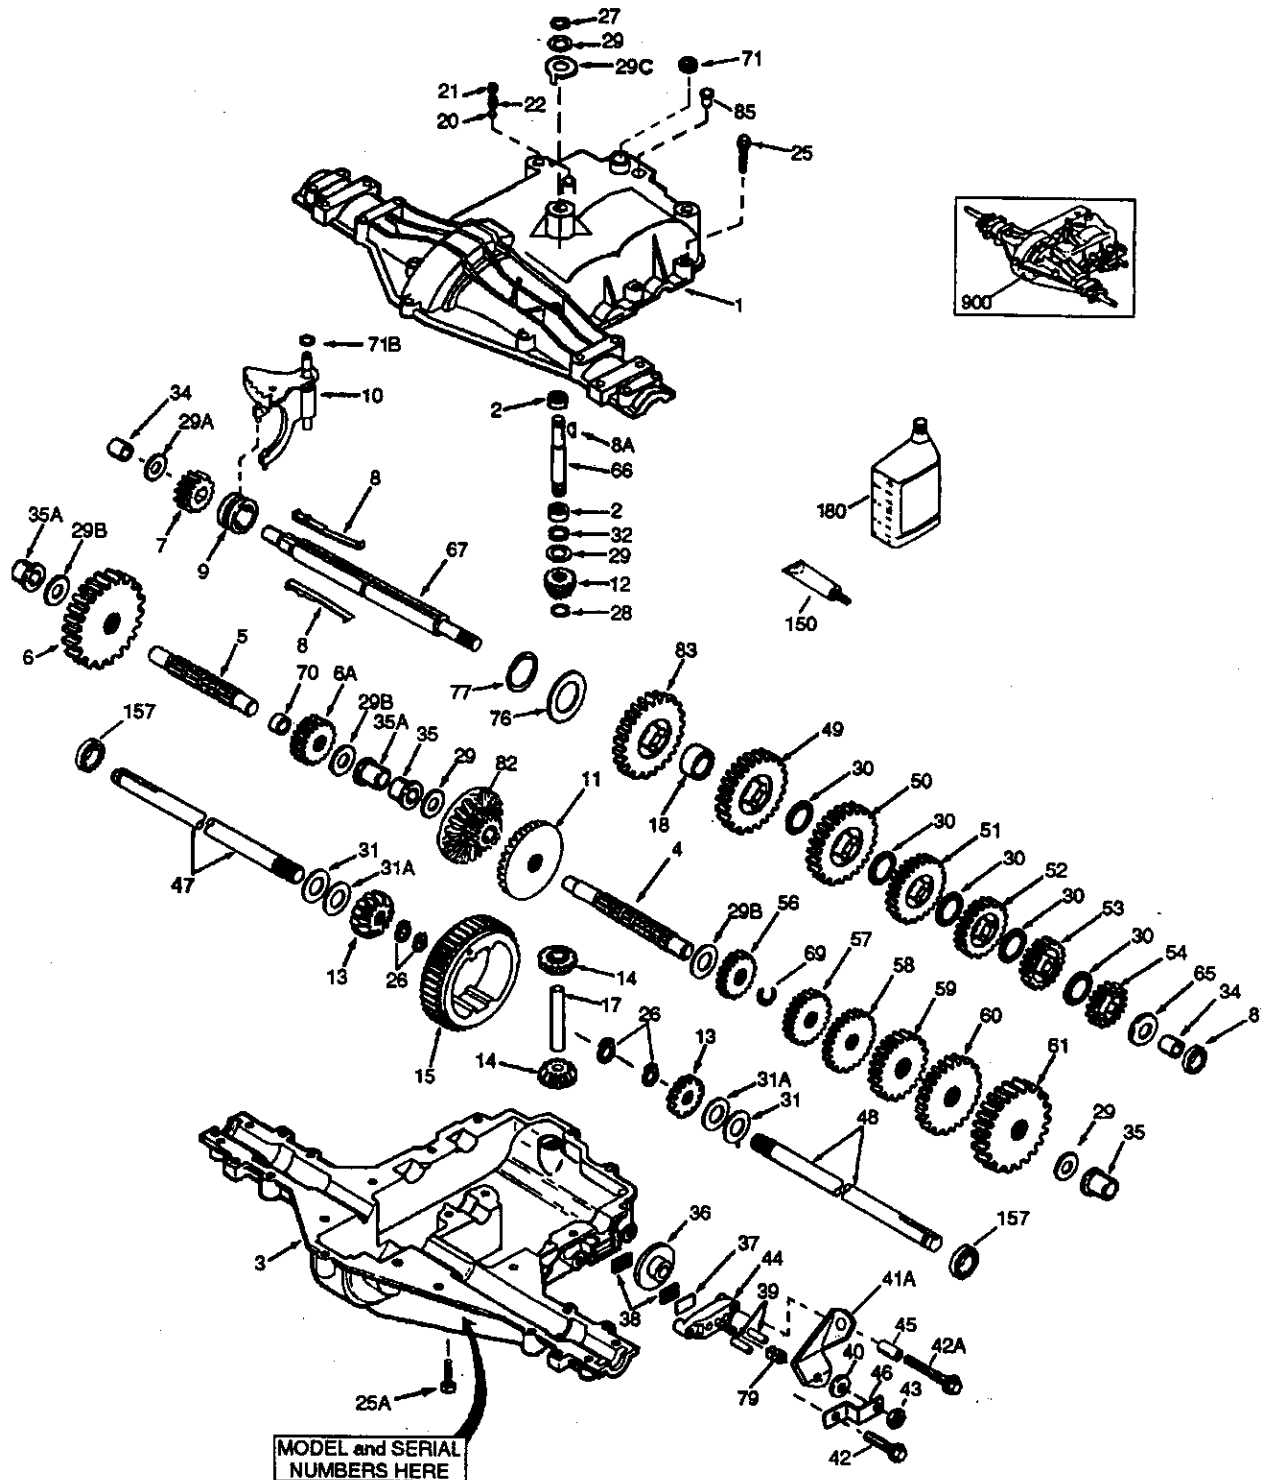

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

PEERLESS TRANSAXLE - MODEL NUMBER 206-545C

KEY PART NO. NO.

| | | |
|-----|---------|---|
| 1 | 772147 | Transaxle Cover |
| 2 | 780086A | Needle Bearing 5/8" |
| 3 | 770128 | Transaxle Case |
| 4 | 776395 | Countershaft |
| 5 | 776409 | Output Shaft |
| 6 | 778364 | Spur Gear (38 teeth) |
| 6A | 778369 | Spur Gear (15 teeth) |
| 7 | 778330 | Spur Gear (11 teeth) |
| 8 | 792180 | Shift Key |
| 8A | 792047 | Woodruff Key #9 |
| 9 | 784352 | Shift Collar |
| 10 | 784378 | Shift Rod & Fork |
| 11 | 778334 | Bevel Gear (30 teeth) |
| 12 | 778309 | Input Bevel Pinion (13 teeth) |
| 13 | 778368 | Bevel Gear (13 teeth) (Include. 14) |
| 14 | 778368 | Bevel Pinion (13 teeth) (Include. 13) |
| 15 | 778370 | Ring Gear (43 teeth) |
| 17 | 786188 | Drive Pin |
| 18 | 786102 | Spacer 1.130 X .695 |
| 20 | 792077A | Ball 5/16" dia |
| 21 | 792078 | Set Screw 3/8 - 16 x 3/8" |
| 22 | 792079 | Spring .310 OD x .625 L |
| 25 | 792073A | Screw 1/4 - 20 x 1-1/4" |
| 25A | 792177 | Screw 1/4-20 x 1-3/8" |
| 26 | 792125 | Retaining Ring (pkg of 2) |
| 27 | 792035 | Retaining Ring |
| 28 | 788040 | Retaining Ring |
| 29 | 780072 | Thrust Washer .627 ID x .031W |
| 29A | 780160 | Thrust Washer .762 ID x .031W |
| 29B | 780051 | Thrust Washer .762 ID x .031W |
| 29C | 780199 | Anti-Rotation Washer .632 |
| 30 | 780108 | Cup Washer 1.127 ID x .032W |
| 31 | 780001 | Flat Washer .750 ID x .056W (Use As Needed) |
| 31A | 780195 | Flat Washer .750 ID x .062W |
| 32 | 788083 | Oil Seal 5/8" |
| 34 | 780194 | Bushing .563 |
| 35 | 780193 | Flanged Bushing 5 / 8" ID |
| 35A | 780197 | Flanged Bushing .751 |
| 36 | 790075 | Brake Disk |
| 37 | 790007 | Brake Pad Plate |
| 38 | 799021 | Brake Pad (pkg of 2) |
| 39 | 786026 | Dowel Pin |
| 40 | 792076A | Flat Washer .312 ID x .059W |

KEY PART NO. NO.

| | | |
|-----|---------|--------------------------------------|
| 41A | 790079 | Brake Lever |
| 42 | 792073A | Screw 1/4 - 20 x 1-1/4" |
| 42A | 792085A | Screw 1/4 - 20 x 2 1/4" |
| 43 | 792075 | Locknut 5 / 16 - 24 |
| 44 | 790025 | Brake Pad Holder |
| 45 | 786066 | Spacer .2625 x 1.0 |
| 46 | 786086 | Brake Lever Bracket |
| 47 | 774690 | Axle (11-15 / 16" Long) |
| 48 | 774691 | Axle (16 - 1 / 2" long) |
| 49 | 778356 | Spur Gear (29 teeth) |
| 50 | 778338 | Spur Gear (27 teeth) |
| 51 | 778354 | Spur Gear (23 teeth) |
| 52 | 778352 | Spur Gear (19 teeth) |
| 53 | 778350 | Spur Gear (16 teeth) |
| 54 | 778346 | Spur Gear (15 teeth) |
| 56 | 778355 | Spur Gear (11 teeth) |
| 57 | 778337 | Spur Gear (13 teeth) |
| 58 | 778353 | Spur Gear (17 teeth) |
| 59 | 778351 | Spur Gear (21 teeth) |
| 60 | 778349 | Spur Gear (24 teeth) |
| 61 | 778345 | Spur Gear (25 teeth) |
| 65 | 780189 | Flat Washer .563 ID x .062W |
| 66 | 776422 | Input Shaft |
| 67 | 776396 | Shifter & Brake Shaft |
| 69 | 792170 | Retaining Ring |
| 70 | 786187 | Spacer .890 |
| 71 | 788069 | Square Cut Ring |
| 71B | 788092 | "O" Ring |
| 76 | 780090 | Flat Washer 1.128 ID x .058W |
| 77 | 788078A | Inverted Retaining Ring |
| 79 | 792144 | Spring .430 OD x .5000 L |
| 82 | 778333 | Bevel & Spur Gear (30 & 13 teeth) |
| 83 | 778338 | Spur Gear (27 teeth) |
| 85 | 792154 | Oil Fill Plug |
| 87 | 788089A | Oil Seal 9 / 16" |
| 150 | 788093A | Liquid Gasket RTV Silicone |
| 157 | 788088A | Oil Seal 3 / 4" |
| 180 | 730229A | Gear Oil 80W90 |
| 900 | 794712 | Replacement MST - 206-545C Transaxle |


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS


TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519

CYLINDER HEAD, VALVE AND BREATHER

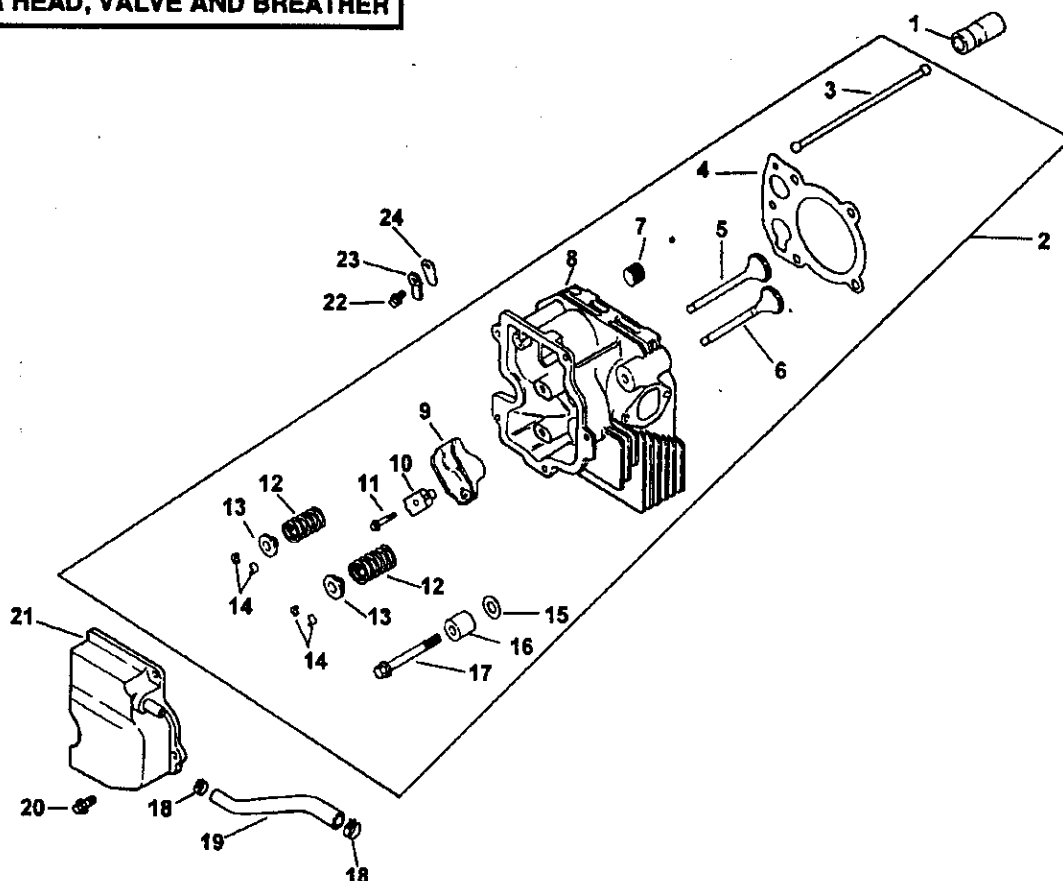

CRANKCASE

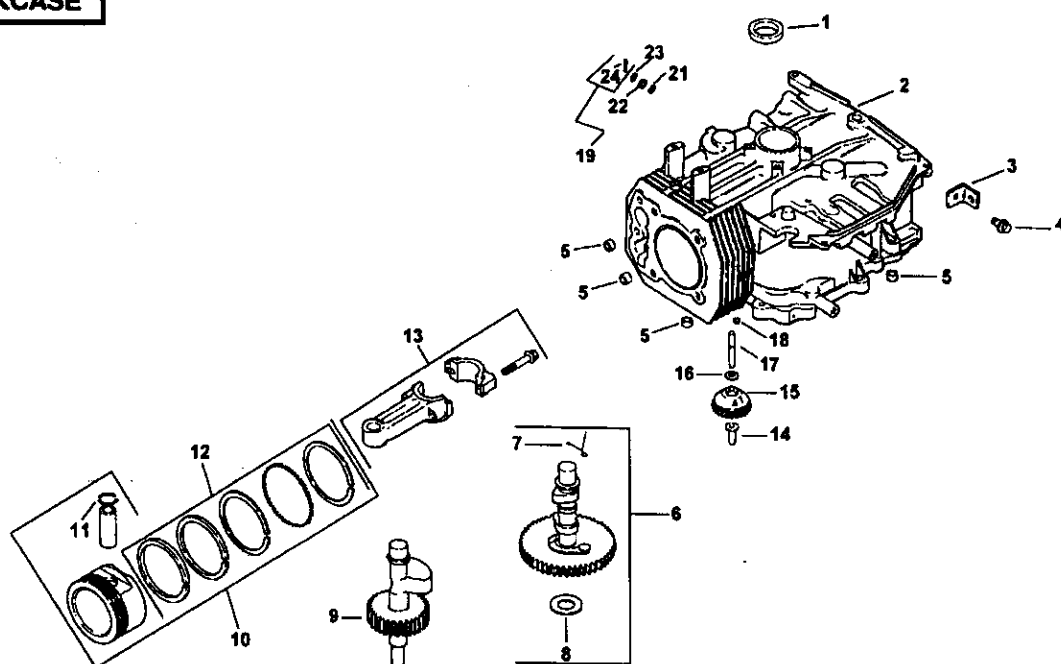

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519

CYLINDER HEAD/VALVE/BREATHER

| KEY PART NO. NO. | DESCRIPTION |
|---------------------|------------------------------------|
| 1 25-351-01 | Lifter, valve (2) |
| 2 12-755-81 | Kit, cylinder head (Includes 3-17) |
| 12-041-01 | Carburetor gasket(2) |
| 12-041-02 | Air cleaner base gasket |
| 12-041-03 | Exhaust manifold gasket |
| 3 12-411-01 | Rod, push (2) |
| 4 12-041-10 | Gasket, cylinder head |
| 5 12-017-01 | Valve, intake (Std.) |
| 12-017-02 | Valve, intake (.25) |
| 6 12-016-01 | Valve, exhaust (Std.) |
| 12-016-02 | Valve, exhaust (.25) |
| 7 X-75-23 | Plug, allen hd. pipe 1/8 |
| 8 12-318-19 | Cylinder Head |
| 9 25-186-01 | Arm, rocker (2) |
| 10 12-599-03 | Pivot, rocker arm (2) |
| 11 M-0640034 | Screw, hex. flange M6x1.0x34 (2) |
| 12 12-089-01 | Spring, valve (2) |
| 13 12-173-01 | Cap, valve spring (2) |
| 14 12-755-03 | Kit, retainer (2) |
| 15 12-468-05 | Washer, plain 13/32 |
| 16 12-112-13 | Spacer, head bolt exhaust port |
| 17 12-086-15 | Screw, hex. flange M10x1.5x81 (5) |
| 18 X-426-9 | Clamp, hose (2) |
| 19 12-326-03 | Hose, breather |
| 20 M-0645020 | Screw, hex. flange M6x1.0x20 (5) |
| 21 12-096-07 | Cover, valve w/nipple |
| 22 M-0545010 | Screw, hex. flange M5x0.8x10 |
| 23 12-018-01 | Retainer, breather reed |
| 24 12-402-02 | Reed, breather |

CRANKCASE


| KEY PART NO. NO. | DESCRIPTION |
|---------------------|---|
| 1 12-032-03 | Seal, crankshaft |
| 2 Block, cylinder | (Use Short Block 12 522 18) |
| 3 12-445-02 | Strap, lifting |
| 4 M-0839025 | Screw, hex. flange M8x1.25x25 |
| 5 12-380-17 | Dowel, locating (4) |
| 6 12-755-49 | Kit, camshaft (Includes 7,8) |
| 7 12-089-31 | Spring, actuating |
| 8 12-422-08 | Shim, camshaft (A.R.) blue |
| 12-422-09 | Shim, camshaft (A.R.) red |
| 12-422-10 | Shim, camshaft (A.R.) yellow |
| 12-422-11 | Shim, camshaft (A.R.) green |
| 12-422-12 | Shim, camshaft (A.R.) gray |
| 12-422-13 | Shim, camshaft (A.R.) black |
| 12-422-07 | Shim, camshaft (A.R.) white |
| 9 12-144-27 | Shaft, balance |
| 10 12-874-07 | Piston w/Ring Set (Std.) (Includes 11-12) |
| 24-874-11 | Piston w/Ring Set (.08) |
| 12-874-08 | Piston w/Ring Set (.25) |
| 12-874-09 | Piston w/Ring Set (.50) |
| 11 12-018-02 | Retainer, piston pin (2) |
| 12 12-108-07 | Ring Set (Std.) |
| 12-108-08 | Ring Set (.25) |
| 12-108-09 | Ring Set (.50) |
| 13 12-067-05 | Connecting Rod (Std.) |
| 12-067-06 | Connecting Rod (.25) |
| 14 12-380-01 | Pin, governor regulating |
| 15 12-043-05 | Gear, governor assembly |
| 16 M-0631005 | Washer, plain 6mm |
| 17 12-144-02 | Shaft, governor gear |
| 18 52-139-09 | Plug, cup |
| 19 12-755-64 | Kit, gov. cross shaft w/clip (Includes 24) |
| 21 X-25-102 | washer, plain 1/4 |
| 22 12-032-01 | Seal, governor cross shaft |
| 23 SM-0631015 | Washer, plain 6mm |
| 24 12-154-05 | Clip, hitch pin |

REPAIR PARTS


TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519



IGNITION / ELECTRICAL

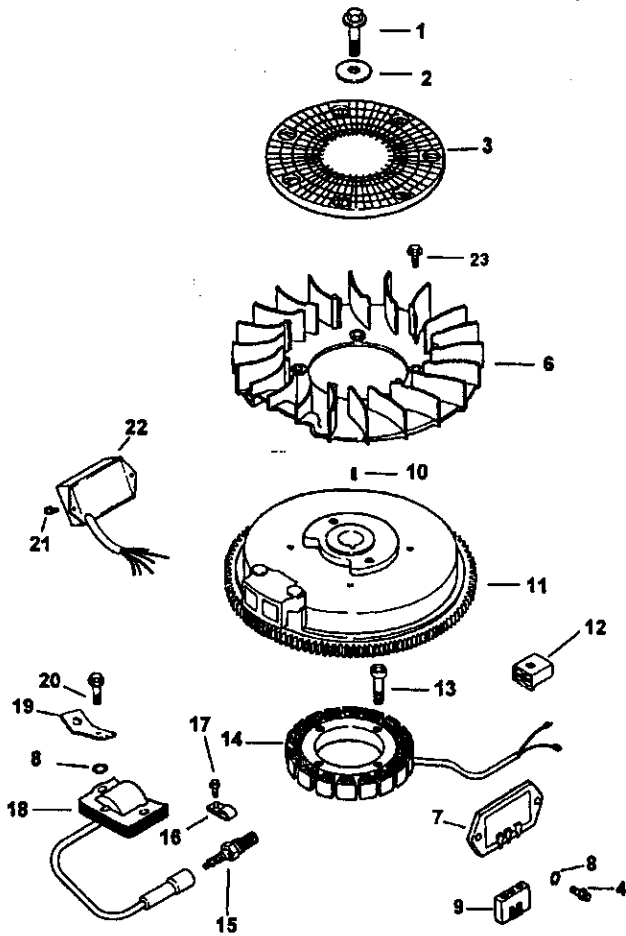

BLOWER HOUSING AND BAFFLES

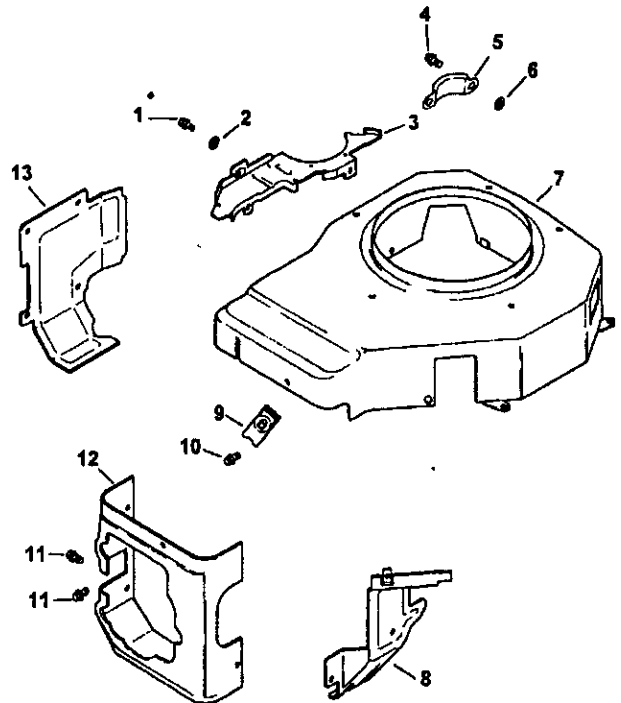

AIR INTAKE

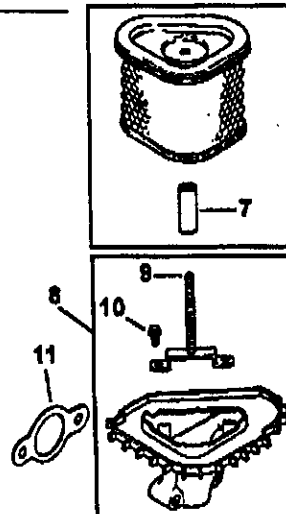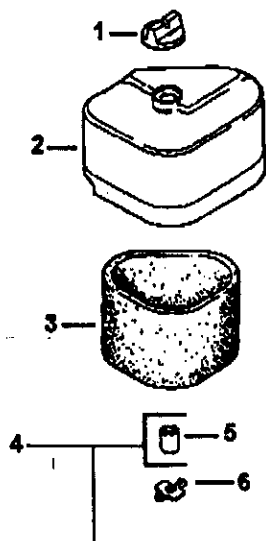

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519

IGNITION/ELECTRICAL

| KEY PART NO. NO. | DESCRIPTION |
|------------------------|----------------------------------|
| 1 12-086-14 | Screw, hex. flange M10x1.5x46 |
| 2 12-468-03 | Washer, plain 3/8 |
| 3 24-162-03 | Screen, grass |
| 4 M-0639016 | Screw, hex. flange M6x1.0x16 (6) |
| 6 12-157-03 | Fan |
| 7 41-403-09 | Regulator, rectifier |
| 8 X-22-11 | Washer, lock (2) |
| 9 236602 | Connector |
| 10 X-42-15 | Key |
| 11 12-025-35 | Flywheel |
| 12 41-155-02 | Connector (4 contact) |
| 13 M-0548025 | Screw, hex. cap M5x0.8x25 (2) |
| 14 12-085-01 | Stator assembly - 15 amp |
| 15 12-132-02 | Spark Plug |
| 16 X-728-1 | Clip, cable |
| 17 M-0545010 | Screw, hex. flange M5x0.8x10 (2) |
| 18 12-584-08 | Module, ignition |
| 19 12-452-02 | Terminal |
| 20 12-086-35 | Screw, hex. socket M5x0.8x20 (2) |
| 21 M-0461013 | Screw, pan head M4.2x13 (2) |
| 22 12-584-12 | Module, speed advance |
| 23 25-086-47 | Shoulder M6X1.0X16 (4) |
| NOT ILLUSTRATED | |
| 25-518-29 | Lead |
| 25-518-05 | Lead |
| 12-176-36 | Harness |
| X-25-5 | Washer, plain 5/16" |
| 12-155-02 | Connector |
| 23-517-03 | Clip Cable |

BLOWER HOUSING & BAFFLES

| KEY PART NO. NO. | DESCRIPTION |
|------------------------|---------------------------------------|
| 1 M-0545010 | Screw, hex. flange M5x0.8x10 (8) |
| 2 24-468-10 | Washer, plain 1/4 |
| 3 12-146-07 | Plate, blower housing |
| 4 24-086-18 | Screw, phillip hd M4x0.7 X8 (2) |
| 5 24-096-05 | Cover, pinion |
| 6 220534 | Washer, plain 5/16 (2) |
| 7 12-027-54 | Housing, blower |
| 8 12-063-10 | Baffle, intake side |
| 9 25-154-02 | Clip, mounting (3) |
| 10 12-086-37 | Screw, captive washer M5 X0.8 X20 (3) |
| 11 M-0645016 | Screw, hex. flange M6x1.0x16 (2) |
| 12 12-063-08 | Baffle, cylinder head |
| 13 12-063-09 | Baffle, cylinder |
| NOT ILLUSTRATED | |
| X-25-92 | WASHER, PLAIN 3/16" (2) |

AIR INTAKE/FILTRATION


| KEY PART NO. NO. | DESCRIPTION |
|------------------------|--|
| 1 25-341-03 | Knob, air cleaner cover |
| 2 12-096-24 | Cover, air cleaner |
| 3 12-083-12 | Precleaner, element |
| 4 12-083-10 | Kit air cleaner element (Includes 5,7) |
| 5 12-300-46 | Seal 3/4" |
| 6 12-100-01 | Wing Nut |
| 7 12-032-11 | Seal 1-7/16" |
| 8 12-094-07 | Base, air cleaner (Includes 10,11) |
| 9 12-072-04 | Stud, mounting plate M6X1.0X75 |
| 10 12-086-01 | Screw, #10 Hi-Lo thread forming (2) |
| 11 12-041-02 | Gasket, air cleaner |
| NOT ILLUSTRATED | |
| 12-113-53 | Decal, air cleaner |

REPAIR PARTS


TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519


STARTING SYSTEM

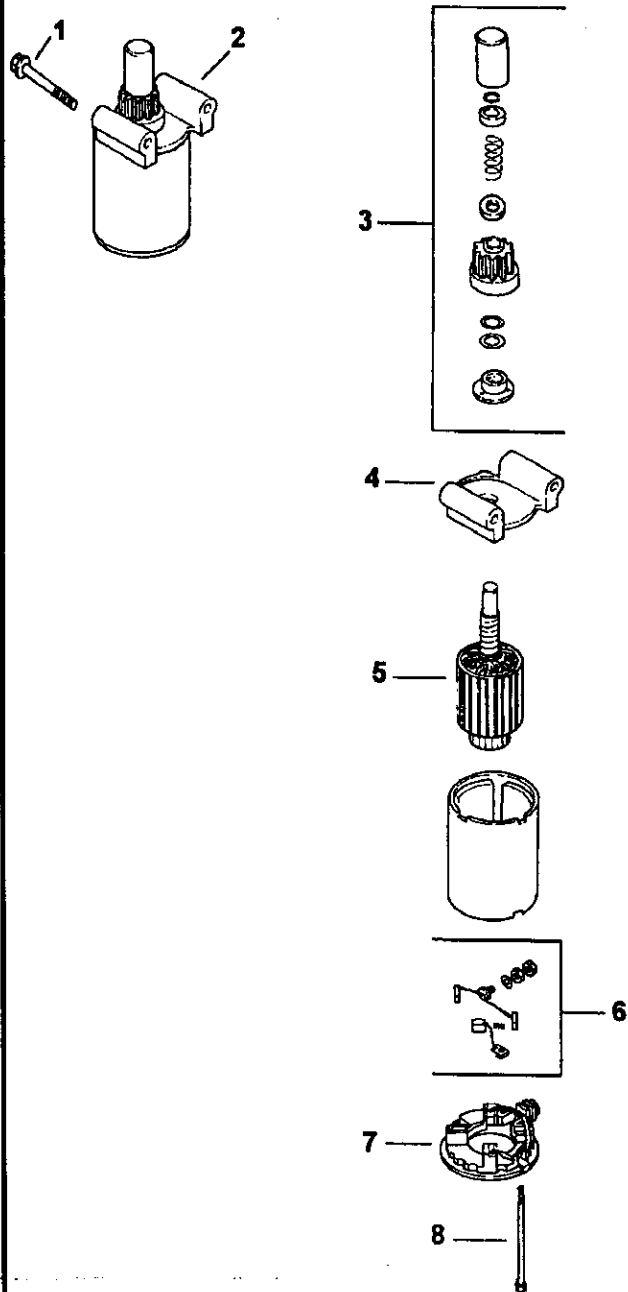

ENGINE CONTROLS

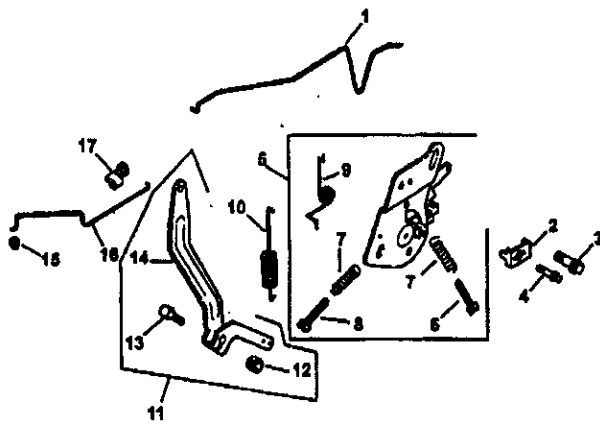

OIL PAN / LUBRICATION

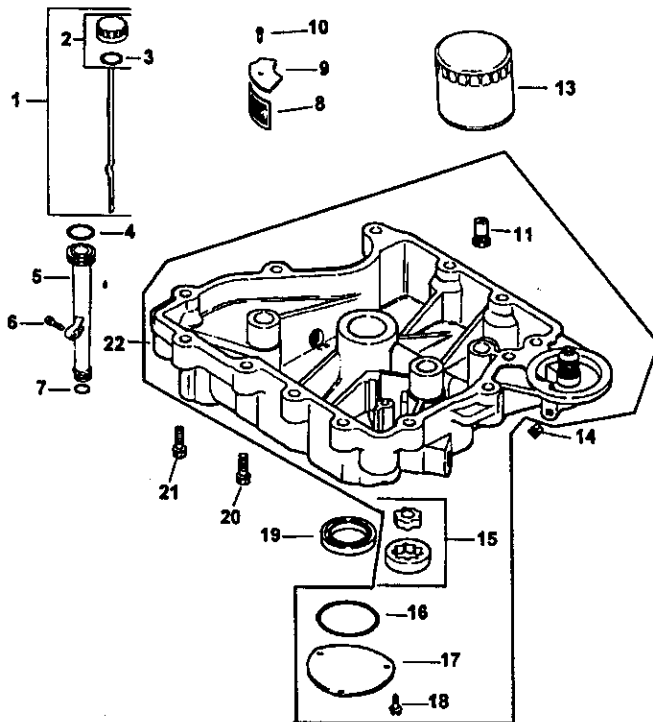

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519

STARTING SYSTEM

| KEY PART NO. NO. | DESCRIPTION |
|---------------------|------------------------------------|
| 1 M-0839070 | Screw, hex. flange M8x1.25x70 (2) |
| 2 25-098-05 | Starter assembly (Includes 3-8) |
| 3 12-755-54 | Kit, drive end |
| 4 12-227-06 | Cap, drive end |
| 5 12-170-05 | Armature |
| 6 12-221-01 | Kit, brush & spring |
| 7 12-227-13 | Cap, commutator end |
| 8 12-211-01 | Bolt, hex. flange 1/4-20x4-5/8 (2) |

OIL PAN/LUBRICATION

| KEY PART NO. NO. | DESCRIPTION |
|---------------------|-------------------------------------|
| 1 12-038-01 | Dipstick assembly (Includes 2-3) |
| 2 25-755-13 | Kit, oil fill cap (Includes 3) |
| 3 12-153-03 | O-Ring, oil fill cap |
| 4 12-153-02 | O-Ring, upper oil fill tube |
| 5 12-123-04 | Tube, oil fill |
| 6 M-0545020 | Screw, hex. flange M5x0.8x20 |
| 7 12-153-01 | O-Ring, lower oil fill tube |
| 8 25-162-07 | Screen, oil pickup |
| 9 12-096-03 | Cover, oil pickup screen |
| 10 M-0545016 | Screw, hex. flange M5x0.8x16 |
| 11 25-462-09 | Valve, oil pressure relief |
| 13 52-050-02 | Filter, oil |
| 14 X-75-10 | Plug, sq. hd. solid 3/8 |
| 15 12-393-01 | Pump, oil assembly |
| 16 12-153-06 | O-Ring, oil pump cover |
| 17 12-096-34 | Cover, oil pump |
| 18 M-0545016 | Screw, hex. flange M5x0.8x16 (3) |
| 19 12-032-03 | Seal, oil (P.T.O. end) |
| 20 24-086-16 | Screw, hex. flange M8x1.25x45 (11) |
| 21 24-086-17 | Screw, hex. flange M8x1.25x45 |
| 22 12-199-53 | Assembly, Pan, oil (Incl. 11,15-18) |

ENGINE CONTROLS


| KEY PART NO. NO. | DESCRIPTION |
|---------------------|--|
| 1 12-079-07 | Linkage, choke |
| 2 12-237-01 | Clamp, cable |
| 3 M-0664020 | Screw, lobed socket M6x1.0x20 (2) |
| 4 24-086-43 | Screw, hex. flange |
| 5 12-536-10 | Control, speed assembly (Includes 6,8,9) |
| 6 M-0443025 | Screw, pan head M4x0.7x25 |
| 7 M-0443020 | Screw, pan head M4x0.7x20 |
| 8 12-089-11 | Spring, choke (2) |
| 9 12-089-23 | Spring, choke return |
| 10 12-089-24 | Spring, governor |
| 11 12-755-83 | Kit, governor lever (Includes 12-14) |
| 12 12-100-07 | Nut, hex flange 1/4 - 20" |
| 13 52-211-04 | Bolt, 1/4 - 20 X 1" |
| 14 12-090-28 | Lever, governor |
| 15 25-158-08 | Bushing, throttle linkage |
| 16 12-079-01 | Linkage, throttle |
| 17 25-158-11 | Bushing, throttle linkage |

REPAIR PARTS


TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519


CRANKSHAFT

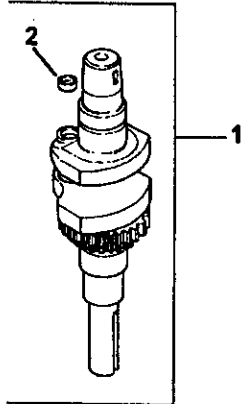

EXHAUST

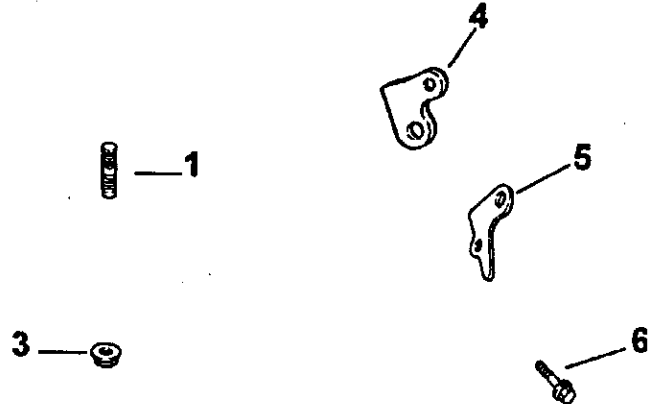

FUEL SYSTEM

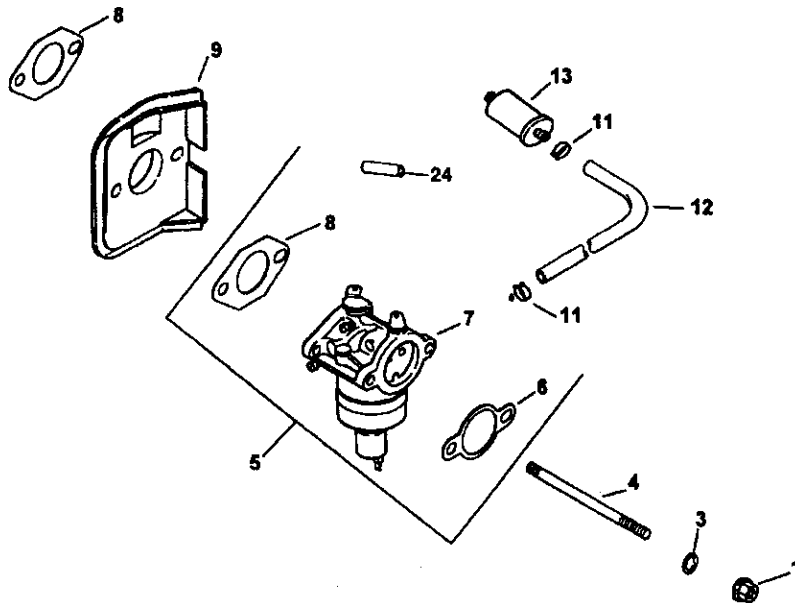

REPAIR PARTS

TRACTOR - - MODEL NUMBER 944.609760

KOHLER ENGINE - MODEL NUMBER CV16S, TYPE NUMBER PS-43519

FUEL SYSTEM

KEY PART NO. NO.

DESCRIPTION

| | | |
|----|-----------|---|
| 1 | M-0641060 | Nut, hex. flange M6x1.0 (2) |
| 3 | X-22-11 | Washer, star 1/4 |
| 4 | M-0629116 | Stud M6x1.0x116 (2) |
| 5 | 12-853-95 | Kit, carburetor w/gasket (Includes 6,7,8 qty 1 12-454-01, 25452-20) |
| 6 | 12-041-02 | Gasket, air cleaner |
| 7 | 12-053-95 | Carburetor assembly (For information only not available separately) |
| 8 | 12-041-01 | Gasket, carburetor (2) |
| 9 | 12-265-04 | Deflector, heat |
| 10 | 47-154-01 | Clip cable |
| 11 | X-426-09 | Clamp, hose (2) |
| 12 | 25-353-10 | Line, fuel 9" |
| 13 | 25-050-02 | Filter, fuel |

NOT ILLUSTRATED

| | |
|-----------|----------------------------------|
| 12-757-02 | Kit, float |
| 12-757-03 | Kit, carburetor repair |
| 12-041-01 | Gasket, carburetor |
| 12-041-02 | Gasket, air cleaner |
| 12-041-05 | Gasket, bowl |
| 12-041-06 | Gasket, bowl screw |
| 12-032-06 | Seal, solenoid |
| 12-757-33 | Kit, solenoid repair |
| 12-041-06 | Gasket, bowl screw |
| 12-454-01 | Tie, wire |
| 25-452-20 | Terminal |
| 12-454-03 | Tie cable |
| M-0561010 | Screw, thread forming M5X0.8X10 |
| M-0645020 | Screw, hex. flange M6X1.0X20 (2) |

CRANKSHAFT

KEY PART NO. NO.

DESCRIPTION

| | | |
|---|-----------|-------------------------|
| 1 | 12-014-37 | Crankshaft (Includes 2) |
| 2 | 12-139-01 | Plug, cup |

EXHAUST


KEY PART NO. NO.

DESCRIPTION

| | | |
|---|-----------|----------------------------------|
| 1 | 25-072-04 | Stud (2) |
| 2 | 12-041-03 | Gasket, exhaust manifold |
| 4 | 12-126-11 | Bracket, muffler |
| 5 | 12-445-06 | Strap, lifting |
| 6 | M-0645025 | Screw, hex. flange M6x1.0x25 (2) |
| | 12-522-18 | Short Block |
| | 12-755-82 | Gasket Set |

SERVICE NOTES

SUGGESTED GUIDE FOR SIGHTING SLOPES FOR SAFE OPERATION

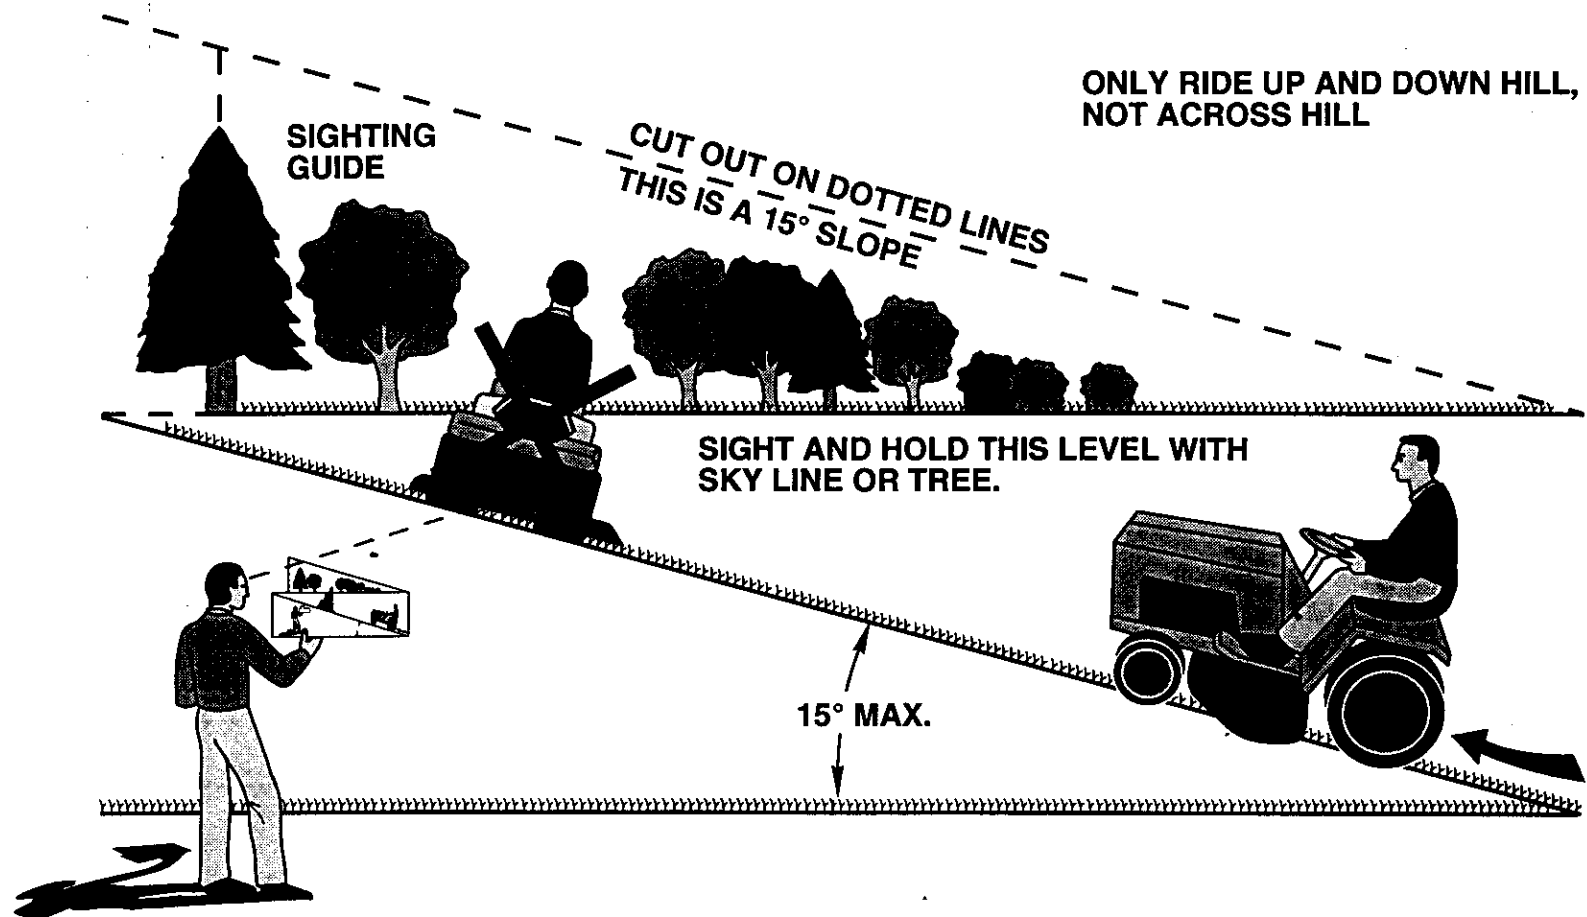

Operate your Tractor up and down the face of slopes (not greater than 15°), never across the face. Make turns gradually to prevent tipping or loss of control. Exercise extreme caution when changing direction on slopes.

SEARS

OWNER'S MANUAL

**MODEL NO.
944.609760**

HOW TO ORDER REPAIR PARTS

CRAFTSMAN®

16.0 HP ELECTRIC START 42" MOWER 6 SPEED TRANSAXLE LAWN TRACTOR

Each tractor has its own model number. Each engine has its own model number.

The model number for your tractor will be found on the model plate located under the seat.

The model number for your engine will be found on the blower housing of the engine.

All parts listed herein may be ordered from any Sears Canada, Inc. Service Centre/Department and most Retail Stores.

WHEN ORDERING REPAIR PARTS, ALWAYS GIVE THE FOLLOWING INFORMATION:

- **PRODUCT - TRACTOR**
- **MODEL NUMBER - 944.609760**
- **ENGINE MODEL NUMBER - CV16S, TYPE NUMBER PS43519**
- **PART NUMBER**
- **PART DESCRIPTION**

Your Sears merchandise has added value when you consider Sears has service units nationwide staffed with Sears trained technicians... professional technicians specifically trained to insure that we meet our pledge to you, we service what we sell.

NEED A PART?

SEARS HAS ACCESS TO OVER 800,000 PARTS
WHETHER IT'S A SPARK PLUG OR LAWNMOWER BLADE.

SEARS PARTS AND SERVICE CAN SUPPLY YOU WITH
TOP QUALITY REPAIR PARTS FOR ALL YOUR PRODUCTS.

JUST CALL ONE OF THE FOLLOWING NUMBERS TO PLACE YOUR
ORDER. IF CALLING LOCALLY:

Regina - 566-5124

Montreal - 333-5740

Toronto - 744-4900

Halifax - 454-2444

Kitchener - 894-7590

Ottawa - 738-4440

Vancouver - 420-8211

ALL OTHER AREAS CALL 1-800-665-4455

Sears Canada, Inc., Toronto, Ontario M5B 2B8